

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann KM 385 CB Kitchen Machine with Blender Attachment User Manual

Bomann KM 385 CB

Bomann KM 385 CB Kitchen Machine with Blender Attachment User Manual

1. INTRODUCTION

Thank you for choosing the Bomann KM 385 CB Kitchen Machine. This appliance is designed to assist you with various kitchen tasks, including mixing, kneading, beating, and blending. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and keep it for future reference. Proper use and maintenance will extend the life of your appliance.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Never operate the appliance with a damaged cord or plug, or if it has malfunctioned or been damaged in any way. Contact authorized service personnel for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only original accessories and attachments provided by the manufacturer.
- Place the appliance on a stable, flat, and dry surface during operation.
- Do not leave the appliance unattended while it is operating.
- Exercise caution when handling sharp blades, especially during cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Bomann KM 385 CB Kitchen Machine:



Figure 1: Bomann KM 385 CB Kitchen Machine with Blender Attachment. This image shows the main unit in white, featuring a stainless steel mixing bowl on the left and a glass blender attachment mounted on top. The control knob for speed adjustment is visible on the side.

Components:

1. Main Unit with Motor Head
2. Stainless Steel Mixing Bowl
3. Splash Guard with Filling Opening
4. Kneading Hook (for heavy doughs)
5. Stirring Whisk (for medium doughs and batters)
6. Beating Whisk (for light mixtures, cream, egg whites)
7. Blender Attachment (glass jug with lid)
8. Speed Control Knob with Pulse Function
9. Release Lever for Motor Head

4. ASSEMBLY AND SETUP

4.1 Before First Use

- Unpack all components and remove any packaging materials.
- Clean all removable parts (mixing bowl, accessories, blender jug) with warm soapy water, rinse thoroughly, and dry completely. Wipe the main unit with a damp cloth.
- Ensure the appliance is placed on a stable, level, and dry surface.

4.2 Attaching the Mixing Bowl and Accessories

1. Press the release lever to lift the motor head.
2. Place the stainless steel mixing bowl into its base, turning it clockwise until it locks securely.
3. Select the appropriate accessory (kneading hook, stirring whisk, or beating whisk) for your task. Insert the accessory into the attachment shaft and turn it slightly until it clicks into place.
4. Lower the motor head by pressing the release lever again until it locks into position.
5. Place the splash guard over the mixing bowl, aligning the opening with the motor head.

4.3 Attaching the Blender

1. Ensure the main unit is unplugged.
2. Remove the cover from the blender drive on top of the main unit.
3. Place the blender jug onto the drive, ensuring it is securely seated and locked.
4. Add ingredients to the blender jug and secure the lid.

5. OPERATING INSTRUCTIONS

The Bomann KM 385 CB features a powerful 1200W motor and continuous electronic speed control, along with a pulse function for short bursts of maximum power.

5.1 Mixing, Kneading, and Beating

1. Ensure the mixing bowl and desired accessory are correctly installed.
2. Add your ingredients to the mixing bowl. Do not overfill.
3. Plug the appliance into a suitable power outlet.
4. Turn the speed control knob to the desired setting. Start with a low speed and gradually increase as needed.
5. For short, powerful bursts, turn the knob to the "Pulse" setting and hold it. Release to stop.
6. When finished, turn the speed control knob to "0" (off) and unplug the appliance.
7. Press the release lever to lift the motor head and remove the accessory and mixing bowl.

5.2 Blending

1. Ensure the blender jug is securely attached to the main unit and the lid is closed.
2. Plug the appliance into a suitable power outlet.
3. Turn the speed control knob to the desired setting for blending. Use the pulse function for crushing ice or short, powerful blending.
4. Do not operate the blender continuously for more than 1 minute. Allow it to cool down if used for extended periods.
5. When finished, turn the speed control knob to "0" (off) and unplug the appliance.
6. Carefully remove the blender jug.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- **Always unplug the appliance before cleaning.**
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse it in water.
- **Mixing Bowl and Accessories:** The stainless steel mixing bowl, kneading hook, stirring whisk, and beating whisk are dishwasher safe. Alternatively, wash them in warm soapy water, rinse, and dry thoroughly.
- **Blender Jug:** Disassemble the blender jug (if possible according to its design) and wash all parts in warm soapy water. The glass jug is generally dishwasher safe. Rinse and dry thoroughly. Exercise extreme caution when handling the blender blades.
- **Splash Guard:** Wash in warm soapy water, rinse, and dry.
- Store the appliance and its accessories in a clean, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; motor head not locked; speed knob not at "0" before starting.	Check power connection; ensure motor head is fully lowered and locked; turn speed knob to "0" then select desired speed.
Unusual noise during operation.	Accessory not properly attached; ingredients too dense; appliance overloaded.	Check accessory attachment; reduce ingredient quantity; ensure recipe consistency is suitable.
Motor stops during operation.	Overload protection activated.	Turn off, unplug, and let cool for 15-20 minutes. Reduce load before restarting.

8. TECHNICAL SPECIFICATIONS

- **Model:** Bomann KM 385 CB
- **Power:** 1200 W
- **Dimensions (L x W x H):** 23.3 x 46 x 33.1 cm
- **Weight:** 7.8 kg
- **Dishwasher Safe Parts:** Mixing bowl, kneading hook, stirring whisk, beating whisk, blender jug (check specific blender design for blades).
- **Power Supply:** 220-240 V~, 50/60 Hz (Standard for EU, assumed as not explicitly stated in data)

9. WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or contact Bomann customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00ONA3CXU>

More documents and user manuals: <https://manuals.plus/>