

Karlsson KA5536WH

Karlsson Alarm Clock Minimal

USER MANUAL

Introduction

Thank you for choosing the Karlsson Alarm Clock Minimal. This analog alarm clock is designed for simplicity and functionality, featuring a silent movement for undisturbed environments. This manual provides comprehensive instructions to ensure proper setup, operation, and maintenance of your device.

Please read this manual thoroughly before using the alarm clock and retain it for future reference.

Setup

1. Battery Installation

The Karlsson Alarm Clock Minimal requires one (1) AA battery (not included) for operation.

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or gently prying it open.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery compartment cover securely.



Image: Back view of the Karlsson Alarm Clock Minimal. This image displays the rear of the clock, highlighting the battery compartment and the control knobs used for setting time and alarm.

2. Placement

Place the alarm clock on a stable, flat surface such as a bedside table, desk, or shelf. Ensure it is away from direct sunlight, extreme temperatures, and high humidity to maintain optimal performance.

Operating Instructions

1. Setting the Time

1. Locate the **Time Setting Knob** on the back of the clock.
2. Rotate this knob clockwise or counter-clockwise until the hour and minute hands indicate the correct current time.

2. Setting the Alarm

1. Locate the **Alarm Setting Knob** on the back of the clock.
2. Rotate this knob until the alarm hand points to your desired alarm time.

3. Activating/Deactivating the Alarm

1. Locate the **Alarm ON/OFF Switch** on the back of the clock.
2. Slide the switch to the 'ON' position to activate the alarm. The alarm will sound at the set time.
3. Slide the switch to the 'OFF' position to deactivate the alarm.



Image: Front view of the Karlsson Alarm Clock Minimal. This image shows the clock face with its minimalist design, hour, minute, and second hands, and the Karlsson brand name.

Silent Movement Feature

This alarm clock is equipped with a silent sweep movement, meaning the second hand moves continuously without a ticking sound. This feature ensures a quiet environment, ideal for bedrooms or quiet study areas.

Maintenance

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

Battery Replacement

Replace the AA battery when the clock hands begin to slow down or the alarm sound weakens. Always

dispose of used batteries responsibly according to local regulations.

General Care

- Avoid dropping the clock or subjecting it to strong impacts.
- Keep the clock away from strong magnetic fields, which can affect timekeeping accuracy.
- Do not disassemble the clock; this will void any potential warranty.

Troubleshooting

Problem	Possible Cause	Solution
Clock not running or running slowly.	Battery is dead or incorrectly installed.	Replace the AA battery, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or battery is low.	Ensure the Alarm ON/OFF switch is in the 'ON' position. Replace battery if needed.
Time is inaccurate.	Low battery or external interference.	Replace battery. Move clock away from strong magnetic fields or electronic devices.

Specifications

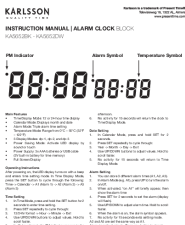 
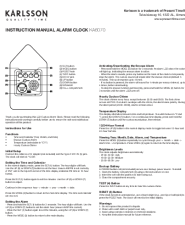 



Model: KA5536WH
Brand: Karlsson
Color: White
Display Type: Analog
Special Feature: Silent Clock Movement
Product Dimensions: 1.57"W x 3.94"H (4 x 10 x 10 cm)
Power Source: 1 x AA Battery (not included)
Mounting Type: Tabletop
Item Weight: Approximately 7.36 ounces (208.6 grams)
Watch Movement: Quartz

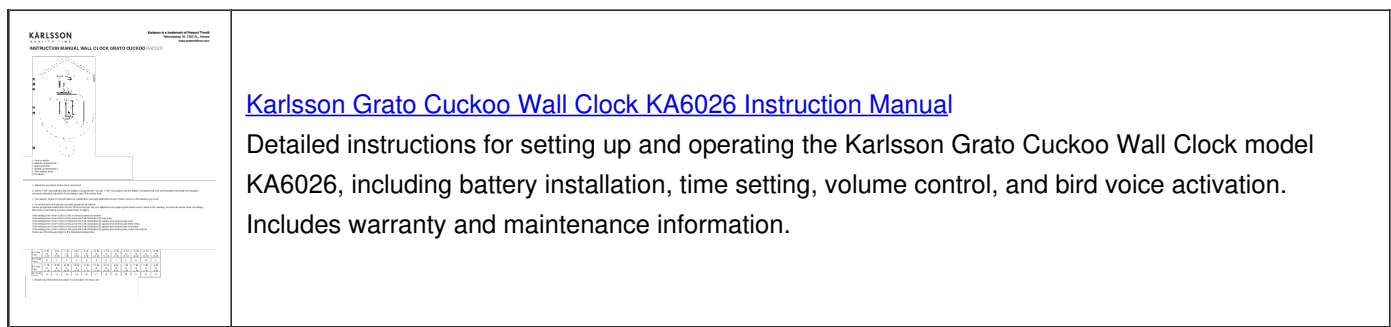 
Warranty and Support

For information regarding warranty coverage and customer support, please refer to the documentation included with your purchase or visit the official Karlsson website. Keep your proof of purchase for any warranty claims.

Manufacturer: Present Time

Official Brand Store: [Karlsson Clocks on Amazon](#)

	<p>Karlsson KA5652BK/KA5652DW Block Alarm Clock: Instruction Manual & Features</p> <p>Official instruction manual for the Karlsson KA5652BK and KA5652DW Block alarm clock. Learn how to set time, date, alarms, use temperature display, and power saving features.</p>
	<p>Karlsson KA6070 LED Cuckoo Alarm Clock Instruction Manual</p> <p>Detailed instructions and warnings for the Karlsson KA6070 LED Cuckoo Alarm Clock, covering setup, functions, alarm settings, temperature, and maintenance.</p>
	<p>Karlsson KA6039 Alarm Clock: User Manual and Features</p> <p>Comprehensive guide to the Karlsson KA6039 alarm clock, covering product specifications, features like display modes, alarms, brightness settings, sound control, and usage instructions. Includes setup, maintenance, and troubleshooting tips.</p>
	<p>Karlsson KA6096-KA6100 Clock Instruction Manual: Silent Period Setup & Maintenance</p> <p>Detailed instructions for setting the silent period and maintaining your Karlsson KA6096, KA6097, KA6098, KA6099, and KA6100 clocks. Learn how to customize alarm times and battery requirements.</p>
	<p>Karlsson Clock Instruction Manual: Setting Silent Mode</p> <p>Comprehensive instructions for setting the silent mode on Karlsson clocks (models KA6096, KA6097, KA6098, KA6099, KA6100). Learn how to customize the 8-hour silent period and battery requirements.</p>



Documents - Karlsson – KA5536WH



[\[pdf\]](#) User Manual

IM Alarm clocks 2024 indd KA5536WH presenttime 283 1743155581 |||

Karlsson is a trademark of Present Time Televisieweg 16, 1322 AL, Almere
www.presenttime.com INSTRUCTION MANUAL ALARM CLOCK EN To set the time,
turn the time set knob to the correct time. To set the alarm, turn the alarm set knob /
to the desired time. The alarm function only work...

lang:nl score:19 filesize: 635.16 K page_count: 2 document date: 2024-12-12