

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GunVault](#) /

› [GunVault AR1000 AR Vault Standard Instruction Manual](#)

GunVault AR1000

GunVault AR1000 AR Vault Standard Instruction Manual

Model: AR1000

INTRODUCTION

The GunVault AR1000 AR Vault Standard is designed to provide secure and rapid access to your firearm. It features a tamper-resistant door, a no-eyes keypad for quick entry, and predrilled holes for convenient wall mounting. This vault is specifically designed to fit a standard .223/5.56 pattern rifle with a Delta ring forearm attachment, allowing for discreet storage in locations such as a closet without occupying excessive space.



Image: The GunVault AR1000 AR Vault Standard in its closed position, showcasing the keypad and compact design.

SETUP

1. Battery Installation

The GunVault AR1000 requires one 9V battery for operation. Ensure the battery is new and correctly oriented.

1. Locate the battery compartment, typically on the underside or inside the vault door.
2. Open the battery compartment cover.
3. Insert one 9V battery, ensuring the positive (+) and negative (-) terminals align with the markings in the compartment.
4. Close the battery compartment cover securely.

2. Mounting the Vault

The AR1000 is designed for wall mounting to provide secure and accessible storage. Mounting hardware is included.

1. Choose a suitable location for mounting, such as a wall stud, to ensure maximum security.
2. Position the vault against the wall at the desired height.
3. Mark the locations for the predrilled mounting holes on the wall.
4. Drill pilot holes if necessary, according to the type of wall material and mounting hardware.
5. Secure the vault to the wall using the provided mounting hardware. Ensure it is firmly attached and does not wobble.



Image: The rear view of the GunVault AR1000, highlighting the predrilled holes for wall mounting.

OPERATING INSTRUCTIONS

1. Programming the Keypad

The AR1000 features a "no-eyes" keypad for quick and discreet access. You will need to set your personal access code.

1. With the vault open, locate the programming button (refer to the internal diagram if available).
2. Press and release the programming button. The indicator light should illuminate.
3. Enter your desired access code using the keypad buttons. Codes typically consist of 3 to 6 digits.
4. Press the programming button again to confirm your new code. The indicator light should flash to confirm successful programming.
5. Test your new code with the vault open before closing it to ensure it functions correctly.



Image: A hand demonstrating the use of the "no-eyes" keypad on the GunVault AR1000 for quick access.

2. Opening the Vault

- **Using the Keypad:** Enter your programmed access code on the keypad. The vault door should release, allowing you to open it.
- **Using the Override Key:** In case of battery failure or forgotten code, insert the backup override key into the keyhole and turn it to unlock the vault.

3. Storing Your Rifle

The AR1000 is designed to securely hold a standard .223/5.56 pattern rifle with a Delta ring forearm attachment.

1. Ensure the rifle is unloaded and safe before placing it in the vault.
2. Carefully slide the barrel of the rifle through the designated opening in the vault.
3. Position the rifle so that it rests securely within the internal padding, ensuring the Delta ring forearm attachment aligns properly.
4. Close the vault door firmly until it latches.



Image: The GunVault AR1000 with a rifle partially inserted, demonstrating how the barrel fits into the vault's opening.



Image: The GunVault AR1000 open, showing a rifle securely stored within its padded interior.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the vault with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or keypad.
- **Battery Replacement:** Replace the 9V battery annually, or immediately if the keypad indicator light becomes dim or the vault fails to open with the code.
- **Keypad Care:** Keep the keypad free of dust and debris. Do not force buttons.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vault does not open with code.	Low or dead battery; incorrect code entered; keypad malfunction.	Replace the 9V battery. Re-enter the code carefully. Try reprogramming the code. Use the override key.
Keypad indicator light is dim or not illuminating.	Low battery.	Replace the 9V battery immediately.

Problem	Possible Cause	Solution
Rifle does not fit inside.	Rifle type or accessories are incompatible with vault dimensions.	Ensure your rifle is a standard .223/5.56 pattern with a Delta ring forearm attachment. Check for oversized optics or accessories.
Vault door does not close properly.	Obstruction; rifle not positioned correctly.	Check for any items blocking the door. Re-position the rifle to ensure it sits flush within the vault.

SPECIFICATIONS

Feature	Detail
Brand	GunVault
Model Number	AR1000
Product Dimensions	4"D x 11"W x 4"H
Lock Type	Keypad with Key Override
Color	Black
Capacity	7.4 Quarts
Material	Alloy Steel
Mounting Type	Wall Mount
Included Components	Safe, Instructions, Mounting hardware
Item Weight	10 Pounds
Alarm	Anti-theft
Water Resistance Level	Not Water Resistant
Chamber Width	11 Inches
Batteries Required?	Yes (one 9V)

WARRANTY AND SUPPORT

Warranty Information

The GunVault AR1000 AR Vault Standard comes with a **2 Year Limited Repair or Replace Warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact GunVault customer support. Refer to the official GunVault website or product packaging for the most current contact information.

You can visit the [GunVault Store on Amazon](#) for more product information.



© 2024 GunVault. All rights reserved.