

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [Daewoo DEAW-DOT-1658 23-Liter Convection/Toaster Oven User Manual](#)

Daewoo DEAW-DOT-1658

Daewoo DEAW-DOT-1658 23-Liter Convection/Toaster Oven User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Daewoo DEAW-DOT-1658 23-Liter Convection/Toaster Oven. Please read this manual thoroughly before using the appliance and retain it for future reference. This appliance is designed for household use only and operates on 220-240 volts at 50Hz. It is not intended for use in regions with different electrical specifications, such as USA/Canada.



Figure 1: Front view of the Daewoo DEAW-DOT-1658 Convection/Toaster Oven.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Daewoo Convection/Toaster Oven:

- **Oven Body:** The main housing of the appliance.
- **Dropdown Door:** Tempered glass door for viewing and accessing the oven interior.
- **Control Knobs:** For temperature, function, and timer settings.
- **Power Indicator Light:** Illuminates when the oven is operating.
- **Baking Tray:** For baking and roasting.
- **Tray Handle:** For safely inserting and removing the baking tray.
- **Wire Rack:** For grilling and supporting bakeware.
- **Crumb Tray:** Removable tray at the bottom to collect crumbs for easy cleaning.



Figure 2: Side view highlighting the control panel and ventilation.

4. SETUP

- 1. Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any protective films or stickers.
- 2. Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
- 3. Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash

the baking tray, wire rack, and crumb tray in warm, soapy water, rinse thoroughly, and dry completely.

4. **First Use (Burn-in):** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature setting. Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during initial use.
5. **Power Connection:** Ensure your electrical outlet matches the appliance's voltage (220-240V, 50Hz). Plug the power cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

Your Daewoo Convection/Toaster Oven features knob controls for easy operation.

5.1 Control Panel Overview

The oven typically has three control knobs:

- **Top Knob (Temperature Control):** Used to set the desired cooking temperature.
- **Middle Knob (Function Selector):** Used to select cooking modes (e.g., Bake, Toast, Grill, Convection).
- **Bottom Knob (Timer Control):** Used to set the cooking duration.

5.2 General Operation

1. **Prepare Food:** Place food on the baking tray or wire rack.
2. **Insert Tray:** Carefully slide the tray or rack into the desired rack position inside the oven. Close the oven door.
3. **Set Temperature:** Turn the Temperature Control knob to the desired temperature.
4. **Select Function:** Turn the Function Selector knob to the desired cooking mode (e.g., Bake, Grill).
5. **Set Timer:** Turn the Timer Control knob to the desired cooking time. The power indicator light will illuminate, indicating the oven is operating.
6. **Cooking Completion:** When the set time elapses, the oven will automatically turn off, and a bell will sound.
7. **Remove Food:** Using oven mitts and the tray handle, carefully remove the cooked food from the oven.

Note: For optimal results, preheat the oven for 5-10 minutes before placing food inside, especially for baking.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your oven.

1. **Unplug and Cool:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Remove the crumb tray and discard accumulated crumbs. Wash the tray in warm, soapy water, rinse, and dry thoroughly.
3. **Accessories:** Wash the baking tray, wire rack, and tray handle in warm, soapy water. For stubborn stains, use a non-abrasive scrubber. Rinse and dry completely.
4. **Interior:** Wipe the interior walls and glass door with a damp cloth and mild detergent. For baked-on food, a non-abrasive cleaner designed for oven interiors can be used. Avoid harsh chemicals or abrasive pads that could damage the surface.

- 5. Exterior:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or scourers.
- 6. Do Not Immers:** Never immerse the main oven body, cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--|--|--|
| Oven does not turn on. | Not plugged in; power outage; timer not set. | Ensure the power cord is securely plugged into a working outlet. Check your household's circuit breaker. Turn the timer knob to the desired cooking time. |
| Food not cooking evenly. | Incorrect temperature/time setting; food placed incorrectly; oven not preheated. | Adjust temperature and time settings. Ensure food is centered and not overcrowding the oven. Preheat the oven before cooking. |
| Smoke or burning smell during operation. | Food spills; residue on heating elements; first use burn-in. | Unplug and allow to cool. Clean the interior thoroughly, especially the crumb tray and heating elements. A slight smell is normal during first use. If excessive, discontinue use and contact support. |
| Door does not close properly. | Obstruction; door hinge issue. | Check for any food debris or objects blocking the door. If the issue persists, contact customer support. |

If the problem persists after attempting these solutions, please contact Daewoo customer support.

8. SPECIFICATIONS

| Feature | Detail |
|------------------|----------------------------|
| Brand | Daewoo |
| Model Number | DEAW-DOT-1658 |
| Capacity | 23 Liters |
| Power | 1500 Watts |
| Voltage | 220-240 Volts |
| Frequency | 50 Hz |
| Color | Black |
| Special Features | Temperature Control, Timer |
| Control Type | Knob |
| Door Style | Dropdown Door |



| Feature | Detail |
|-------------------------|---|
| Included Components | Crumb Tray, Wire Rack, Baking Tray, Tray Handle |
| Item Dimensions (LxWxH) | 45.7 x 30.5 x 27.9 Centimeters |
| Item Weight | 2 kg 490 g |


9. WARRANTY AND SUPPORT

Specific warranty information for the Daewoo DEAW-DOT-1658 Convection/Toaster Oven is not provided in this manual. Please refer to the warranty card included with your product or visit the official Daewoo website for detailed warranty terms and conditions.

For technical support, service, or inquiries, please contact Daewoo customer service through their official channels. Keep your purchase receipt and product model number (DEAW-DOT-1658) handy when contacting support.


Related Documents - DEAW-DOT-1658
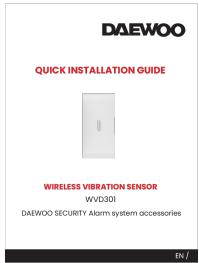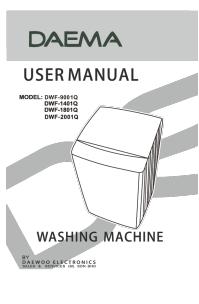
| | |
|---|---|
|  | <p>Daewoo WVD301 Wireless Vibration Sensor Quick Installation Guide</p> <p>This guide provides quick installation instructions for the Daewoo WVD301 Wireless Vibration Sensor. Learn about its product description, technical specifications, installation steps, LED indicators, maintenance, and compliance standards.</p> |
|  | <p>DAEWOO KOR-6115 & KOR-61151 Microwave Oven Service Manual</p> <p>Detailed service manual for DAEWOO KOR-6115 and KOR-61151 microwave ovens, covering specifications, installation, operation, troubleshooting, and parts lists for qualified service personnel.</p> |
|  | <p>Daewoo Washing Machine User Manual - DWF-9001Q, DWF-1401Q, DWF-1801Q, DWF-2001Q</p> <p>Comprehensive user manual for Daewoo washing machines, models DWF-9001Q, DWF-1401Q, DWF-1801Q, and DWF-2001Q. Covers safety precautions, part identification, specifications, installation, operation, troubleshooting, and care.</p> |

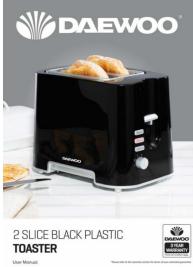


[DAEWOO 2 Slice Black Plastic Toaster User Manual](#)

User manual for the DAEWOO 2 Slice Black Plastic Toaster (Model SDA1687). Provides safety instructions, operating guides, troubleshooting tips, and warranty information.

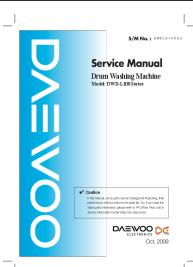

[Daewoo DWD-L100 Series Drum Washing Machine Service Manual](#)

This service manual provides detailed technical information, parts lists, specifications, and troubleshooting guidance for the Daewoo DWD-L100 Series drum washing machines. It is intended for service technicians and maintenance personnel.

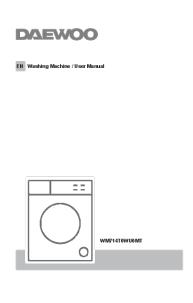

[DAEWOO WM714T0WU0MT Washing Machine User Manual](#)

This user manual provides essential safety information, operating instructions, and maintenance guidelines for the DAEWOO WM714T0WU0MT washing machine. Learn how to install, use, and troubleshoot your appliance effectively.