

Bosch MUM57B22

Bosch Styline Food Processor MUM57B22 Instruction Manual

Model: MUM57B22

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using your Bosch Styline Food Processor MUM57B22. Keep this manual for future reference. Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Always disconnect the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils away from moving parts during operation.
- Ensure all attachments are correctly assembled and locked into place before use.
- This appliance is equipped with an electronic safety shut-off and overheating protection. If the appliance stops unexpectedly, allow it to cool down before restarting.
- Do not use the appliance if the power cord or plug is damaged.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Bosch Styline Food Processor MUM57B22 is a versatile kitchen machine designed for various food preparation tasks. It features a powerful 900-watt motor and a unique 3D MultiMotion Drive mixing system for optimal results.



Figure 1: Bosch Styline Food Processor MUM57B22 main unit with stainless steel bowl and various attachments.

Key Components:

- **Motor Unit:** The main body housing the 900-watt motor and electronic speed control.
- **Multi-function Arm:** Pivoting arm for attaching various tools, featuring Easy Arm Lift for effortless movement.
- **Stainless Steel Mixing Bowl:** 3.9-liter capacity bowl for mixing and kneading.

- **Transparent Lid:** With a filling opening for adding ingredients during operation.
- **Continuous Shredder:** Attachment for slicing, grating, and shredding, includes 3 discs (5 functions) and a professional reversible Supercut disc.
- **Professional Pastry Set:** Includes a flexible stirring whisk with silicone edge, a professional beating whisk (height adjustable, full metal), and a kneading hook with gear protector.
- **Integrated Multi-mill:** Combines a grinder and chopper for various tasks.
- **Accessory Bag:** Dark grey bag for convenient storage of smaller attachments.

3. SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food as described in the 'Cleaning and Maintenance' section.

1. **Positioning the Appliance:** Place the motor unit on a clean, stable, and level surface. Ensure the rubber suction feet are firmly attached to prevent movement during operation.
2. **Attaching the Mixing Bowl:** Place the stainless steel mixing bowl onto the base of the motor unit and turn it clockwise until it locks securely into place.
3. **Raising the Multi-function Arm:** Press the Easy Arm Lift button to release and raise the multi-function arm.
4. **Attaching Tools (e.g., Pastry Set):** Select the desired tool (e.g., kneading hook, whisk). Align the tool with the drive shaft on the multi-function arm and push it upwards until it clicks into place.
5. **Lowering the Multi-function Arm:** Press the Easy Arm Lift button again and gently lower the arm until it locks into its operating position.
6. **Attaching the Lid:** Place the transparent lid onto the mixing bowl, ensuring the filling opening is positioned correctly. Turn the lid clockwise until it is securely fastened.

For specific attachments like the continuous shredder or multi-mill, refer to their individual assembly instructions provided in the recipe booklet.

4. OPERATING INSTRUCTIONS

The Bosch Styline Food Processor offers electronic speed control and three motor settings for optimal power transmission, adapting to various tasks.

1. **Connecting to Power:** Plug the appliance into a suitable power outlet. The LED display will indicate the operating mode.
2. **Adding Ingredients:** Add ingredients to the mixing bowl. For continuous shredder or multi-mill, add ingredients through the designated openings.
3. **Selecting Speed:** Use the electronic speed control dial to select the desired speed setting. Start with a lower speed and gradually increase if needed. The appliance features a smooth start-up to prevent splashing.
4. **Operation:** Allow the appliance to process ingredients until the desired consistency is achieved. Monitor the process through the transparent lid.
5. **Stopping the Appliance:** Turn the speed control dial to the 'Off' position. Unplug the appliance from the power supply.
6. **Removing Tools and Bowl:** Press the Easy Arm Lift button to raise the multi-function arm. Carefully remove the attachment, then unlock and remove the mixing bowl.

The automatic tool parking feature ensures tools stop in a position that facilitates easy bowl filling and removal.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your food processor.

- **Before Cleaning:** Always unplug the appliance from the power supply.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or place it under running water.
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl and most attachments (e.g., whisks, kneading hook, shredder discs) should be **hand washed** with warm soapy water. Rinse thoroughly and dry immediately.
- **Dishwasher Safety:** This item is **not dishwasher safe**. Hand washing is recommended for all components to maintain their quality and performance.
- **Storage:** Store the cleaned and dried appliance and its accessories in a dry place. Use the dark grey accessory bag for smaller parts. The automatic cable rewind feature helps keep the power cord tidy.

6. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; safety lock not engaged; overheating.	Check power connection; ensure multi-function arm and bowl are correctly locked; allow appliance to cool down.
Motor stops during operation.	Overload; overheating protection activated.	Reduce load; turn off and unplug, allow to cool for 30 minutes before restarting.
Attachments not fitting correctly.	Incorrect alignment; debris in connection.	Ensure correct alignment with drive shaft; clean connection points.

If the problem persists after following these steps, please contact Bosch customer support.

7. SPECIFICATIONS

- Brand:** Bosch
- Model Name:** Bosch Kitchen Machine Styline MUM57B22
- Product Type:** Full-size Food Processor
- Power:** 900 Watt
- Power Source:** Corded Electric
- Bowl Capacity:** 3.9 Liters
- Bowl Material:** Stainless Steel
- Blade Material:** Stainless Steel
- Color:** Black and Silver
- Special Features:** Safety Lock, Electronic Speed Control, Easy Arm Lift, 3D MultiMotion Drive
- Item Weight:** Approximately 20.61 pounds (9.35 kg)
- Care Instructions:** Hand Wash
- Dishwasher Safe:** No
- Included Components:** Lid, Professional Pastry Set, Continuous Shredder, Integrated Multi-mill, Accessory Bag

8. WARRANTY AND SUPPORT

Your Bosch Styline Food Processor MUM57B22 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage.

For technical assistance, spare parts, or further information, please visit the official Bosch website or contact Bosch customer service in your region. Contact details can typically be found on the Bosch website or in your product documentation.

Online Support: www.bosch-home.com

© 2024 Bosch. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question