

[Manuals.plus](#) /

› [Toastmaster](#) /

› Instruction Manual for Toastmaster Bread Machine Manual (Model: 1152U) Reprint

Toastmaster 1152U

Toastmaster Bread Machine Instruction Manual

Model: 1152U

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Toastmaster Bread Machine, Model 1152U. Please read all instructions carefully before using the appliance to ensure proper function and to prevent damage or injury. Keep this manual for future reference.

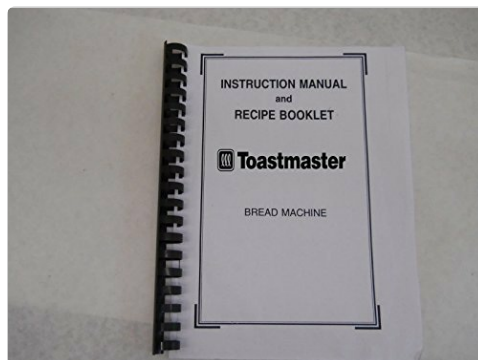


Image: Front cover of the Toastmaster Bread Machine Instruction Manual and Recipe Booklet. The cover is white with a black border, featuring the text "INSTRUCTION MANUAL and RECIPE BOOKLET" at the top, followed by the Toastmaster logo and "Toastmaster" in bold. Below that, it reads "BREAD MACHINE". The manual is spiral-bound on the left side with a black plastic comb binding.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP

Before First Use

1. Unpack the bread machine and remove all packaging materials.
2. Wipe the exterior of the bread machine with a damp cloth.
3. Wash the bread pan and kneading paddle with warm, soapy water. Rinse thoroughly and dry completely.
4. Ensure all parts are dry before reassembling.

Placement

Place the bread machine on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.

OPERATING INSTRUCTIONS

Adding Ingredients

Always add ingredients in the order specified by your recipe, typically liquids first, then dry ingredients, and finally yeast. Ensure the kneading paddle is properly installed in the bread pan before adding ingredients.

Selecting a Program

The Toastmaster Bread Machine Model 1152U features multiple pre-programmed cycles for various bread types. Refer to the control panel and the recipe section for specific program recommendations.

- **Basic:** For white and mixed breads.
- **Whole Wheat:** For whole wheat breads.
- **French:** For light breads with a crispy crust.
- **Sweet:** For breads with high sugar content.
- **Dough:** Prepares dough for baking in a conventional oven.
- **Bake:** For baking pre-made dough or for additional baking time.

Starting the Cycle

1. Place the bread pan with ingredients into the bread machine.
2. Close the lid securely.
3. Plug the power cord into a grounded electrical outlet.
4. Select the desired program using the "Menu" button.
5. Choose the loaf size and crust color settings if applicable.

6. Press the "Start/Stop" button to begin the cycle.

The machine will automatically perform kneading, rising, and baking stages. A beeping sound may indicate when to add additional ingredients (e.g., fruits, nuts) during the kneading cycle.

MAINTENANCE AND CLEANING

Cleaning the Bread Pan and Kneading Paddle

After each use, allow the bread pan and kneading paddle to cool completely. Fill the bread pan with warm water and a small amount of dish soap. Let it soak for 10-15 minutes to loosen any stuck-on dough. Use a soft sponge or cloth to clean. Do not use abrasive cleaners or metal utensils, as these can damage the non-stick coating. Rinse thoroughly and dry completely before storage.

Cleaning the Exterior

Wipe the exterior of the bread machine with a soft, damp cloth. Do not immerse the appliance in water or any other liquid. Ensure the machine is unplugged and cool before cleaning.

Storage

Store the bread machine in a clean, dry place when not in use. Ensure the bread pan and kneading paddle are clean and dry before storing them inside the machine.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bread does not rise	Yeast is old or inactive; incorrect ingredient measurements; water too hot or cold.	Check yeast expiration date; use fresh yeast; measure ingredients precisely; use water at recommended temperature (around 105-115°F / 40-46°C).
Bread collapses during baking	Too much liquid; too much yeast; high humidity.	Reduce liquid slightly; reduce yeast slightly; adjust recipe for high humidity.
Bread is too dense	Not enough liquid; too much flour; yeast inactive.	Increase liquid slightly; ensure flour is measured correctly (spooned and leveled); check yeast activity.
Kneading paddle stuck in bread	Common occurrence.	Allow bread to cool slightly, then carefully remove the paddle using a non-abrasive tool. Some users remove the paddle during the second rise cycle.

SPECIFICATIONS

Model: 1152U

Power: Standard Household Current

Loaf Sizes: Multiple loaf sizes supported

Crust Settings: Light, Medium, Dark

Programs: Basic, Whole Wheat, French, Sweet, Dough, Bake, etc.

WARRANTY AND SUPPORT

For information regarding product warranty, service, or replacement parts for your Toastmaster Bread Machine Model 1152U, please refer to the original warranty card included with your appliance or contact Toastmaster customer support directly. This manual is a reprint and does not include warranty information for the appliance itself.
For support related to this manual reprint, please contact the vendor from whom you purchased this document.

© 2024 Toastmaster. All rights reserved.
This manual is a reprint for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question