

[Manuals.plus](#) /

› [Toastmaster](#) /

› Instruction Manual for Toastmaster Bread Machine Manual (Model: 1155) Reprint


Toastmaster 1155

Instruction Manual and Recipe Booklet

FOR TOASTMASTER BREAD MACHINE MODEL 1155

INTRODUCTION

Welcome to the comprehensive instruction manual for your Toastmaster Bread Machine, Model 1155. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your bread machine. Please read this manual thoroughly before first use to ensure optimal performance and longevity of your appliance. This particular manual is a high-quality reprint, designed to provide clear and readable instructions for users of the original Toastmaster Model 1155 bread machine.

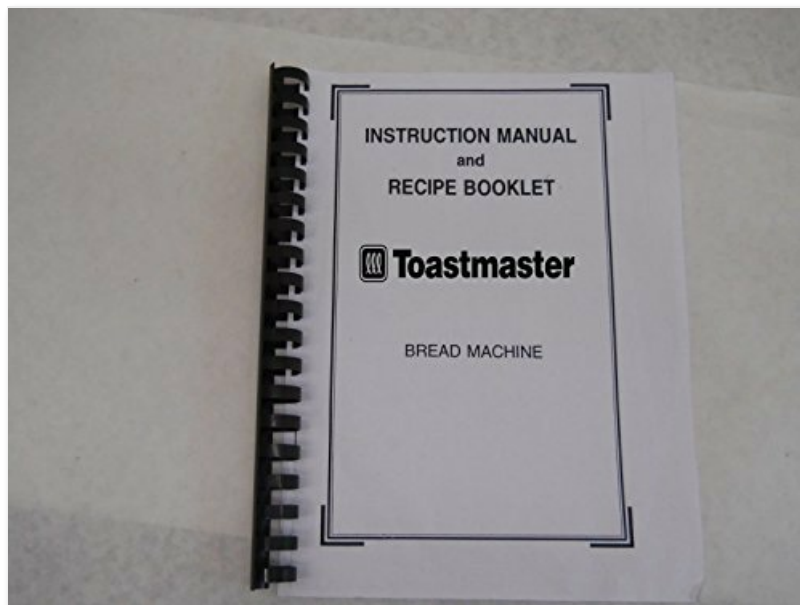

This image displays the front cover of the reprinted instruction manual and recipe booklet for the Toastmaster Bread Machine. The cover is white with black text, featuring the Toastmaster logo and the title 'INSTRUCTION MANUAL and RECIPE BOOKLET' and 'BREAD MACHINE'. The manual is spiral-bound on the left side, indicating its format.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the bread machine.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or bread machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Toastmaster Bread Machine Model 1155 is designed to simplify the bread-making process, allowing you to enjoy fresh, homemade bread with minimal effort. Familiarize yourself with the main components of your bread machine:

- **Lid:** Hinged lid with a viewing window.
- **Control Panel:** Features buttons for program selection, crust color, loaf size, and start/stop.
- **Baking Pan:** Removable non-stick pan for mixing and baking.
- **Kneading Paddle:** Detachable paddle located inside the baking pan.
- **Heating Element:** Located at the base of the machine, beneath the baking pan.
- **Measuring Cup and Spoon:** Included accessories for precise ingredient measurement.

SETUP

1. **Unpacking:** Carefully remove the bread machine and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the bread machine with a damp cloth. Wash the baking pan and kneading paddle with warm, soapy water, rinse thoroughly, and dry completely. Do not immerse the main unit in water.
3. **Placement:** Place the bread machine on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance.

OPERATING INSTRUCTIONS

Basic Bread Making Steps:

1. **Insert Kneading Paddle:** Place the kneading paddle onto the shaft inside the baking pan.
2. **Add Ingredients:** Add ingredients to the baking pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last and separate from liquids/salt). Ensure accurate measurements.

3. **Place Pan in Machine:** Insert the baking pan into the bread machine, pressing down firmly until it clicks into place. Close the lid.
4. **Select Program:** Use the control panel to select the desired program (e.g., Basic, Whole Wheat, French). Refer to the recipe booklet for recommended programs.
5. **Select Loaf Size and Crust Color:** Adjust loaf size (e.g., 1.5 lb, 2 lb) and crust color (light, medium, dark) according to your preference and recipe.
6. **Start Cycle:** Press the START/STOP button to begin the bread-making cycle. The machine will automatically mix, knead, rise, and bake.
7. **Remove Bread:** Once the cycle is complete and the "End" signal sounds, unplug the machine. Carefully remove the hot baking pan using oven mitts. Invert the pan to release the bread onto a wire rack to cool.
8. **Remove Kneading Paddle:** If the kneading paddle remains embedded in the bread, carefully remove it using a non-metallic utensil after the bread has cooled slightly.

Program Functions:

Program	Description
Basic	For white and mixed breads, primarily using basic bread flour.
Whole Wheat	For breads made with a significant proportion of whole wheat flour.
French	For light breads with a crispy crust, typically without butter or milk.
Sweet	For breads with high sugar, fats, and proteins.
Dough	Prepares dough for rolls, pizza, or other baked goods without baking.
Jam	For making homemade jams and marmalades.
Bake	For baking pre-prepared dough or for additional baking time.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your Toastmaster Bread Machine.

- **Before Cleaning:** Always unplug the bread machine from the power outlet and allow it to cool completely before cleaning.
- **Baking Pan and Kneading Paddle:** Wash these parts with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely. These parts are generally not dishwasher safe.
- **Exterior:** Wipe the exterior of the bread machine with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Interior:** Use a soft, damp cloth to wipe the interior of the baking chamber. Remove any crumbs or flour residue.
- **Lid:** Clean the lid and viewing window with a damp cloth.
- **Storage:** Store the bread machine in a clean, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your Toastmaster Bread Machine, refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt, not enough sugar.	Check yeast freshness, use lukewarm water (105-115°F), ensure correct ingredient measurements.
Bread collapses during baking	Too much liquid, too much yeast, high humidity.	Reduce liquid slightly, reduce yeast, ensure proper ingredient balance.
Bread is too dense or heavy	Not enough liquid, too much flour, old yeast.	Increase liquid slightly, ensure accurate flour measurement (spoon and level), use fresh yeast.
Kneading paddle stuck in bread	Common occurrence.	Allow bread to cool slightly, then carefully remove the paddle with a non-metallic utensil.
Machine not starting	Not plugged in, lid not closed, program not selected.	Check power connection, ensure lid is securely closed, select a program and press START.

SPECIFICATIONS

While specific technical specifications for the Toastmaster Bread Machine Model 1155 may vary slightly by production batch, typical specifications for this model include:

- **Model:** 1155
- **Power:** 600-700 Watts (typical for bread machines of this era)
- **Voltage:** 120V AC, 60Hz (standard for North America)
- **Loaf Sizes:** 1.5 lb, 2 lb
- **Programs:** Multiple pre-programmed cycles (e.g., Basic, Whole Wheat, French, Dough, Jam, Bake)
- **Crust Settings:** Light, Medium, Dark
- **Dimensions:** Approximately 14" H x 10" W x 13" D (dimensions are illustrative)
- **Weight:** Approximately 12-15 lbs (weight is illustrative)

WARRANTY AND SUPPORT

This manual is a reprint and does not include specific warranty information for the original Toastmaster Bread Machine Model 1155, as the original product is no longer manufactured. For support regarding the operation of your vintage Toastmaster bread machine, it is recommended to consult online forums, vintage appliance communities, or independent repair services.

For inquiries regarding this specific reprint manual, please refer to the seller or publisher from whom it was acquired.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00OQUN0M0>

More documents and user manuals: <https://manuals.plus/>