



Manuals.plus /

- › OSTENT /
- › OSTENT Wired Analog Controller User Manual

## OSTENT Wired Analog Controller

# OSTENT Wired Analog Controller User Manual

Model: Wired Analog Controller for PS1/PS2/PSX

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your OSTENT Wired Analog Controller. This controller is designed to be compatible with Sony PlayStation PS2, PS1, PS One, and PSX consoles, offering a reliable and familiar gaming experience.



Image: Top view of the OSTENT Wired Analog Controller, showcasing its black finish, dual analog sticks, directional pad, and face buttons (Y, X, B, A).

## PRODUCT FEATURES

---

- **Broad Compatibility:** Fully compatible with Sony PlayStation PS2, PS1, PS One, and PSX consoles.
- **Familiar Layout:** The controller's layout is nearly identical to that of the original PlayStation controller, ensuring a seamless transition for users.
- **Precise Control:** Features one direction key with 8 correctly controlling directions and 8 independent control keys for accurate gameplay.
- **Dual Vibration Function:** Equipped with dual vibration motors for real-time interaction and immersive feedback during gameplay.
- **Ergonomic Design:** Engineered for comfortable use during extended gaming sessions.
- **Pressure Sensitive Buttons:** Includes 12 pressure-sensitive buttons for nuanced control in supported games.
- **Wired Connection:** Provides a stable and responsive connection with a cable length of approximately 160 cm (5.25 ft).



Image: Detailed diagram of the controller highlighting key components: Direction Button, Left Rocker, Right Rocker, Analog button, Select, Start, and Fire Buttons (Y, X, B, A).

## Dual Vibration Function

### Real-time Interaction with the Game



Image: Visual representation of the dual vibration function, showing internal motors within the controller's grips, emphasizing real-time game interaction.

## SETUP

---

1. **Unpack the Controller:** Carefully remove the OSTENT Wired Analog Controller from its packaging.
2. **Locate Console Port:** Identify an available controller port on your Sony PlayStation PS2, PS1, PS One, or PSX console.
3. **Connect the Controller:** Insert the controller's plug firmly into the console's controller port. Ensure it is fully seated to establish a proper connection.
4. **Power On Console:** Turn on your PlayStation console. The controller should be recognized automatically.

No additional drivers or software are required for installation. The controller is plug-and-play.



Image: The controller with its cable, illustrating the approximate 160cm (5.25ft) length and a close-up of the PlayStation-compatible connector.

## OPERATING INSTRUCTIONS

The OSTENT Wired Analog Controller functions similarly to the original PlayStation controller. Below are general operating guidelines:

- **Directional Pad (D-Pad):** Use the D-Pad for precise directional input in games, typically for menu navigation or character movement.
- **Analog Sticks (Left/Right Rocker):** Activate the analog mode by pressing the "Analog" button (if applicable, some games automatically detect). Use the left analog stick for movement and the right analog stick for camera control or other game-specific functions.
- **Face Buttons (Y, X, B, A):** These buttons correspond to in-game actions such as jumping, attacking, interacting, or confirming selections. Their specific functions vary by game.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top of the controller, these buttons are commonly used for actions like aiming, firing, or shifting perspectives.

- **SELECT Button:** Typically used for accessing in-game menus, maps, or other secondary functions.
- **START Button:** Commonly used to pause games, access main menus, or confirm selections.

Refer to your game's instruction manual for specific button assignments and controls.



Image: A person's hands holding the OSTENT controller, demonstrating its ergonomic design during active gameplay on a television screen in the background.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly to prevent damage.
- **Handling:** Do not drop the controller or subject it to strong impacts, as this can damage internal components.
- **Cable Care:** Avoid bending or twisting the cable excessively, especially near the connector, to prevent fraying or internal

wire damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller not responding.	Loose connection; console not powered on; faulty port.	Ensure the controller is firmly plugged into the console. Verify the console is powered on. Try a different controller port on the console.
Vibration function not working.	Game does not support vibration; vibration setting off in game; internal fault.	Check if the game supports vibration feedback. Verify in-game settings for vibration. If issues persist, the controller may have an internal fault.
Buttons or analog sticks are unresponsive/sticky.	Dirt or debris under buttons; wear and tear.	Clean around the buttons and analog sticks with a soft, dry cloth or cotton swab. Avoid liquid. If wear and tear is significant, replacement may be necessary.

## SPECIFICATIONS

- **Product Type:** Wired Analog Game Controller
- **Compatibility:** Sony PlayStation PS2, PS1, PS One, PSX
- **Connection:** Wired
- **Cable Length:** Approximately 160 cm (5.25 ft)
- **Features:** Dual Vibration, 8-way Directional Key, 8 Independent Control Keys, Dual Analog Sticks, 12 Pressure Sensitive Buttons
- **Dimensions (Package):** 6.89 x 4.33 x 3.03 inches
- **Item Weight:** 7.7 ounces
- **Manufacturer:** OSTENT
- **Country of Origin:** China

## SAFETY INFORMATION



Image: A warning label indicating "Not suitable for children under 3 years old" in multiple languages, along with a "0-3" symbol and CE mark.

**WARNING:** This product is not suitable for children under 3 years old due to small parts that may pose a choking hazard. Always supervise young children during use. Keep packaging materials away from children.

## WARRANTY AND SUPPORT

---

This product is a quality 3rd party product by OSTENT. For any inquiries regarding product support or warranty information, please refer to the seller's policies or contact OSTENT directly through their official channels. Information regarding returns and support can often be found on the retailer's website where the product was purchased.

For general information about OSTENT products, you may visit the OSTENT Store on Amazon.