

## URC UR5U-8780L

# URC Clikr-5 Time Warner Cable Remote Control User Manual

Model: UR5U-8780L

Brand: URC

## INTRODUCTION

This manual provides comprehensive instructions for the URC Clikr-5 Time Warner Cable Remote Control (Model UR5U-8780L). Designed for seamless control of your cable or satellite box and other entertainment devices, this remote features an ergonomic design for comfortable handling and reliable infrared technology. Please read this manual thoroughly to ensure proper setup and operation of your remote control.



Figure 1: The URC Liokr-5 Time Warner Cable Remote Control. This image shows three identical remote controls, highlighting their ergonomic design and button layout. The remote is black with grey buttons, featuring dedicated controls for system power, channel, volume, navigation, and playback functions.

## SETUP

### 1. Battery Installation

The URC Liokr-5 remote requires two AA batteries for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.

3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

## 2. Initial Programming

To control your devices, the remote must be programmed. While specific programming codes are not provided in this manual, the general procedure involves entering a code specific to your device (TV, Cable Box, DVD, etc.) or using an auto-search function. Refer to your cable provider's documentation or the URC website for detailed programming instructions and device codes.

### General Programming Steps (may vary):

1. Turn on the device you wish to program (e.g., your TV or cable box).
2. Press and hold the **CODE SET** button (if available) or the specific device button (e.g., **TV**, **CBL**) until the indicator light on the remote illuminates.
3. Enter the 3, 4, or 5-digit code for your device. The indicator light should blink and then turn off if the code is accepted.
4. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful. If not, try another code or the auto-search method.

## OPERATING INSTRUCTIONS

---

The URC Clikr-5 remote is designed for intuitive control of your Time Warner Cable system and other compatible devices. Below is a guide to the primary functions of the remote's buttons.

- **SYSTEM ON/OFF:** Controls the power for the selected system (e.g., Cable Box).
- **POWER:** Controls the power for the currently active device (e.g., TV).
- **AUX, DVD, VCR, TV, CBL:** Device selection buttons. Press to switch control to the corresponding device.
- **GUIDE:** Displays the program guide.
- **MENU:** Accesses the main menu of the selected device.
- **INFO:** Displays information about the current program or selected item.
- **EXIT:** Exits menus or guides.
- **SETTINGS:** Accesses device settings.
- **Navigation Pad (OK/SEL, Up, Down, Left, Right):** Used to navigate through menus and select options. **OK/SEL** confirms selections.
- **PAGE +/- (PAGE UP/DOWN):** Scrolls through pages in guides or menus.
- **VOL +/- (Volume Up/Down):** Adjusts the volume.
- **CH +/- (Channel Up/Down):** Changes channels.
- **MUTE:** Mutes or unmutes the audio.
- **LAST:** Returns to the previously viewed channel.
- **DAY +/-:** Navigates through days in the program guide.
- **ON Demand:** Accesses On Demand content.
- **LIST:** Displays recorded programs or a list of channels.
- **LIVE:** Returns to live television.
- **REW (Rewind), PLAY, FF (Fast Forward), STOP, PAUSE, REC (Record):** Standard media playback controls.

- **Number Pad (0-9):** Directly enters channel numbers or menu selections.
- **\***: Special function key, often used for specific features or text input.
- **#**: Special function key, often used for specific features or text input.
- **LIGHT:** Activates the remote's backlight (if available).
- **SOURCE:** Cycles through input sources on your TV.

## MAINTENANCE

Proper maintenance will extend the life of your URC Klikr-5 remote control.

### Cleaning

To clean the remote, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they can damage the remote's finish or buttons. Avoid getting moisture into the battery compartment or around the buttons.

### Battery Replacement

Replace the batteries when the remote's indicator light becomes dim or the remote becomes unresponsive. Always replace both AA batteries at the same time with new ones. Dispose of old batteries according to local regulations.

## TROUBLESHOOTING

If you encounter issues with your URC Klikr-5 remote, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
  - Ensure there is a clear line of sight between the remote's infrared emitter and the device's receiver. Obstructions can block the signal.
  - Verify that you have selected the correct device mode (e.g., TV, CBL) on the remote.
- **Device Not Responding to Commands:**
  - Re-program the remote for the specific device. The programming code might be incorrect or corrupted.
  - Ensure the device itself is powered on and functioning correctly.
- **Limited Range:**
  - Replace the batteries with fresh ones. Low battery power can reduce the remote's effective range.
  - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.
- **Certain Buttons Not Working:**
  - This could indicate a specific button malfunction or a programming issue. Try re-programming the remote. If the issue persists, the remote may require replacement.

## SPECIFICATIONS

Model Number	UR5U-8780L (LYSB00OSIQD6A-ELECTRNCS)
Brand	URC






<b>Product Dimensions</b>	9.4 x 6.1 x 1.6 inches
<b>Item Weight</b>	1.35 pounds
<b>Batteries Required</b>	2 AA batteries (included)
<b>Connectivity Technology</b>	Infrared
<b>Max Number of Supported Devices</b>	1 (designed for specific cable/satellite box control, but can be programmed for others)
<b>Compatible Devices</b>	Set Top Box (Cable/Satellite), TV, DVD, VCR, AUX (depending on programming)
<b>Special Feature</b>	Ergonomic Design

## WARRANTY AND SUPPORT

The URC Clikr-5 Time Warner Cable Remote Control is manufactured by URC. For information regarding warranty coverage, technical support, or to obtain specific programming codes for your devices, please refer to the official URC website or contact their customer support directly.

Please retain your proof of purchase for any warranty claims.

## Related Documents - UR5U-8780L

	<a href="#">CLIKR-5 Universal Cable Remote Control Operating Instructions</a> Comprehensive guide for the CLIKR-5 Universal Cable Remote Control (UR5U-8780L & UR5U-8790L) by Universal Remote Control, Inc. Learn setup, programming methods (Quick Set-Up, 3-Digit Code, Auto-Search), and device compatibility for TVs, VCRs, DVDs, and audio equipment.
	<a href="#">CLIKR-5 Universal Remote Control Operating Instructions</a> This document provides comprehensive operating instructions for the CLIKR-5 universal remote control (models UR5U-8780L & UR5U-8790L), detailing setup procedures, button functions, and extensive code tables for various audio-visual equipment.
	<a href="#">CLIKR-5 Universal Remote Control Operating Instructions</a> User manual for the CLIKR-5 Universal Remote Control (UR5U-8780L & UR5U-8790L) by Universal Remote Control, Inc., detailing setup, programming, and operation for various audio-visual devices.
	<a href="#">CLIKR-5 Universal Remote Control Operating Instructions and Setup Codes</a> Comprehensive operating instructions and setup code tables for the CLIKR-5 UR5U-8780L & UR5U-8790L universal cable remote control by Universal Remote Control, Inc. Learn how to program your remote for various devices including TVs, VCRs, DVDs, and audio equipment.
	<a href="#">CLIKR-5 Universal Remote Control Operating Instructions</a> Comprehensive guide to operating and programming the CLIKR-5 universal remote control, including setup methods, button functions, and device code tables.



### [CLIKR-5 Cable Remote Control UR5U-8780L & UR5U-8790L Operating Instructions](#)

Operating instructions and setup guide for the CLIKR-5 UR5U-8780L & UR5U-8790L cable remote control by Universal Remote Control, Inc. Learn how to program your remote for various devices like TVs, VCRs, DVDs, and audio equipment using quick setup, 3-digit codes, or auto-search.

 
Documents - URC – UR5U-8780L



### [CLIKR-5 Universal Remote Control Operating Instructions](#)

Operating instructions and setup code tables for the Universal Remote Control CLIKR-5 (UR5U-8780L & UR5U-8790L) cable remote control, covering programming methods, button functions, and device code lists for TVs, VCRs, DVDs, and audio equipment.


lang:en **score:48** filesize: 427.26 K page\_count: 2 document date: 2010-07-13

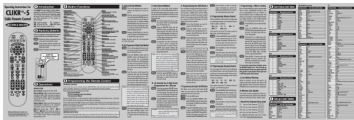

### [CLIKR-5 Universal Cable Remote Control Operating Instructions](#)

Comprehensive guide for the CLIKR-5 Universal Cable Remote Control (UR5U-8780L & UR5U-8790L) by Universal Remote Control, Inc. Learn setup, programming methods (Quick Set-Up, 3-Digit Code, Auto-Search), and device compatibility for TVs, VCRs, DVDs, and audio equipment.

 
lang:en **score:46** filesize: 426.86 K page\_count: 2 document date: 2010-07-13



### [CLIKR-5 Universal Remote Control Operating Instructions](#)

User manual for the CLIKR-5 Universal Remote Control (UR5U-8780L & UR5U-8790L) by Universal Remote Control, Inc., detailing setup, programming, and operation for various audio-visual devices.

 
lang:en **score:31** filesize: 829.41 K page\_count: 2 document date: 2024-06-10



### [CLIKR-5 Universal Remote Control Operating Instructions](#)

This document provides comprehensive operating instructions for the CLIKR-5 universal remote control (models UR5U-8780L & UR5U-8790L), detailing setup procedures, button functions, and extensive code tables for various audio-visual equipment.

 lang:en **score:31** filesize: 828.08 K page\_count: 2 document date: 2022-02-28



### [CLIKR-5 Universal Remote Control Operating Instructions](#)

Comprehensive guide to operating and programming the CLIKR-5 universal remote control, including setup methods, button functions, and device code tables.

lang:en **score:27** filesize: 731.9 K page\_count: 2 document date: 2018-10-16

TCL • Roku TV

Program Your Cable or Satellite Remote Control to Work with Your TCL Roku TV

In many cases, you can program your cable or satellite universal remote control to also control your TCL Roku TV. Look for your provider and remote control in the list below and enter the TV code provided into the remote control. You will need to have instructions for programming the remote control handy. Check with your cable or satellite provider for instructions.

Providers	Remote Model	Codes for TCL Roku TVs
ATT Uverse	530-SI	1546
Bright House Cable	URC1056	1756
Cablevision	URC-CBL-CV04	031
Charter	UR4U-MDVR-CHD2	11756
Comcast	OnDemand DVR 3 Device	11756
Cox Communications	URC-8820-MOTO	1756
DirectTV	RC65	11756
Dish Network	211 IR/UHF	535
DNV	ONA12AV058	3851
RCA/Vox	RCRN03BR	11756
Time Warner	UR5U-8780L RC122	387, 1566
TIVO	VZ P265v3 RC	0091 or 0366
Verizon FIOS	Logitech Harmony Remote <sup>1</sup>	980

<sup>1</sup>By default, the remote control's channel control capabilities are locked to the Cable Box. This will guarantee that you do not inadvertently change a channel on the Cable Box while in the TV mode. However, you can deactivate Channel Control Lock to allow full access to keys for use with Roku TV. Follow the instructions [here](#) to deactivate Channel Control Lock.

<sup>2</sup>Follow the instructions [here](#) to deactivate Channel Control Lock.

<sup>3</sup>To use your Harmony remote with Roku TV, follow the steps listed [here](#) to add Roku TV to your remote. Enter "TCL" on the manufacturer and then enter "Roku TV" in the Model Number field.

[pdf] Instructions

Roku Remote Control Code tclusa 80

Program Your Cable or Satellite Remote Control to Work with Your TCL Roku TV In

many cases, you can ... evice 11756 URC-8820-MOTO 1756 RC65 11756 21.1

IR/UHF 535 ONA12AV058 3851 RCRN03BR 11756 **UR5U-8780L**, RC122 387, 1566

0091 or 0366 VZ P265v3 RC 180 Logitech Harmony Remote3 1By default...

lang:en score:26 filesize: 130.24 K page\_count: 1 document date: 2015-08-17

Spectrum

Welcome

1-855-70-SPECTRUM • spectrum.net/hello

YOUR STEP-BY-STEP GUIDE TO GETTING STARTED

[pdf] Quick Start Guide Guide

CHA 1779 QuickStartGuide TWC English Cover FINAL indd Welcome Spectrum Guide timewarnercable

content dam spectrum residential en s

1-855-70-SPECTRUM spectrum.net/hello Welcome Thank you for choosing Spectrum

2017 Charter Communi ... ntinuing to hold the device button, press the quick number

assigned to your brand. MODEL: CLIKR-5: **UR5U-8780L** TV Brand Sanyo Sony

Samsung LG / Zenith Toshiba Panasonic Philips / Magnavox Hitachi Sha...

lang:en score:24 filesize: 2.22 M page\_count: 21 document date: 2017-10-31

CLIKR-5

Operating Instructions

[pdf] Installation Guide Instructions

OCE 0060L REV27 230321 QXD PC tmstv 1675323705 urc automation 48749 |||

Operating Instructions For CLIKRTM-5 Cable Remote Control**UR5U-8780L** UR5U-

8790L Universal Remote Control, Inc. www.universalremote.com OCE-0060L REV 27

03/21/23 1 Introduction The CLIKRTM-5 **UR5U-8780L** UR5U-8790L is designed to

operate the CISCO / SA, Pioneer, Pace Micro, Samsung and Motorola ...

lang:en score:21 filesize: 459.42 K page\_count: 2 document date: 2023-03-27