

## Clatronic VL 3603 S

# Clatronic VL 3603 S Pedestal Fan Instruction Manual

Model: VL 3603 S

## 1. INTRODUCTION

Thank you for choosing the Clatronic VL 3603 S Pedestal Fan. This manual provides important information regarding the safe assembly, operation, maintenance, and troubleshooting of your new fan. Please read these instructions carefully before using the appliance and keep them for future reference.

## 2. SAFETY INSTRUCTIONS

- Always unplug the fan from the power outlet before cleaning, assembling, or disassembling parts.
- Ensure the voltage indicated on the rating label matches your mains voltage before connecting the appliance.
- Do not operate the fan with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Keep hands, hair, clothing, and other objects away from the fan blades during operation to prevent injury or damage.
- Do not use the fan in wet or damp locations, such as bathrooms or laundries, or near water.
- Place the fan on a stable, level surface to prevent it from tipping over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## 3. PRODUCT OVERVIEW

The Clatronic VL 3603 S is a pedestal fan designed for efficient air circulation. It features adjustable height, tilt, and an oscillation function for widespread cooling.



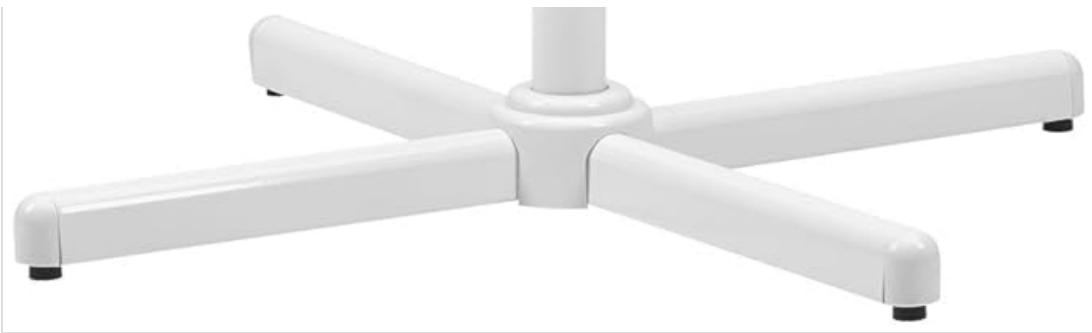


Figure 1: Fully assembled Clatronic VL 3603 S Pedestal Fan, white color, with its protective grille and control panel.

## Components:

- Front and Rear Protective Grille
- Fan Blades
- Motor Housing
- Control Panel (Speed Selector, Oscillation Button)
- Height Adjustable Stand Pole
- Cross Base
- Power Cord with Plug



Figure 2: Close-up views of the fan's control panel with speed settings, practical carrying handle, durable motor, and stable cross base.

## 4. SETUP AND ASSEMBLY

Follow these steps to assemble your Clatronic VL 3603 S Pedestal Fan:

1. **Assemble the Base:** Connect the two parts of the cross base together. Secure them with the provided screws and washers.
2. **Attach the Stand Pole:** Insert the lower part of the stand pole into the assembled cross base. Tighten the securing knob at the bottom of the base to fix the pole firmly.
3. **Mount the Motor Housing:** Place the motor housing onto the top of the stand pole. Ensure it is securely seated and tighten any securing screws or knobs.
4. **Install the Rear Grille:** Position the rear protective grille onto the motor housing, aligning the mounting holes. Secure it with the provided nuts or clips.
5. **Attach the Fan Blades:** Slide the fan blades onto the motor shaft. Ensure they are correctly oriented and secure them with the spinner cap, turning it counter-clockwise to tighten.
6. **Install the Front Grille:** Place the front protective grille over the fan blades, aligning it with the rear grille. Secure the two grilles together using the clips or screws provided around the edge.



Figure 3: Visual representation of the fan's adjustable height up to 125 cm and 40 cm diameter, along with its 4-step switch (0/1/2/3), 45W power, and oscillation function.

## 5. OPERATING INSTRUCTIONS

### Power Connection:

Plug the power cord into a suitable electrical outlet (220-240V, 50Hz).

### Speed Control:



Figure 4: Close-up of the fan's control panel with buttons for speed settings (0, 1, 2, 3) and oscillation.

- The fan features a 4-step switch (0/1/2/3) located on the control panel.
- Press '0' to turn the fan OFF.
- Press '1' for low speed.
- Press '2' for medium speed.
- Press '3' for high speed.

### Oscillation Function:

# Erfrischung im ganzen Raum

Zuschaltbare Schwenkfunktion für optimale Luftzirkulation

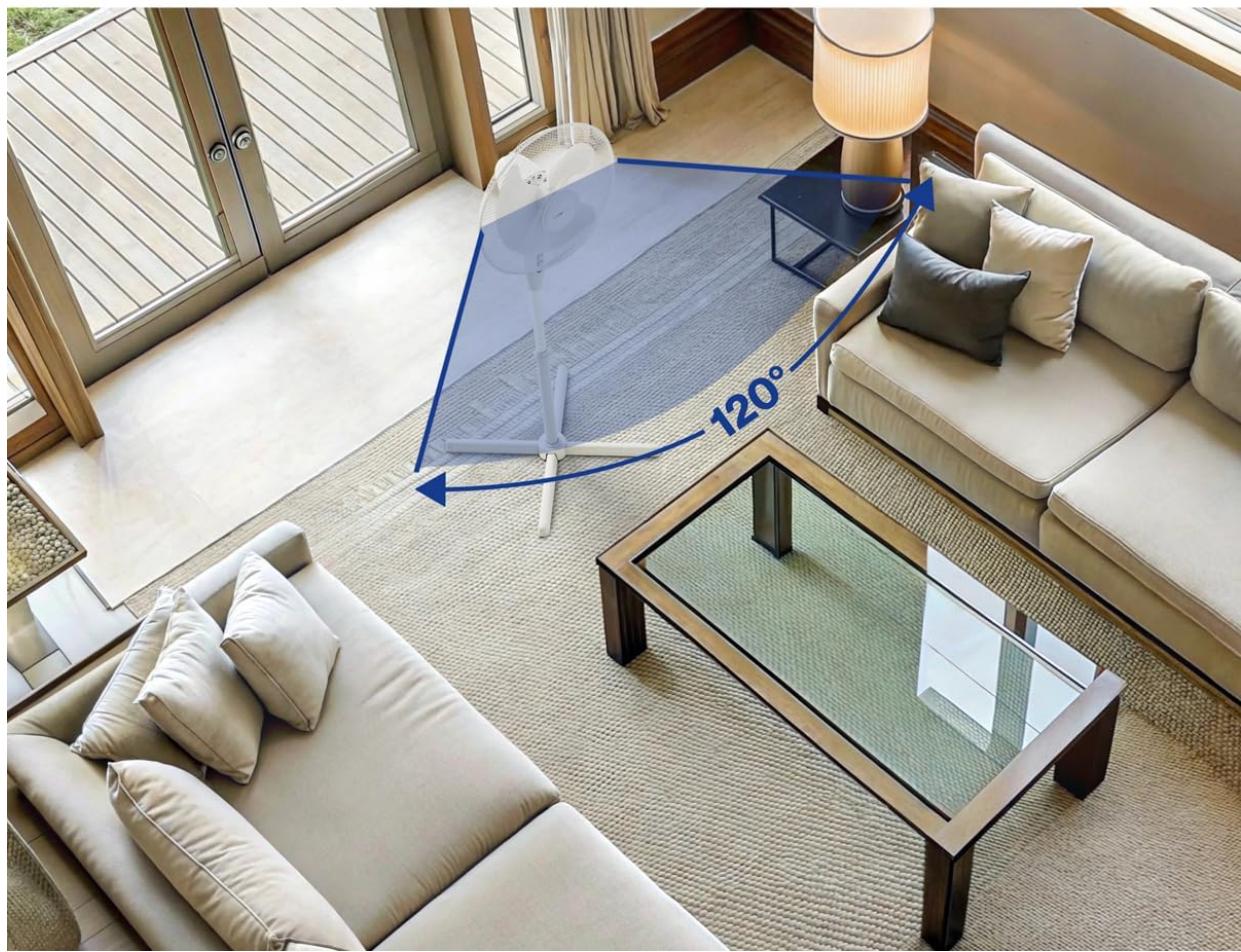


Figure 5: The fan demonstrating its 120-degree oscillation feature, distributing air across a wide area in a living room setting.

- To activate the oscillation function, press the oscillation button located on the top of the motor housing. The fan head will begin to rotate from side to side, distributing air over a wider area.
- To stop oscillation, pull the oscillation button upwards. The fan will then blow air in a fixed direction.

## Adjusting Height and Tilt:

## Flexibel einstellbar

Höhenverstellbar, neigbar & mit Schwenkfunktion

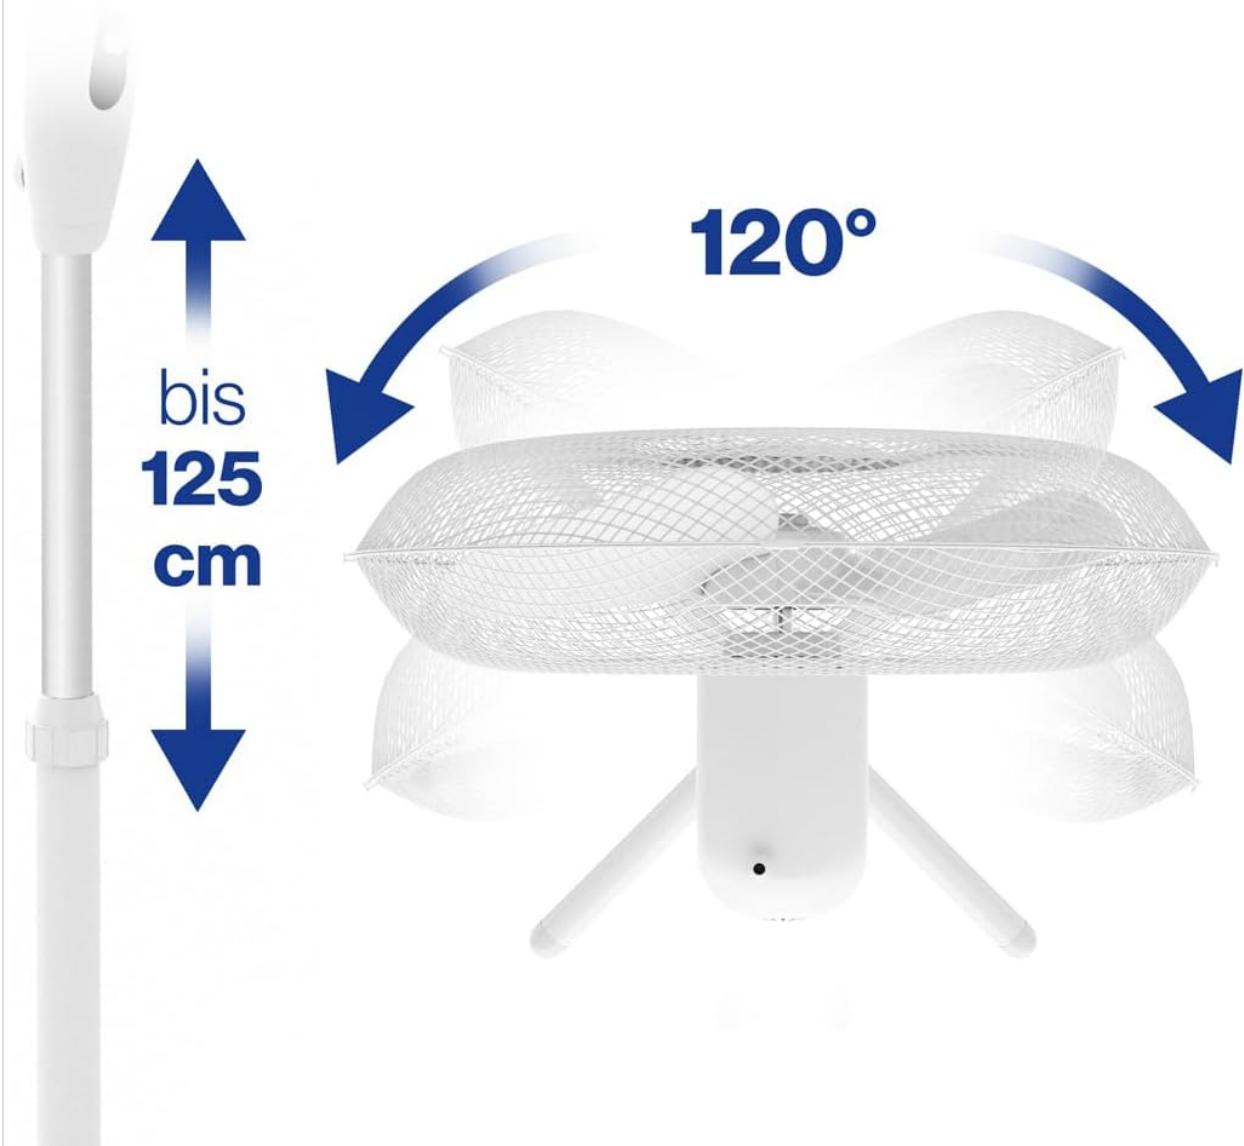


Figure 6: Illustration of the fan's flexible adjustment capabilities, including height adjustment up to 125 cm and tilt functionality.

- **Height Adjustment:** Loosen the height adjustment knob on the stand pole. Adjust the pole to the desired height (up to 125 cm) and then securely tighten the knob.
- **Tilt Adjustment:** Loosen the tilt adjustment knob located on the side of the motor housing. Tilt the fan head up or down to direct the airflow as needed, then tighten the knob to secure the position.

# Ruhiger Lauf für erholsamen Schlaf

Unterstützt den Schlaf durch leise Betriebsgeräusche



Figure 7: The Clatronic VL 3603 S fan operating quietly in a bedroom, highlighting its suitability for undisturbed sleep.

## 6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and extend the life of your fan.

- **Always unplug the fan** from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades and inside the protective grilles, you may need to carefully remove the front grille. Refer to the assembly instructions in Section 4 for guidance on disassembling the grille.
- Ensure all parts are completely dry before reassembling and operating the fan.
- Do not immerse the fan or its electrical components in water or any other liquid.

## 7. TROUBLESHOOTING

If you encounter issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Fan not plugged in. Speed setting is '0'.	Check power outlet. Ensure plug is fully inserted. Select a speed setting (1, 2, or 3).
Weak airflow.	Low speed setting. Grilles are obstructed/dirty.	Increase speed setting. Clean the protective grilles and blades.
Fan is noisy.	Loose parts. Fan not on a level surface.	Check all screws and connections are tight. Place the fan on a stable, level surface.
Oscillation not working.	Oscillation button not engaged.	Ensure the oscillation button on top of the motor housing is pressed down.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

- **Model:** VL 3603 S
- **Manufacturer:** Clatronic
- **Power:** 45 Watt
- **Voltage:** 220-240V, 50Hz
- **Fan Diameter:** Approximately 40 cm
- **Adjustable Height:** Up to 125 cm
- **Speed Settings:** 3 (plus Off)
- **Features:** Oscillation, Adjustable Tilt, Metal Protective Grille, Carrying Handle
- **Material:** Metal (grille), Plastic (housing, base)
- **Noise Level:** Approximately 45 Decibels
- **Product Dimensions:** 43D x 64W x 125H cm (fully extended)
- **Weight:** 2.3 kg
- **Certification:** CE

## 9. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Clatronic website. Keep your proof of purchase for any warranty claims.