

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RASTAR](#) /

› [RASTAR R/C 1:24 Lamborghini Huracan STO \(23177\) Instruction Manual](#)

RASTAR 23177

RASTAR R/C 1:24 Lamborghini Huracan STO (23177) Instruction Manual

Model: 23177

INTRODUCTION

This manual provides essential information for the safe operation, setup, and maintenance of your RASTAR R/C 1:24 Lamborghini Huracan STO remote control car. Please read this manual thoroughly before use to ensure proper function and longevity of the product.



Image: The RASTAR R/C 1:24 Lamborghini Huracan STO car in blue and orange, accompanied by its remote controller and product packaging.

SAFETY PRECAUTIONS

- Always operate the vehicle in a safe, open area, away from people, pets, and obstacles.
- Do not operate near water or in wet conditions to prevent electrical damage.
- Keep fingers, hair, and loose clothing away from moving parts, such as wheels.
- Adult supervision is recommended for children operating the vehicle.
- Ensure batteries are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries.
- Remove batteries from the vehicle and remote when not in use for extended periods.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x RASTAR R/C 1:24 Lamborghini Huracan STO Vehicle
- 1 x Remote Controller
- 1 x Instruction Manual (this document)

SETUP

1. Battery Installation (Vehicle)

1. Locate the battery compartment on the underside of the vehicle.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 3 x 1.5V AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

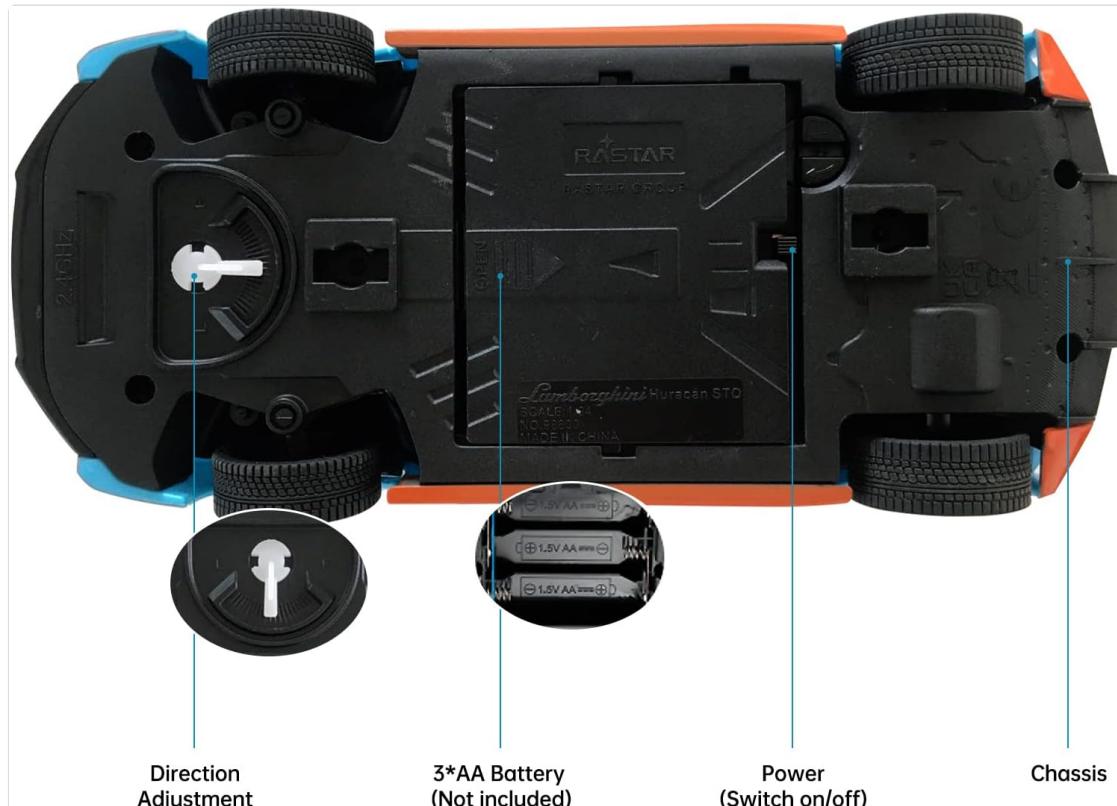


Image: The underside of the R/C car, highlighting the battery compartment for 3 AA batteries, the power switch, and the direction adjustment knob.

2. Battery Installation (Remote Controller)

1. Locate the battery compartment on the back of the remote controller.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 2 x 1.5V AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3. Pairing the Vehicle and Remote

The vehicle and remote controller are designed to pair automatically upon activation. Ensure both have fresh batteries installed.

1. Turn on the vehicle using the power switch located on its underside.
2. Turn on the remote controller.
3. The remote and vehicle should connect automatically. If not, turn both off and on again.

OPERATING INSTRUCTIONS

Remote Controller Functions



Batteries Powered

- Full Functions - Forward, Reverse, Left, Right
- Remote range up to 80 feet
- Single-frequency 2.4GHz
- 3AA for car, 2AA for remote



Image: The R/C car and its remote controller, illustrating that the system is battery-powered and highlighting the remote's full functions: Forward, Reverse, Left, and Right. It also notes a remote range of up to 80 feet and a single 2.4GHz frequency.

- **Forward/Reverse:** Use the left joystick or button to move the car forward or backward.
- **Left/Right:** Use the right joystick or button to steer the car left or right.

Driving Tips

- Start by practicing in an open area to get accustomed to the controls.
- Avoid driving on rough terrain, sand, or thick carpet, as this can affect performance and battery life.
- If the car pulls to one side, use the direction adjustment knob on the underside of the vehicle to fine-tune its steering.

MAINTENANCE

Cleaning

- Wipe the vehicle and remote with a soft, dry cloth after each use.
- Do not use water or chemical cleaners, as they can damage electronic components.

- Remove any debris from the wheels and axles to ensure smooth operation.

Storage

- Store the vehicle and remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- Remove all batteries from both the vehicle and remote controller if storing for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not respond	Low or dead batteries in vehicle or remote; Vehicle/remote not turned on; Not paired.	Replace batteries; Ensure power switches are ON; Turn both off and on again to re-pair.
Vehicle moves slowly or erratically	Low batteries; Obstruction in wheels; Driving on unsuitable surface.	Replace batteries; Clear any obstructions; Move to a smooth, flat surface.
Vehicle does not steer straight	Steering trim needs adjustment.	Use the direction adjustment knob on the underside of the vehicle to correct steering.

SPECIFICATIONS



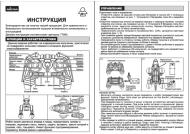
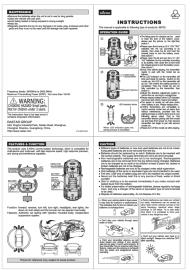
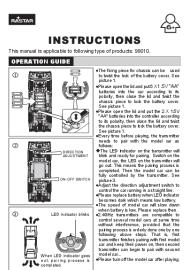
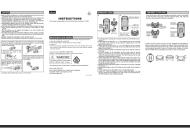
Image: Technical drawing illustrating the dimensions of the RASTAR R/C Lamborghini Huracan STO: 18.9 cm (7.4 inches) in length, 9.3 cm (3.7 inches) in width, and 5.2 cm (2.0 inches) in height.

- **Brand:** RASTAR
- **Model:** Lamborghini Huracan STO (23177)
- **Scale:** 1:24
- **Material:** Plastic
- **Color:** Blue
- **Vehicle Dimensions (L x W x H):** 18.9 x 9.3 x 5.2 cm (7.4 x 3.7 x 2.0 inches)
- **Vehicle Weight:** 408 grams
- **Vehicle Batteries:** 3 x 1.5V AA (not included)
- **Remote Controller Batteries:** 2 x 1.5V AA (not included)
- **Frequency:** 2.4 GHz
- **Max Speed:** Approximately 7 km/h
- **Remote Range:** Up to 80 feet (approx. 24 meters)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official RASTAR website. Keep your purchase receipt as proof of purchase.

Related Documents - 23177

	<p>Инструкция по эксплуатации робота RASTAR 77900</p> <p>Полное руководство по использованию игрушечного робота RASTAR 77900. Включает настройку, управление, функции, программирование и меры безопасности.</p>
	<p>RASTAR 98700 Remote Control Car: Operation Guide and Safety Instructions</p> <p>Detailed instructions for the RASTAR 98700 remote control car, covering setup, operation, maintenance, and important safety precautions for safe and enjoyable play.</p>
	<p>RASTAR 92200 Radio-Controlled Car Instruction Manual</p> <p>Comprehensive instruction manual for the RASTAR 92200 radio-controlled car, covering battery installation, pairing, operation, wheel changes, and safety guidelines.</p>
	<p>RASTAR 99010 Radio Control Car: Operation, Features, and Safety Instructions</p> <p>Comprehensive guide for the RASTAR 99010 radio control car, covering operation, features, battery installation, pairing, maintenance, and important safety precautions.</p>
	<p>Rastar RC Car 92840, 80445B308D7 Instructions and Operation Guide</p> <p>Comprehensive instructions and operation guide for Rastar RC Cars models 92840 and 80445B308D7, covering battery charging, operation, features, and maintenance.</p>
	<p>Rastar 92100 RC Car Operation and Maintenance Guide</p> <p>Instructions for operating and maintaining the Rastar 92100 remote control car, including battery installation, pairing, and features.</p>

