

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yale](#) /

› [Yale Digital Door Viewer Model 45-0500-1432-00-5011 Instruction Manual](#)

## Yale 45-0500-1432-00-5011

### Yale Digital Door Viewer Model 45-0500-1432-00-5011 Instruction Manual

#### INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Yale Digital Door Viewer Model 45-0500-1432-00-5011. Please read these instructions carefully before using the product to ensure proper function and safety. The Yale Digital Door Viewer enhances your home security by providing a clear view of who is at your door.


#### PACKAGE CONTENTS

Verify that all components are present in the package:

- 3.2-inch LCD Screen Unit (Indoor Viewer)
- Outdoor Camera Unit (Peephole)
- Mounting Brackets and Attachments
- AAA Batteries (4 pieces)

#### PRODUCT FEATURES

- **Live View:** Provides an immediate, clear image of visitors at your door.
- **High-Quality Camera:** Delivers clear images for easy identification.
- **Wide Viewing Angle:** A 105-degree viewing angle ensures a broad perspective.
- **Compact Design:** Features a 3.2-inch screen, suitable for various home environments.
- **Flexible Door Thickness Compatibility:** Designed to fit doors with a thickness ranging from 38 mm to 110 mm.

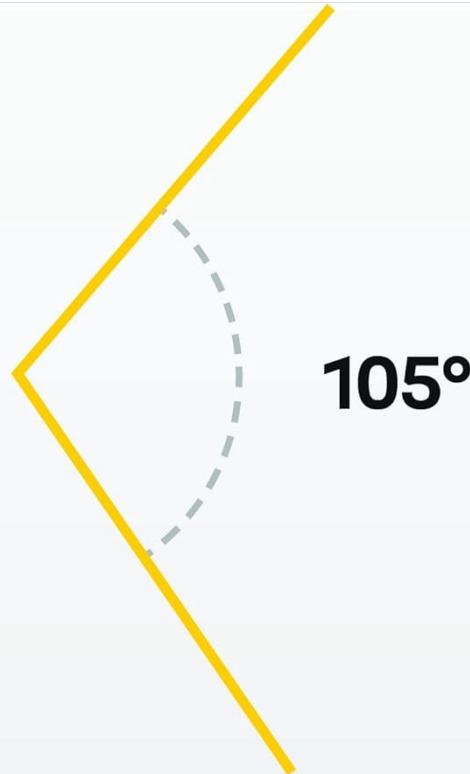

105°

*Image: The outdoor camera unit illustrating its 105-degree viewing angle.*

## INSTALLATION GUIDE

Before beginning installation, ensure your door thickness is between 38 mm and 110 mm. You will need a screwdriver and potentially a drill if no existing peephole is present.

### 1. Prepare the Door:

- If replacing an existing peephole, unscrew and remove it.
- If there is no existing peephole, drill a hole of appropriate diameter (refer to the product's specific drilling template, if provided, or standard peephole size) at your desired viewing height. Ensure the hole is clean and free of debris.

### 2. Install the Outdoor Camera Unit:

- Insert the outdoor camera unit through the hole from the exterior side of the door. Ensure the camera is facing outwards and is level.
- Guide the flexible cable from the camera unit through the hole to the interior side of the door.

### 3. Attach the Mounting Bracket:

- On the interior side of the door, slide the mounting bracket over the camera cable.
- Secure the mounting bracket to the outdoor camera unit using the provided screws. Tighten firmly but do not overtighten.

### 4. Connect the Indoor Viewer Unit:

- Connect the flexible cable from the outdoor camera unit to the designated port on the back of the indoor viewer unit.
- Carefully align the indoor viewer unit with the mounting bracket and slide it downwards until it clicks into place.

### 5. Insert Batteries:

- Open the battery compartment on the indoor viewer unit.
- Insert 4 AAA batteries, ensuring correct polarity (+/-).
- Close the battery compartment.

### 6. Test the Viewer:

- Press the power button on the indoor viewer unit. The screen should turn on and display the view from the outdoor camera.
- Adjust the outdoor camera if necessary to ensure a clear, level image.



*Image: The Yale Digital Door Viewer indoor unit, ready for operation.*

## OPERATING INSTRUCTIONS

Using your Yale Digital Door Viewer is straightforward:

1. **Activate Live View:** When you hear a knock or doorbell, simply press the power button located on the side of the indoor viewer unit.
2. **View the Screen:** The 3.2-inch LCD screen will immediately display a clear image from the outdoor camera, showing who is at your door.
3. **Automatic Shut-off:** The screen will automatically turn off after a short period to conserve battery life. You can press the button again to reactivate the view.



*Image: A user activating the digital door viewer by pressing the power button.*



*Image: A person observing the live view on the digital door viewer's screen.*

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and camera lens. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** When the screen display becomes dim or the unit fails to power on, it is time to replace the batteries. Open the battery compartment, remove the old AAA batteries, and insert new ones, ensuring correct polarity.
- **Environmental Conditions:** Ensure the outdoor camera lens remains clear of obstructions like dirt, dust, or spiderwebs for optimal performance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Screen does not turn on.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
No image or blurry image on screen.	Loose cable connection between camera and viewer. Obstructed or dirty camera lens. Insufficient lighting outside.	Check and secure the cable connection. Clean the camera lens with a soft cloth. Ensure adequate lighting in front of the door.
Image is upside down or sideways.	Outdoor camera unit is not correctly oriented.	Carefully rotate the outdoor camera unit until the image is correctly oriented.

## SPECIFICATIONS

<b>Model Number</b>	45-0500-1432-00-5011
<b>Screen Size</b>	3.2 inches LCD
<b>Viewing Angle</b>	105 degrees
<b>Door Thickness Compatibility</b>	38 mm to 110 mm
<b>Power Source</b>	4 x AAA Alkaline Batteries
<b>Product Dimensions (Indoor Unit)</b>	Approx. 2.64 x 4.92 x 0.59 inches (67 x 125 x 15 mm)
<b>Item Weight</b>	Approx. 7.4 ounces (210 grams)
<b>Color</b>	White

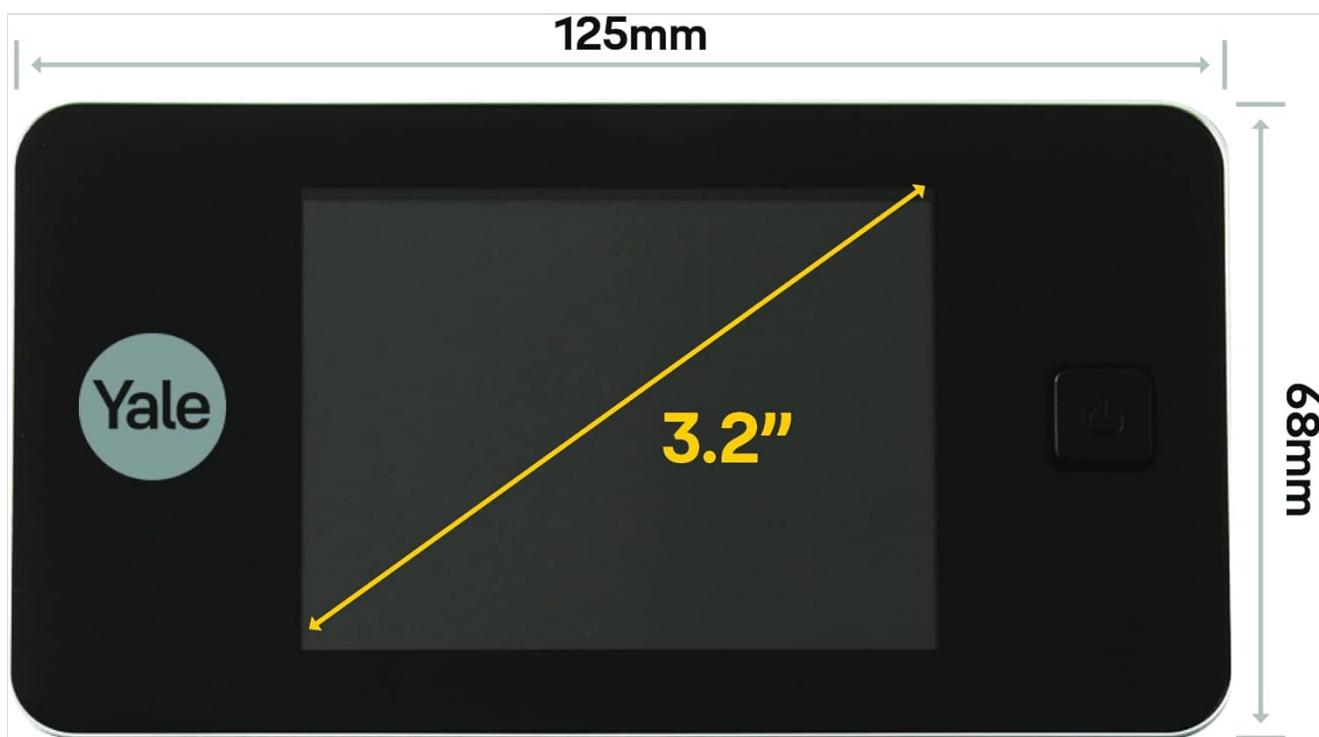


Image: Diagram illustrating the dimensions of the digital door viewer's screen unit.

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Yale website. Contact details for customer service can typically be found on the manufacturer's website or product packaging.

## Related Documents - 45-0500-1432-00-5011

	<p><a href="#"><u>Yale Smart Lock Quick Start Guide: Installation and Setup</u></a></p> <p>Get started with your Yale smart lock. This quick start guide provides step-by-step instructions for downloading the Yale Access App, setting up your device, installing the lock, and integrating a smart module.</p>
	<p><a href="#"><u>Yale Home App Step-by-Step Guide to App Features and Smart Lock Control</u></a></p> <p>Comprehensive guide to using the Yale Home App for managing Yale smart locks, including features like Auto-Unlock, Auto-Lock, guest access, and product overviews for Yale Unity and Assure series.</p>
	<p><a href="#"><u>Yale DDV5800 Digital Door Viewer User Manual</u></a></p> <p>User manual for the Yale DDV5800 Digital Door Viewer, detailing basic setup, visitor management, and album features. Learn how to install and operate your Yale smart door viewer.</p>
	<p><a href="#"><u>Conexis L2 Smart Lock User Manual - Installation and Setup Guide</u></a></p> <p>Comprehensive user manual for the Yale Conexis L2 Smart Lock, covering installation, setup, app integration, and troubleshooting. Learn how to install and use your smart lock.</p>
	<p><a href="#"><u>Yale Luna Elite+ User Manual</u></a></p> <p>User manual for the Yale Luna Elite+, Elite-P, and Elite-F smart locks, covering installation, operation, settings, and troubleshooting.</p>
	<p><a href="#"><u>Yale Value Safe &amp; Alarm: Installation &amp; User Guide</u></a></p> <p>Comprehensive installation and user guide for the Yale Value Safe and Yale Alarm models. Provides step-by-step instructions for battery installation, setting and resetting user codes, operating the safe door, and a fitting guide. Includes multilingual support and product specifications.</p>