

[manuals.plus](#) /› [Wahl](#) /› **WAHL Color Pro Combo Kit 1395-0465 Hair Clipper and Mini Trimmer Instruction Manual****Wahl 1395-0465**

WAHL Color Pro Combo Kit Hair Clipper and Mini Trimmer Instruction Manual

Model: 1395-0465

1. PRODUCT OVERVIEW

The Wahl Color Pro Combo Kit is designed to provide a complete hair cutting experience at home. This 15-piece kit includes a corded electric hair clipper and a battery-operated mini trimmer, along with color-coded guide combs for easy length identification. The main clipper features self-sharpening precision blades and a powerful motor for consistent performance.

Key features include:

- 15-piece hair cutting kit for comprehensive grooming.
- Color-coded guide combs for simple length selection (3-25 mm).
- Corded electric clipper with self-sharpening precision blades.
- Battery-operated mini trimmer for detailing and necklines (0.6 mm cutting length).
- Durable motor designed for long-lasting performance.



Image 1.1: The WAHL Color Pro Combo Kit, showing the main clipper, mini trimmer, various color-coded guide combs, blade oil, cleaning brush, and storage pouch.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Water Proximity:** Avoid using the clipper or trimmer near water sources, such as bathtubs, showers, or sinks.
- **Moving Parts:** Exercise caution when operating the device, especially near moving parts.
- **Unplug When Not in Use:** Always unplug the corded clipper when not in use, before cleaning, or when attaching/removing accessories.
- **Eye Protection:** For safe use during outlining and finishing, wearing eye protection is recommended.
- **Children:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Power Cord:** Do not wrap the cord around the appliance. Do not pull, twist, or bend the cord.

3. SETUP AND FIRST USE

3.1 Unpacking the Kit

Carefully remove all items from the packaging. Ensure all components listed in the "Product Overview" section are present. Retain packaging for storage or future transport.

3.2 Preparing the Clipper

1. Before first use, apply a few drops of the included Wahl clipper oil to the blades. This ensures optimal performance and longevity.
2. Plug the corded clipper into a suitable electrical outlet.

3.3 Preparing the Mini Trimmer

1. The mini trimmer operates on AA batteries. Insert the battery according to the polarity markings inside the

battery compartment.

2. Apply a few drops of Wahl clipper oil to the trimmer blades before first use.

4. OPERATING INSTRUCTIONS

4.1 Selecting a Guide Comb

The kit includes 8 color-coded guide combs, ranging from 3mm to 25mm. Each comb is clearly marked with its length and color. Choose the desired length based on your preference.



Image 4.1: The WAHL Color Pro Combo Kit showing the main clipper and mini trimmer alongside the various color-coded guide combs, each indicating a specific cutting length.

4.2 Attaching Guide Combs

To attach a guide comb, hold the comb with the teeth facing upwards. Align the comb with the clipper blade and slide it firmly onto the blade until it clicks into place. Ensure it is securely fastened before use.

4.3 Using the Main Clipper

1. Ensure hair is clean and dry.
2. Attach the desired color-coded guide comb.
3. Turn on the clipper using the power switch.
4. Begin cutting from the bottom of the head, moving upwards against the direction of hair growth. Use smooth, overlapping strokes.
5. For a closer cut (1mm), remove the guide comb and use the clipper blade directly.

4.4 Using the Mini Trimmer

The mini trimmer is ideal for detailing, cleaning up necklines, sideburns, and facial hair. It provides a cutting length of 0.6mm.

1. Turn on the trimmer using the power switch.
2. Hold the trimmer at a slight angle to the skin.
3. Use short, controlled strokes to define edges and remove stray hairs.

5. MAINTENANCE AND CARE

5.1 Cleaning the Blades

1. After each use, turn off and unplug the clipper (or remove battery from trimmer).
2. Use the included cleaning brush to remove loose hairs from the blades and guide combs.
3. For thorough cleaning, the blades can be carefully removed (refer to specific instructions in the full manual if available) and rinsed under running water, then dried completely before reattaching. Ensure the motor unit does not get wet.

5.2 Oiling the Blades

To maintain cutting performance and extend blade life, apply 2-3 drops of Wahl clipper oil to the blades before and after each use. Turn on the clipper for a few seconds to allow the oil to distribute evenly.

5.3 Storage

Store the clipper and all accessories in the provided storage pouch in a cool, dry place, away from children.

6. TROUBLESHOOTING

• Clipper not turning on:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check the power switch is in the "ON" position.

• Trimmer not turning on:

- Check if the AA battery is inserted correctly with the correct polarity.
- Replace the battery if it is depleted.

• Clipper pulling hair or cutting poorly:

- Ensure blades are clean and free of hair debris.

- Apply Wahl clipper oil to the blades.
- Check if the guide comb is securely attached.
- A loose screw on the side of the clipper can sometimes affect performance and cause excessive noise. If applicable, gently tighten the screw.

- **Excessive noise or vibration:**

- Ensure the blades are properly aligned and secured.
- Apply oil to the blades.
- Check for any loose components, particularly the side screw on the main clipper.

7. SPECIFICATIONS

Feature	Detail
Model Number	1395-0465
Brand	Wahl
Main Clipper Power Source	Corded Electric
Mini Trimmer Power Source	Battery (1 x AA, not included)
Blade Material	Stainless Steel
Cutting Lengths (with combs)	3 mm, 6 mm, 10 mm, 13 mm, 16 mm, 19 mm, 22 mm, 25 mm
Cutting Length (Clipper without comb)	1 mm
Cutting Length (Mini Trimmer)	0.6 mm
Product Dimensions (L x W x H)	15.7 x 5.7 x 23 cm
Item Weight	466 Grams

8. WARRANTY AND SUPPORT

Wahl products are manufactured to high-quality standards. For warranty information, product support, or to purchase replacement parts, please refer to the official Wahl website or contact Wahl customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, visit: www.wahl.com

	<p><u>WAHL 2561 Hair Clipper User Manual and Instructions</u></p> <p>Comprehensive user manual for the WAHL 2561 hair clipper, including operating instructions, maintenance guide, safety warnings, and company contact information.</p>
	<p><u>Wahl Color Pro Cordless/Cordless Trimmer Operating Instructions and Care Guide</u></p> <p>Comprehensive guide for the Wahl Color Pro rechargeable trimmer, covering operation, charging, maintenance, troubleshooting, and warranty information. Includes instructions for trimming beards and mustaches with various guide combs.</p>
	<p><u>Wahl Clipper User Guide and Haircutting Instructions</u></p> <p>Comprehensive guide to using Wahl clippers, including safety precautions, maintenance, and step-by-step haircutting instructions for various styles. Learn how to properly oil, align, and use guide combs for professional-quality haircuts at home.</p>
	<p><u>Wahl Lithium-Ion Vacuum Trimmer 9870L: Safety Instructions and Warnings</u></p> <p>Official user manual and safety instructions for the Wahl Lithium-Ion Vacuum Trimmer 9870L. Includes detailed warnings, operating procedures, charging guide, troubleshooting, and battery disposal information in multiple languages.</p>
	<p><u>Wahl 9865 Rechargeable Product Guide</u></p> <p>A comprehensive product guide for the Wahl 9865 Rechargeable hair clipper, detailing attachment combs, usage instructions, and maintenance.</p>
	<p><u>Wahl Cordless Lithium-Ion Trimmer 8171L Operating Manual and Care Guide</u></p> <p>Comprehensive operating manual and care guide for the Wahl Cordless Lithium-Ion Trimmer, Model 8171L. Includes safety instructions, usage, charging, maintenance, troubleshooting, and disposal information.</p>