

[Manuals.plus](#) /

› [SOUNDLOGIC](#) /

› SoundLogic XT Athletic Waterproof Sport In-Ear Earbuds User Manual

## SOUNDLOGIC WEP-24/5960B

# SoundLogic XT Athletic Waterproof Sport In-Ear Earbuds User Manual

Model: WEP-24/5960B

## INTRODUCTION

This manual provides comprehensive instructions for the SoundLogic XT Athletic Waterproof Sport In-Ear Earbuds, Model WEP-24/5960B. Please read this manual thoroughly before using your earbuds to ensure proper operation and longevity. These earbuds are designed for active use, featuring a waterproof and sweatproof design, and a secure fit.



**Figure 1:** SoundLogic XT Athletic Waterproof Sport In-Ear Earbuds. This image displays the black in-ear earbuds with their ear hooks and 3.5mm audio jack cable.

## SETUP

---

Follow these steps to set up your SoundLogic XT earbuds for first use:

1. **Unpack:** Carefully remove the earbuds from their packaging. Ensure all components are present.
2. **Inspect:** Check the earbuds and cable for any visible damage.
3. **Connect:** Insert the 3.5mm audio jack into the headphone port of your audio device (e.g., smartphone, MP3 player, laptop). Ensure the plug is fully inserted for optimal sound quality.
4. **Fit:** Place the earbuds into your ears, ensuring the ear hooks are securely positioned over your outer ear for a stable fit, especially during physical activity.

## OPERATING INSTRUCTIONS

---

Once connected, your SoundLogic XT earbuds are ready for use. The operation is straightforward as they are wired earbuds.

- **Audio Playback:** Start playing audio from your connected device. Sound will be transmitted directly through the earbuds.
- **Volume Control:** Adjust the volume directly on your connected audio device. These earbuds do not feature integrated volume controls.
- **Media Control:** If your device supports it, the earbuds may allow basic media control (e.g., play/pause) through a single button on the cable, if present. Refer to your device's manual for compatibility.



**Figure 2:** Illustrative image of individuals engaged in physical activity, demonstrating the intended use of sport in-ear earbuds. The image shows a person wearing earbuds while running, highlighting the secure fit during movement.

## MAINTENANCE

---

Proper care and maintenance will extend the lifespan of your earbuds.

- **Cleaning:** Gently wipe the earbuds and cable with a soft, dry cloth. For ear tips, you may use a slightly damp cloth with mild soap, ensuring they are completely dry before reattaching. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the earbuds in a clean, dry place, away from extreme temperatures and direct sunlight. Avoid tangling the cable. The retractable cable feature can assist in neat storage.
- **Water Exposure:** While waterproof and sweatproof, avoid submerging the earbuds in water for extended periods. After exposure to sweat or rain, wipe them dry before storage.

# TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common problems and solutions:

| Problem                          | Possible Cause                                                                      | Solution                                                                                                    |
|----------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| No sound or low volume           | Loose connection, device volume too low, incorrect audio output selected on device. | Ensure the 3.5mm jack is fully inserted. Increase volume on your audio device. Check device audio settings. |
| Distorted sound                  | Damaged cable, dirty ear tips, audio source issue.                                  | Inspect the cable for damage. Clean ear tips. Test with a different audio source.                           |
| Earbuds fall out during activity | Improper fit.                                                                       | Adjust the ear hooks and earbud position to ensure a secure fit.                                            |

# SPECIFICATIONS

- **Model:** WEP-24/5960B
- **Driver Unit:** 10mm
- **Frequency Response:** 20-20KHz
- **Nominal Impedance:** 32 ohms
- **Sensitivity:** 90-100 dB
- **Plug Type:** 3.5mm Jack
- **Cord Length:** Approximately 4 ft (1.2 meters)
- **Connectivity:** Wired
- **Special Features:** Waterproof, Sweatproof, Retractable Cable
- **Item Weight:** 1.92 ounces (approx. 54 grams)
- **Product Dimensions:** 0.5 x 5.5 x 3.5 inches (approx. 1.27 x 13.97 x 8.89 cm)

# WARRANTY AND SUPPORT

Specific warranty information for the SoundLogic XT Athletic Waterproof Sport In-Ear Earbuds (Model WEP-24/5960B) is not provided in this document. For warranty details, technical support, or customer service inquiries, please refer to the product packaging or contact the manufacturer, Midwest Trading Group, directly. You may also visit the official SoundLogic website for further assistance.

Manufacturer: Midwest Trading Group

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

## Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

## Question

Example: How do I reset this device or fix this error?

## Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**