

Pioneer TF-FD31S-A

Pioneer TF-FD31S-A Digital Cordless Phone Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Pioneer TF-FD31S-A Digital Cordless Phone. This manual provides detailed instructions for the safe and efficient use of your new phone. Please read this manual thoroughly before use and keep it for future reference.



The main unit of the Pioneer TF-FD31S-A digital cordless phone, showcasing its compact design and display.

The Pioneer TF-FD31S-A is a DECT system cordless phone designed for ease of use and integration into any home environment. It features a large, easy-to-read 2.8-inch white backlight side display on the main unit and a 1.8-inch LCD on the handset. Key functionalities include nuisance call countermeasures with an 'Anshin Recording Warning' and 'Kantan Guard' (Easy Guard), an answering machine, and Caller ID. Its compact body, with a depth of only 8.0 cm, allows for flexible placement.

2. SETUP

2.1 Unpacking and Component Check

Before starting, ensure all components are present:

- Main Unit (Base Station)
- Cordless Handset
- AC Adapter for Main Unit
- Telephone Line Cord
- Rechargeable Battery for Handset
- User Manual (this document)

2.2 Connecting the Main Unit

1. Connect the telephone line cord to the LINE jack on the main unit and to your telephone wall jack.
2. Connect the AC adapter to the DC IN jack on the main unit and plug it into a standard electrical outlet.
3. Ensure the main unit's display powers on.

2.3 Installing and Charging the Handset Battery

1. Open the battery compartment cover on the back of the handset.
2. Insert the rechargeable battery, ensuring correct polarity.
3. Close the battery compartment cover.
4. Place the handset on the main unit's charging cradle. The charging indicator on the handset should illuminate. Allow at least 15-20 hours for the initial charge.



This image shows the cordless handset being charged, emphasizing that it can be charged in any orientation on the base unit.

2.4 Initial Settings (Date and Time)

After the handset is charged, follow the on-screen prompts or refer to the detailed menu instructions in the operating section to set the current date and time. This is important for accurate call logs and answering machine timestamps.

3. OPERATING INSTRUCTIONS

3.1 Making and Receiving Calls

- **To Make a Call:** Pick up the handset, wait for a dial tone, and dial the number. Press the Talk button if necessary.
- **To Receive a Call:** When the phone rings, pick up the handset or press the Talk button.
- **To End a Call:** Place the handset back on the main unit or press the End button.

3.2 Answering Machine Functions

The TF-FD31S-A features a digital answering system.

- **Activating:** Press the 'Answering Machine' button on the main unit or access through the handset menu.
- **Listening to Messages:** Press the 'Play/Stop' button on the main unit to listen to recorded messages. Use the 'Volume' buttons to adjust playback volume.
- **Deleting Messages:** Press the 'Guard/Delete' button during or after message playback to delete.

3.3 Nuisance Call Countermeasures

This phone includes features to help manage unwanted calls.

- **Anshin Recording Warning:** When an incoming call is detected, the phone can play a pre-recorded warning message to the caller, indicating that the call may be recorded. This can deter telemarketers or suspicious callers.
- **Kantan Guard (Easy Guard):** This feature allows you to easily block unwanted numbers or set specific call screening options. Refer to the handset menu for detailed settings.

3.4 Caller ID Function

If you subscribe to a Caller ID service, the caller's phone number will be displayed on the main unit's and handset's LCD screens before you answer the call. You can review past calls using the 'Call History' button.

見やすい子機 大型液晶1.8型※



※ビューエリアのサイズ (液晶パネルの大きさ)

A close-up of the handset's large, easy-to-read 1.8-inch LCD display, showing caller information.

3.5 Adjusting Volume

Use the 'Volume' buttons on the main unit or the side buttons on the handset to adjust the ringer volume during an incoming call or the earpiece volume during a conversation.

3.6 Power Outage Function (Full Cordless)

The TF-FD31S-A is designed to allow basic call functions even during a power outage, provided the handset battery is charged and 4 AAA alkaline batteries (sold separately) are installed in the main unit. This 'Full Cordless' feature enables you to make and receive calls for approximately 2 hours of continuous talk time or 4 hours of continuous standby.

停電時も話せる フルコードレス

突然の停電でも、受話子機や子機で「かける」「うける」ができる簡易停電通話機能を搭載しました。

※単4形アルカリ乾電池4本 (市販) を親機にセットする必要があります。

連続通話 約2時間

連続待受け 約4時間

Explanation of the phone's 'Full Cordless' feature, allowing calls during power outages. It indicates approximately 2 hours of continuous talk time and 4 hours of continuous standby.

4. MAINTENANCE

4.1 Cleaning

To clean your phone, wipe it with a soft, dry cloth. Do not use liquid or aerosol cleaners, as they may damage the finish or internal components. Avoid using abrasive materials.

4.2 Battery Care

- Ensure the handset battery is fully charged periodically, especially if the phone is not used frequently.
- Replace the handset battery when its performance significantly degrades (e.g., shorter talk/standby times). Use only the specified replacement battery.
- For the power outage function, regularly check and replace the 4 AAA alkaline batteries in the main unit as needed.

5. TROUBLESHOOTING

If you experience issues with your phone, try the following solutions:

Problem	Solution
No dial tone	Check if the telephone line cord is securely connected to both the main unit and the wall jack. Ensure the AC adapter is plugged in and the main unit has power.
Cannot make/receive calls	Verify the handset battery is charged. Check the telephone line connection. If using a DSL filter, ensure it is correctly installed.
Handset not charging	Ensure the handset is correctly seated in the main unit's charging cradle. Clean the charging contacts on both the handset and main unit with a dry cloth.
Poor sound quality	Move closer to the main unit. Ensure there are no large metal objects or other electronic devices interfering with the signal.
Answering machine not recording	Check if the answering machine is activated. Ensure there is sufficient memory for new messages.

6. SPECIFICATIONS

奥行8.0cmの コンパクトボディ

置き場所を選ばない省スペースタイプ。



This image illustrates the compact design of the phone's main unit, with a depth of only 8.0 cm, making it suitable for small spaces.

Feature	Detail
Brand	Pioneer
Model Number	TF-FD31S-A
Color	Turquoise Blue
Phone Type	Cordless (DECT)
Power Source	Corded Electric
Keypad Type	Single Keypad
Answering System	Digital
Caller ID	Yes
Multi-line Operation	Single Line
Product Weight	844 grams
Handset Battery	1 Product-specific rechargeable battery
Power Outage Backup	Requires 4 AAA alkaline batteries (not included)
Main Unit Display	2.8-inch white backlight LCD
Handset Display	1.8-inch LCD
ASIN	B00OYQGXS0

7. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Pioneer website. For technical support or further assistance, please contact Pioneer customer service through their official channels.

You can find more information and support resources on the [Pioneer Brand Store](#).