

[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire 316261900 Range/Stove/Oven Surface Burner Cap Instruction Manual

Frigidaire 316261900

Frigidaire 316261900 Range/Stove/Oven Surface Burner Cap Instruction Manual

Model: 316261900

INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Frigidaire 316261900 Range/Stove/Oven Surface Burner Cap. Please read these instructions carefully before proceeding to ensure safe and efficient operation.

PRODUCT OVERVIEW

The Frigidaire 316261900 is a genuine replacement surface burner cap designed for Frigidaire range, stove, and oven cooktops. This component covers the burner head, helping to distribute the flame evenly and protect the burner from spills and debris. It is made of durable cast iron and is black in color.



Image: The Frigidaire 316261900 Surface Burner Cap, a black, circular component.

SAFETY INFORMATION

- Always disconnect power to the appliance before attempting any installation or maintenance.

- Allow the cooktop and burner components to cool completely before handling.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Ensure the replacement part is compatible with your appliance model.
- If you are unsure about any step, consult a qualified technician.

SETUP AND INSTALLATION

This section outlines the steps for replacing an existing surface burner cap. Ensure the cooktop is cool and the appliance is disconnected from power before beginning.

1. **Prepare the Area:** Clear any cookware or debris from the cooktop surface.
2. **Remove Old Cap (if applicable):** Carefully lift the old burner cap off the burner head. It should simply rest on top.
3. **Inspect Burner Head:** Check the burner head for any food residue or blockages. Clean if necessary, ensuring the igniter is clear.
4. **Place New Cap:** Position the new Frigidaire 316261900 burner cap directly over the burner head, ensuring it sits flat and centered. The cap should rest securely without wobbling.
5. **Test Functionality:** Reconnect power to the appliance. Turn on the burner to a low setting to verify proper flame distribution and ignition. The flame should be even and blue.

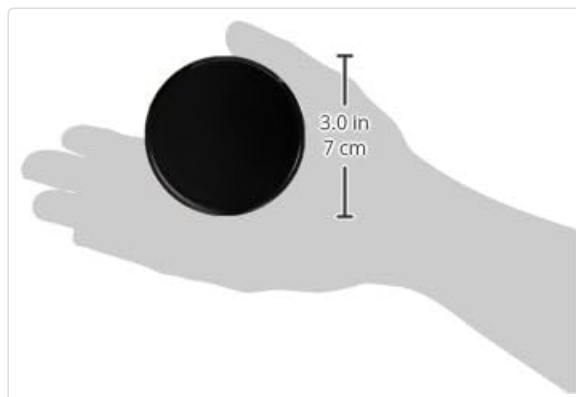


Image: The Frigidaire 316261900 Surface Burner Cap held in a hand, showing its approximate dimensions (3.0 inches / 7 cm diameter).

OPERATING INSTRUCTIONS

The surface burner cap is an integral part of your cooktop's burner assembly. Once correctly installed, its operation is automatic with the use of the burner.

- Ensure the burner cap is always in place before operating the burner.
- The cap helps to direct the flame for efficient cooking and protects the burner head.
- Do not operate the burner without the cap, as this can lead to improper flame distribution and potential safety hazards.

MAINTENANCE

Regular cleaning of the burner cap helps maintain optimal performance and appearance.

- **Daily Cleaning:** After the cooktop has cooled, wipe the burner cap with a damp cloth and mild detergent to remove food spills.
- **Deep Cleaning:** For stubborn stains, the burner cap can be removed and soaked in warm, soapy water. Use a non-abrasive brush or sponge to gently scrub away residue.
- **Drying:** Ensure the burner cap is completely dry before placing it back on the burner head. Moisture can interfere

with ignition.

- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the finish of the cap.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Uneven flame or poor ignition	Burner cap not seated correctly, or burner ports/igniter are dirty.	Ensure the cap is flat and centered. Clean the burner head and igniter thoroughly.
Cap appears discolored or damaged	Normal wear and tear, or exposure to excessive heat/harsh cleaning agents.	Clean as per maintenance instructions. If severely damaged, replacement may be necessary.
Cap wobbles	Improper seating or damage to the burner head.	Reseat the cap. Inspect the burner head for damage.

SPECIFICATIONS

Model Number: 316261900

Brand: Frigidaire

Material: Cast Iron

Color: Black

Item Weight: Approximately 4 ounces (113 grams)

Dimensions: Approximately 3.0 inches (7 cm) diameter

Part Type: Surface Burner Cap

WARRANTY AND SUPPORT

As a genuine Frigidaire replacement part, this burner cap is typically covered under the standard warranty terms for Frigidaire appliance parts. For specific warranty details, please refer to your appliance's original documentation or contact Frigidaire customer support directly.

For further assistance or to purchase additional genuine Frigidaire parts, please visit the official Frigidaire website or contact their customer service department.

[Frigidaire Official Website](#)