

ExquizOn RD-801

ExquizOn RD-801 Projector User Manual

Model: RD-801 | Brand: ExquizOn

1. INTRODUCTION

The ExquizOn RD-801 is a versatile HD LED multimedia projector designed for home cinema, gaming, and presentations. It offers a vibrant viewing experience with its 800x480 native resolution, supporting up to 1080P, 2000 lumens brightness, and a 1000:1 contrast ratio. With multiple input options, it connects seamlessly to various devices, providing an immersive entertainment solution.

Key features include:

- Native Resolution: 800x480 (supports 720P, 1080P)
- Brightness: 2000 Lumens
- Contrast Ratio: 1000:1
- Long Lamp Life: 50,000 hours (LED)
- Multiple Inputs: HDMI, USB, AV, VGA, TV
- Built-in Speakers

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present and in good condition:

- ExquizOn RD-801 LCD Projector
- Power Cord
- AV Cable
- VGA Cable
- Remote Control
- User's Manual



User's Manual



Remote Control

Projector ▼



AV Cable



Power Cable



VGA Cable

Image: Contents of the ExquizOn RD-801 projector package, showing the projector, remote control, AV cable, power cable, VGA cable, and the user's manual.

3. PRODUCT OVERVIEW

3.1 Front and Side View

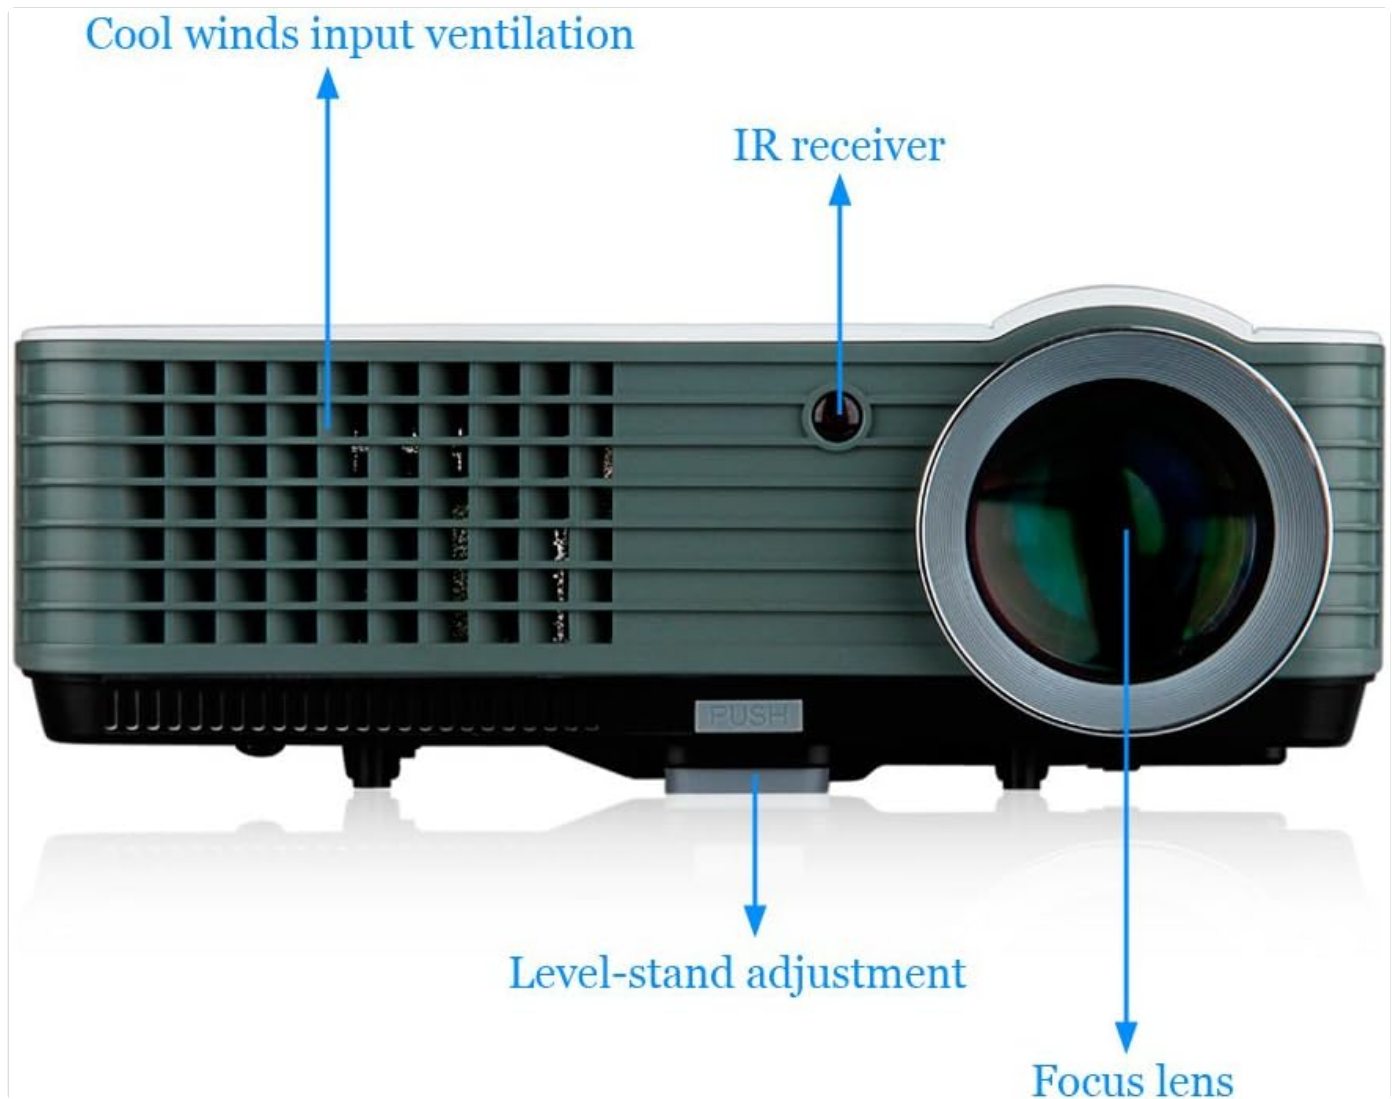 


Image: Side view of the projector, highlighting the cool winds input ventilation, IR receiver, level-stand adjustment, and the focus lens. The front features the projection lens. The side includes ventilation for cooling, an IR receiver for the remote control, a level-stand adjustment for tilting the projector, and the focus lens for image clarity.

3.2 Rear Panel and Input Terminals

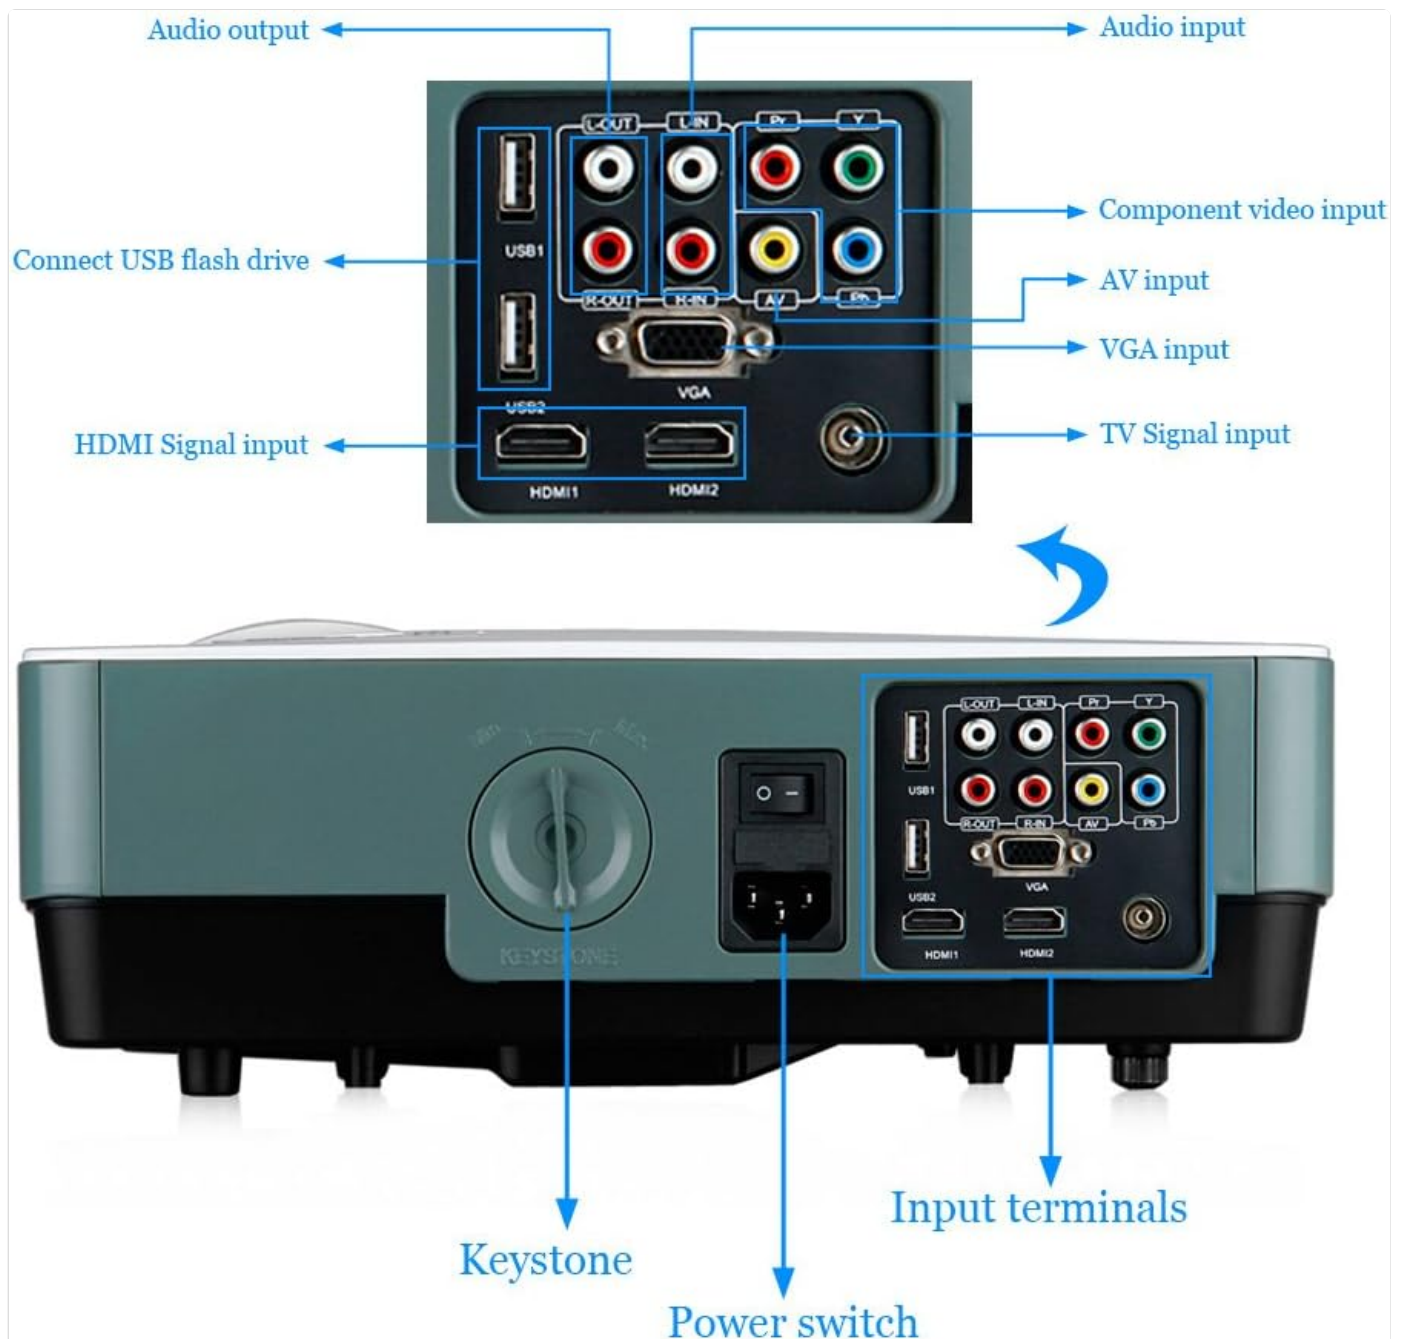 


Image: Rear panel of the projector, detailing the input terminals for HDMI, USB, AV, VGA, TV, and audio input/output ports. Also visible are the keystone correction knob and power switch.

The rear panel provides all necessary connection ports:

- **HDMI1/HDMI2:** For connecting high-definition devices like Blu-ray players, game consoles, or laptops.
- **USB1/USB2:** For connecting USB flash drives to play multimedia files.
- **AV:** For connecting devices using composite video and stereo audio cables.
- **VGA:** For connecting computers or laptops.
- **YPbPr (Component Video Input):** For connecting devices with component video output.
- **ATV (TV Signal Input):** For connecting an antenna for analog TV channels.
- **Audio Output:** For connecting external speakers or headphones.

Also located on the rear are the **Keystone** correction knob to adjust image distortion and the main **Power Switch**.

3.3 Top Panel Controls



Image: Detailed view of the projector's top control panel, including buttons for Menu, Source, navigation (up, down, left, right), OK, and Power.

The top panel features intuitive buttons for navigation and control:

- **Power Button:** To turn the projector on or off.
- **Menu Button:** To access the projector's settings menu.
- **Source Button:** To select the input source (HDMI, USB, AV, VGA, TV).
- **Navigation Buttons (Up/Down/Left/Right):** To navigate through menus and adjust settings.
- **OK Button:** To confirm selections.

3.4 Bottom View

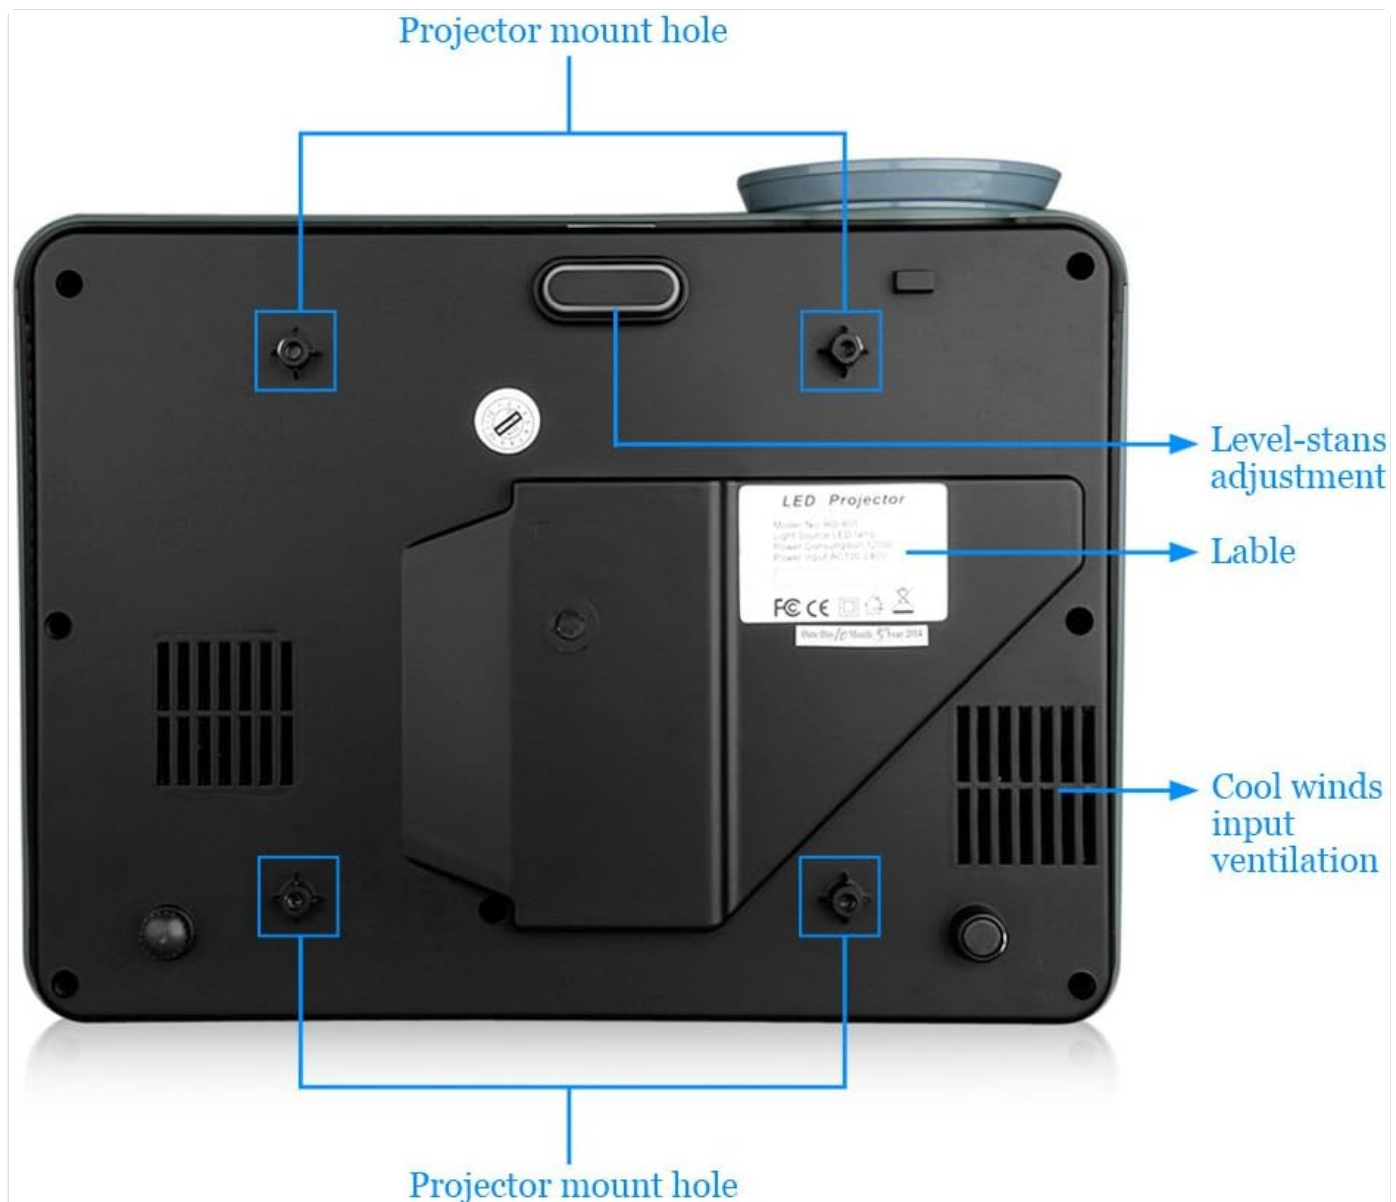 


Image: The bottom of the projector, indicating the locations of the projector mount holes for ceiling or tripod mounting, the level-stand adjustment, and the product information label.

The bottom of the projector includes:

- **Projector Mount Holes:** For mounting the projector to a ceiling mount or tripod.
- **Level-Stand Adjustment:** An adjustable foot to fine-tune the projection angle.
- **Product Label:** Contains model number, serial number, and electrical ratings.

4. SETUP

4.1 Placement

Place the projector on a stable, flat surface or mount it securely. Ensure there is adequate ventilation around the projector to prevent overheating. The optimal projection distance for a clear image is between 1.5 to 4 meters (approximately 50 to 140 inches diagonal screen size).

4.2 Power Connection

1. Connect the power cord to the projector's power input port.

2. Plug the other end of the power cord into a wall outlet.
3. Ensure the main power switch on the rear of the projector is in the 'ON' position.

4.3 Connecting Devices

The RD-801 offers multiple connectivity options:

- **HDMI:** Use an HDMI cable to connect your laptop, game console, or Blu-ray player to either HDMI1 or HDMI2 port.
- **VGA:** Connect your computer's VGA output to the projector's VGA port using a VGA cable.
- **AV:** Use the provided AV cable to connect devices like DVD players. Match the yellow, white, and red plugs to the corresponding ports.
- **USB:** Insert a USB flash drive into either USB1 or USB2 port to play media files directly.
- **TV (ATV):** Connect a coaxial antenna cable to the ATV port to receive analog television signals.

5. OPERATING THE PROJECTOR

5.1 Power On/Off

1. Press the Power button on the projector's top panel or the remote control to turn on the projector.
2. To turn off, press the Power button again. The projector will enter standby mode.

5.2 Source Selection

After connecting your device, press the **Source** button on the projector or remote control. Use the navigation buttons to select the desired input source (e.g., HDMI1, VGA, USB, AV, TV) and press **OK**.

5.3 Image Adjustment

- **Focus:** Rotate the focus lens ring on the front of the projector until the image appears sharp and clear.
- **Keystone Correction:** If the image appears trapezoidal (wider at the top or bottom), adjust the Keystone knob on the rear panel until the image is rectangular. The RD-801 supports 15-degree physical keystone correction.
- **Picture Settings:** Press the **Menu** button to access picture settings such as brightness, contrast, color, and aspect ratio (16:9 or 4:3).

5.4 Media Playback (USB)

When a USB flash drive is inserted and selected as the source, the projector will display a media browser. Navigate through folders and files using the remote control or top panel buttons. Select the desired photo, music, or video file and press **OK** to play.

6. MAINTENANCE

6.1 Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive cleaners or excessive force, as this can scratch the lens.

6.2 Cleaning the Projector Body

Wipe the exterior of the projector with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no liquid enters the ventilation openings.

6.3 Ventilation

Regularly check and clean the ventilation openings to ensure proper airflow. Blocked vents can lead to overheating and reduce the lifespan of the projector. The projector features a hyperfine air cooling technology to minimize noise while maintaining optimal temperature.



« Built-in stereo speakers
meet your visual needs at any time



Adopt Hyperfine air cooling technology
Audiovisual enjoyment, no noise. »

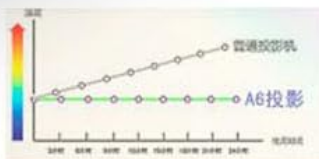 


Image: The projector showcasing its built-in stereo speakers and the advanced air cooling system designed for quiet operation.

6.4 Lamp Life

The LED lamp in your RD-801 projector has an extra-long life of approximately 50,000 hours, meaning it will likely not require replacement during the projector's lifetime under normal usage conditions.

7. TROUBLESHOOTING

If you encounter issues with your projector, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No image on screen	• Power cord not connected • Incorrect input source selected • Device not powered on or connected properly	• Check power connection and main power switch. • Press 'Source' button and select correct input. • Ensure connected device is on and cables are secure.
Image is blurry	• Focus not adjusted • Keystone not adjusted • Projector too close/far from screen	• Adjust the focus lens ring. • Adjust the Keystone knob. • Move the projector to an optimal distance (1.5-4m).
No sound	• Volume too low • Audio cable not connected (for AV/VGA) • External speakers not connected/powered	• Increase volume on projector or source device. • Ensure audio cables are correctly plugged in. • If using external speakers, check their power and connection.
Fan noise is loud	• Normal operation noise • Blocked ventilation	• The projector operates with a fan noise below 25dB. Ensure proper ventilation around the unit. • Clean any dust from the vents.
Cannot receive TV channels (ATV)	• Antenna not connected or signal weak • Incorrect TV system setting	• Ensure antenna is properly connected and receiving a strong signal. • Check TV system settings in the projector menu.

8. SPECIFICATIONS

Feature	Specification
Projector System	5 inch LCD TFT display
Lens	3 pieces of glass lenses, manual focus
Native Resolution	800x480 (supports 720P/1080P)
Brightness	2000 Lumens

Feature	Specification
Contrast Ratio	1000:1
Image Flip	360 degree flip
Aspect Ratio	16:9 & 4:3
Lamp Type	LED 100W, 50,000 hours life
Picture Size	50-140 inch
Keystone Correction	15 degree physical correction
Noise Level	<25 dB
Interface Inputs	HDMI1/HDMI2/USB1/USB2/AV/VGA/YPbPr/ATV
Product Dimensions	33 x 25.7 x 10.5 cm
Product Weight	3 KG

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase documentation or visit the official ExquizOn website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 ExquizOn. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question