

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [OVE Decors](#) /
- › [OVE Decors 735H Eco Smart Bidet Toilet User Manual](#)

## OVE Decors 735H

# OVE Decors 735H Eco Smart Bidet Toilet User Manual

Model: 735H

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your OVE Decors 735H Eco Smart Bidet Toilet. This one-piece elongated toilet combines a high-quality ceramic design with advanced features for enhanced hygiene and comfort. Please read this manual thoroughly before installation and use to ensure proper function and safety.



Image: Front view of the OVE Decors 735H Eco Smart Bidet Toilet, showcasing its sleek, one-piece elongated design in white.

## SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of electric shock, fire, injury, or property damage:

- Ensure the toilet is connected to a properly grounded electrical outlet.
- Do not immerse the electrical components in water or spray water directly onto the unit.
- Turn off the water supply and electrical power before performing any maintenance or cleaning.
- Do not attempt to repair or modify the unit yourself. Contact qualified service personnel.
- Keep children and individuals with reduced physical, sensory, or mental capabilities away from the unit unless supervised.

## PRODUCT FEATURES

The OVE Decors 735H Eco Smart Bidet Toilet offers a range of advanced features for comfort and hygiene:

- **Automatic Flushing:** The seat flushes automatically upon departure for hands-free operation.

- **Heated Seat:** Adjustable heated seat with pre-selected temperature settings for comfort.
- **Bidet Functions:** Adjustable water sprayer pressure, water temperature, and dryer temperature.
- **Integrated Multi-Function Remote Control:** Provides ultimate control over all features and settings.
- **LED Night Light:** Convenient integrated LED night light.
- **Soft-Close Seat:** Prevents slamming and ensures quiet operation.
- **WaterSense Certified:** Meets EPA flushing guidelines, using at least 20% less water than 1.6-gallon toilets.

## COMPONENTS INCLUDED

---

The following components are typically included with your OVE Decors 735H Eco Smart Bidet Toilet:

- OVE Decors 735H Smart Bidet Toilet Unit
- Multi-Function Remote Control
- Water Supply Line
- Water Filter
- Mounting Hardware (bolts, washers, nuts)
- Installation Template (if applicable)

## SETUP AND INSTALLATION

---

Professional installation is recommended for this product. Ensure all local plumbing and electrical codes are met. Before beginning, turn off the main water supply and ensure a dedicated electrical outlet (120V AC) is available near the installation area.

1. **Prepare the Area:** Remove the old toilet if applicable. Clean the flange area thoroughly.
2. **Install Water Filter and Supply Line:** Connect the water filter and flexible water supply line to the toilet unit before placing it on the floor. This connection point is often located in a restricted area once the toilet is mounted.
3. **Position the Toilet:** Carefully place the toilet over the floor flange, aligning the bolts.
4. **Secure the Toilet:** Fasten the toilet to the floor using the provided mounting hardware. Access to the bolts may be challenging, often requiring fastening by feel through a rear access hole. Ensure the toilet is stable and level.
5. **Connect Water Supply:** Connect the flexible water supply line to the shut-off valve. Slowly turn on the water supply and check for leaks.
6. **Connect Power:** Plug the toilet's power cord into a grounded electrical outlet.
7. **Test Functions:** Perform initial tests of flushing, bidet, and heated seat functions as described in the Operating Instructions section.

*Note: Detailed diagrams and specific torque specifications for bolts are typically found in a separate installation guide. If you do not have one, please contact OVE Decors customer support.*

## OPERATING INSTRUCTIONS

---

Your OVE Decors 735H Eco Smart Bidet Toilet is operated primarily via the integrated multi-function remote control. Familiarize yourself with the remote's layout and button functions.

### Basic Operation:

- **Automatic Flush:** The toilet is designed to flush automatically after you depart from the seat.
- **Manual Flush:** A manual flush button may be present on the side of the toilet or on the remote for additional flushing.

## Bidet Functions (via Remote Control):

- **Start Wash:** Press the "Wash" or "Rear Wash" button to activate the bidet spray.
- **Feminine Wash:** Press the "Feminine" or "Front Wash" button for a softer, wider spray.
- **Adjust Water Pressure:** Use the "+" and "-" buttons on the remote to increase or decrease water spray intensity.
- **Adjust Water Temperature:** Use the temperature control buttons to select your desired warm water temperature.
- **Dryer Function:** After washing, press the "Dry" button to activate the warm air dryer. Adjust air temperature as desired.
- **Nozzle Position:** Some remotes allow adjustment of the nozzle position forward or backward.
- **Stop:** Press the "Stop" button to cease any active bidet or dryer function.

## Comfort Features (via Remote Control):

- **Heated Seat:** Use the remote to turn the heated seat function on/off and adjust the temperature to your preference.
- **LED Night Light:** The night light typically activates automatically in low light conditions or can be controlled via the remote.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your smart toilet.

### Cleaning the Exterior:

- Before cleaning, unplug the unit from the electrical outlet and turn off the water supply.
- Wipe the exterior surfaces with a soft, damp cloth and a mild, non-abrasive cleaner.
- Do not use harsh chemicals, abrasive pads, or solvents, as these can damage the finish.
- Ensure no water enters the electrical components.

### Cleaning the Nozzle:

- The bidet nozzle may have a self-cleaning function. Refer to your remote control for this option.
- For manual cleaning, gently pull out the nozzle (if accessible) and wipe it with a soft cloth and mild soap. Do not use excessive force.

### Water Filter Replacement:

- The water filter should be replaced periodically according to manufacturer recommendations (typically every 6-12 months, depending on water quality and usage).
- Turn off the water supply and unplug the unit before replacing the filter.

## TROUBLESHOOTING

---

If you encounter issues with your OVE Decors 735H Eco Smart Bidet Toilet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power to the unit.	Power cord unplugged, circuit breaker tripped, or outlet malfunction.	Check power cord connection. Reset circuit breaker. Test outlet with another appliance.
Bidet spray not working or weak.	Water supply valve closed, water filter clogged, or nozzle blocked.	Ensure water supply valve is fully open. Replace water filter if due. Clean bidet nozzle.

Problem	Possible Cause	Solution
Heated seat not warming.	Heated seat function off, temperature setting too low, or sensor issue.	Activate heated seat via remote. Increase temperature setting. Ensure proper seating for sensor activation.
Automatic flush not activating.	Sensor obstruction or malfunction, or power issue.	Ensure sensor area is clear. Check power. Try manual flush.
Remote control not responding.	Dead batteries, remote out of range, or signal obstruction.	Replace remote control batteries. Ensure clear line of sight to the toilet's receiver.

If the problem persists after attempting these solutions, please contact OVE Decors customer support.

## SPECIFICATIONS

<b>Brand</b>	OVE Decors
<b>Model Number</b>	735H
<b>Color</b>	White
<b>Product Dimensions (D x W x H)</b>	31.31" x 16.38" x 23.8"
<b>Material</b>	Ceramic (Toilet), Plastic (Seat)
<b>Item Weight</b>	88 Pounds
<b>Installation Type</b>	Floor Mounted
<b>Shape</b>	Elongated (Oblong)
<b>Flush Type</b>	Quiet Flush Toilets (Single Flush, 1.6 GPF)
<b>GTIN / UPC</b>	828796000277, 723521713791

## WARRANTY AND SUPPORT

For specific warranty details, terms, and conditions, please refer to the warranty card included with your product or visit the official OVE Decors website. Keep your proof of purchase for warranty claims.

If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact OVE Decors customer support. Contact information can typically be found on the manufacturer's website or on your product packaging.

**Important:** Ensure you purchase from an authorized seller to guarantee warranty validity. Warranties may not be honored for products purchased from unauthorized retailers.