

[manuals.plus](#) /› [somfy](#) /› [Somfy Telis 16 RTS Pure 16-Channel Remote with Display User Manual \(Model 1811081\)](#)**somfy 1811081**

# Somfy Telis 16 RTS Pure 16-Channel Remote with Display

Model: Telis Pure 16-Channel (Part Number: 1811081)

## 1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Somfy Telis 16 RTS Pure 16-Channel Remote with Display. This remote control is designed to manage up to 16 individual or groups of Somfy RTS motorized devices, such as blinds, shades, or awnings. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## 2. KEY FEATURES

- Controls up to 16 individual or groups of RTS motorized devices.
- Integrated on-screen display for clear channel identification and feedback.
- "My" function allows saving a preferred intermediate position for quick access.
- Ergonomic design for comfortable handling.
- Battery-powered for wireless convenience.

## 3. PRODUCT OVERVIEW

The Somfy Telis 16 RTS Pure remote features a clear LCD screen and intuitive buttons for easy control of your motorized applications.

## A modern aesthetic quality

The clear and functional design provides a high-quality image with exceptional ease of use.

### ■ Comfort

- > Soft, rounded shape that's comfortable to hold.
- > Large screen for improved visibility.
- > Ergonomically-designed buttons.
- > Discreet wall clip.



### ■ Harmony

A choice of two finishes to match any décor.



#### Silver

A subtle tone that blends seamlessly with all interiors.



#### Pure

A modern look for sophisticated styles.

## The ultimate benefits



Exclusive to Somfy



### ■ The "my" button

Use this button to set your favorite position for an individual motorized application or a group of motorized applications and access it instantly!

Example: Program the motorized horizontal blinds to a favorite position of halfway open. Whenever you want to open them halfway, simply press the "my" button.

### ■ Convenient

- > Open or close hard-to-reach window coverings individually or as a group without having to interrupt your activity.



### ■ Effortless

- > Enjoy a sun-drenched morning by simply opening all the motorized blinds while preparing for the day. When the sun's strength gets too strong, just close the motorized blinds ... all with the press of a button!



**Figure 1:** Somfy Telis 16 RTS Pure Remote with key features labeled. This image highlights the signal indicator, on-screen LCD display, channel number, product icon, low battery alert, product name, set button, channel navigation keys, up button, 'My' button, and down button.

## Components:

- **Signal Indicator:** Lights up when a command is sent.
- **On-screen LCD Display:** Shows current channel, product icons, and battery status.
- **Channel Number:** Indicates the selected channel (1-16).
- **Product Icon(s):** Visual representation of the controlled device type.
- **Low Battery Alert:** Icon indicating low battery power.
- **Product Name:** Customizable name for the selected channel (up to 8 characters).
- **Set Button:** Used for programming and confirming settings.
- **Channel Navigation Keys:** Used to cycle through channels.
- **Up Button:** Moves the motorized device upwards or opens it.
- **"My" Button:** Stops the device or moves it to a pre-programmed favorite intermediate position.
- **Down Button:** Moves the motorized device downwards or closes it.

## 4. SETUP

---

### 4.1 Battery Installation

The Somfy Telis 16 RTS Pure remote requires 2 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote.
2. Slide the cover off.
3. Insert the 2 AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

### 4.2 Initial Pairing with Motorized Devices

To control your Somfy RTS motorized devices, the remote must be paired with them. Refer to the specific instructions for your motorized device for its pairing procedure. Generally, this involves putting the motor into programming mode and then pressing the program button on the remote.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Selecting a Channel

Use the channel navigation keys (left and right arrows below the display) to cycle through the 16 available channels. The selected channel number will be displayed on the LCD screen.

### 5.2 Controlling Devices

- Press the **Up** button to raise or open the selected motorized device.
- Press the **Down** button to lower or close the selected motorized device.
- Press the **"My"** button to stop the device at its current position or move it to a pre-programmed favorite intermediate position.



**Figure 2:** The Somfy Telis 16 RTS Pure Remote positioned on a table, ready for use.

### 5.3 Programming the "My" Position

The "My" function allows you to save a favorite intermediate position for your motorized device. To set this position:

1. Move the device to your desired intermediate position using the Up or Down buttons.
2. Press and hold the "**My**" button until the device briefly jogs (moves slightly up and down). This confirms the position has been saved.

To recall the "My" position, simply press the "**My**" button once when the device is fully open or closed.

## 6. MAINTENANCE

---

### 6.1 Battery Replacement

When the low battery alert icon appears on the LCD display, it is time to replace the batteries. Follow the steps in Section 4.1 for battery installation.

### 6.2 Cleaning

Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may

damage the surface or internal components.

## 7. TROUBLESHOOTING

- Remote not responding:** Check battery level. Ensure the remote is within range of the motorized device. Re-pair the remote if necessary (refer to your device's manual).
- Device not moving to "My" position:** Ensure the "My" position has been correctly programmed.
- Interference:** Keep the remote away from strong electromagnetic fields.

## 8. SPECIFICATIONS

Feature	Detail
Manufacturer	Somfy
Part Number	1811081
Item Model Number	Telis Pure, 16 Channel
Item Weight	5.9 ounces
Product Dimensions	5 x 3 x 6 inches
Batteries	2 AAA batteries required (included)
Battery Cell Type	Alkaline
Material	Plastic
Color	Whites
Max Number of Supported Devices	16
Compatible Devices	Roller Shade or Window Curtain

## 9. WARRANTY INFORMATION

The Somfy Telis 16 RTS Pure Remote comes with a **5-Year Warranty**. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the documentation provided with your product or visit the official Somfy website.

## 10. CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about additional Somfy products, please visit the official Somfy website or contact their customer service department. Contact information can typically be found on the product packaging or on the manufacturer's website.

