



[Manuals.plus](#) /

› [Avanti](#) /

› Avanti ERU200P3S 20-Inch Electric Range Oven Instruction Manual

## Avanti ERU200P3S

# Avanti ERU200P3S 20-Inch Electric Range Oven Instruction Manual

Model: ERU200P3S

[Safety Information](#)

[Setup &  
Installation](#)

[Operating Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your new Avanti ERU200P3S 20-inch Electric Range Oven. Please read all instructions carefully before installation and operation. Keep this manual for future reference.



*Avanti ERU200P3S 20-inch electric range oven, showcasing its compact design and oven interior.*

## IMPORTANT SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Ensure proper installation by a qualified technician.
- Do not touch hot surfaces. Use handles or knobs.
- Never use the appliance for warming or heating the room.
- Do not store flammable materials in or near the oven.
- Always supervise children when the appliance is in use.
- Disconnect power before servicing.

This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## SETUP & INSTALLATION

---

### Unpacking

Carefully remove all packaging materials, tape, and protective film from the range. Retain packaging for potential future transport. Inspect the appliance for any shipping damage.

### Placement

The Avanti ERU200P3S is designed as a freestanding electric range. Ensure adequate clearance around the appliance for proper ventilation and service access. Place the unit on a level, stable surface.

### Electrical Connection

This appliance requires a 220 Volt electrical supply. A power cord is sold separately and must be installed by a qualified electrician in accordance with all local codes and ordinances. Ensure the electrical outlet is properly grounded.



*Dimensions of the Avanti ERU200P3S electric range oven.*

## **OPERATING INSTRUCTIONS**

---

### **Control Panel Overview**

The range features user-friendly knob controls for both the surface burners and the oven. Indicator lights are present for surface operation and oven status.





*Front view of the control panel and burners.*

## **Surface Burner Operation**

Your range is equipped with four coil burners: three 6-inch burners and one 8-inch burner. Each burner has its own control knob. Turn the knob to the desired heat setting (LOW to HIGH). The surface indicator light will illuminate when any burner is active. These burners include temperature safety sensors for efficient and safe cooking.

## **Oven Operation**

The oven features bake and broil functions. Use the oven control knob to select the desired temperature or broil setting. An electronic oven thermostat maintains precise temperatures. The oven light can be turned ON/OFF via a dedicated switch, and an oven indicator light signals when the oven is heating.



*Oven interior with baking items, showing the oven light.*

## **Storage Drawer**

A convenient pull-out storage drawer is located beneath the oven, perfect for storing pots, pans, or baking sheets.

## **CARE & MAINTENANCE**

---

### **Cleaning the Cooktop**

Allow burners to cool completely before cleaning. Remove coil elements and chrome reflector bowls. Wash with warm, soapy water. For stubborn stains, use a non-abrasive cleaner. Wipe dry thoroughly before reassembling.

### **Cleaning the Oven**

For light soil, wipe the oven interior with warm, soapy water after each use. For heavier soil, use an oven cleaner according to the product instructions. Ensure the oven is cool before cleaning. The framed glass oven door can be cleaned with a glass cleaner.

## General Care

Wipe exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish. Regularly check the power cord for any damage.

## TROUBLESHOOTING

---

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate	No power supply; circuit breaker tripped.	Check power connection; reset circuit breaker.
Surface burner not heating	Burner not seated correctly; control knob not set.	Ensure burner is properly connected; turn knob to desired setting.
Oven not heating	Oven control not set; heating element issue.	Verify oven control is set to a temperature; if problem persists, contact service.
Uneven cooking	Improper rack placement; cookware issues.	Adjust rack position; use appropriate cookware.

If troubleshooting steps do not resolve the issue, please contact Avanti customer support.

## SPECIFICATIONS

---

- **Model:** ERU200P3S
- **Capacity:** 2.1 Cu. Ft. (Oven)
- **Burners:** 4 Coil Burners (Three 6-inch, One 8-inch)
- **Fuel Type:** Electric
- **Voltage:** 220 Volts
- **Controls:** Knob
- **Oven Features:** Bake/Broil, Electronic Thermostat, Oven Light
- **Additional Features:** Framed Glass Oven Door, Pull-out Storage Drawer, Surface and Oven Indicator Lights, Temperature Safety Sensors
- **Material:** Stainless Steel
- **Installation Type:** Freestanding
- **Dimensions (D x W x H):** 25"D x 19.5"W x 40.5"H
- **Weight:** 85 Pounds

## WARRANTY & SUPPORT

---

### Manufacturer's Warranty

This Avanti electric range oven is backed by Avanti's 1-Year Manufacturer Limited Warranty. Please refer to the warranty card included with your product for full terms and conditions.

### Customer Support

For technical assistance, parts, or service inquiries, please visit the official Avanti store or contact their customer support. You can find more information at the [Avanti Store on Amazon](#).