

Walker 53887

Walker 53887 Exhaust Pipe Instruction Manual

For Scion xB (2008-2015)

1. PRODUCT OVERVIEW

This manual provides instructions and information for the Walker 53887 Exhaust Pipe. This component is designed as a direct-fit replacement for specific vehicle applications, ensuring compatibility and performance similar to original equipment.



Image 1.1: The Walker 53887 Exhaust Pipe, designed for direct replacement.

Key Features:

- **Compatibility:** Specifically designed to fit Scion xB models from 2008 to 2015.
- **Corrosion Inhibition:** Constructed from durable aluminized-steel to resist corrosion and maintain performance.
- **Easy Installation:** Features precision bends, OE-style routings, hangers, and connectors for straightforward installation.
- **OE-Style Performance:** Engineered for a precise fit and performance comparable to original equipment.
- **Material Quality:** Made from high-quality materials for durability and extended service life.

PREMIUM MATERIALS

Made from high-quality materials for durability and long life



Image 1.2: Illustration of various exhaust components highlighting the use of premium materials for durability.

2. INSTALLATION (SETUP)

Proper installation of the Walker 53887 Exhaust Pipe is crucial for optimal performance and longevity. It is highly recommended that installation be performed by a qualified automotive professional.

General Installation Guidelines:

1. **Vehicle Preparation:** Ensure the vehicle is safely lifted and secured on a hoist or jack stands. Allow the exhaust system to cool completely before beginning work.
2. **Component Identification:** Verify that the Walker 53887 Exhaust Pipe is the correct part for your vehicle by checking the model number and compatibility information.
3. **Removal of Old Component:** Carefully remove the existing exhaust pipe, paying attention to all hangers, clamps, and fasteners. Use appropriate tools to avoid damage to surrounding components.
4. **Surface Preparation:** Clean any mating surfaces on the existing exhaust system to ensure a proper seal with the new pipe.

5. **New Pipe Installation:** Position the Walker 53887 Exhaust Pipe, aligning it with the existing exhaust components. Secure it using new gaskets, clamps, and fasteners as required. Ensure all connections are tight and leak-free.
6. **Alignment Check:** Verify that the new exhaust pipe is properly aligned and does not interfere with other vehicle components. Ensure adequate clearance from the chassis and suspension.
7. **Final Inspection:** After installation, start the vehicle and check for any exhaust leaks or unusual noises. Re-tighten fasteners if necessary after a short period of operation.

Warning: Working under a vehicle can be dangerous. Always use proper safety equipment and follow manufacturer guidelines for vehicle lifting and support. Exhaust components can be extremely hot.

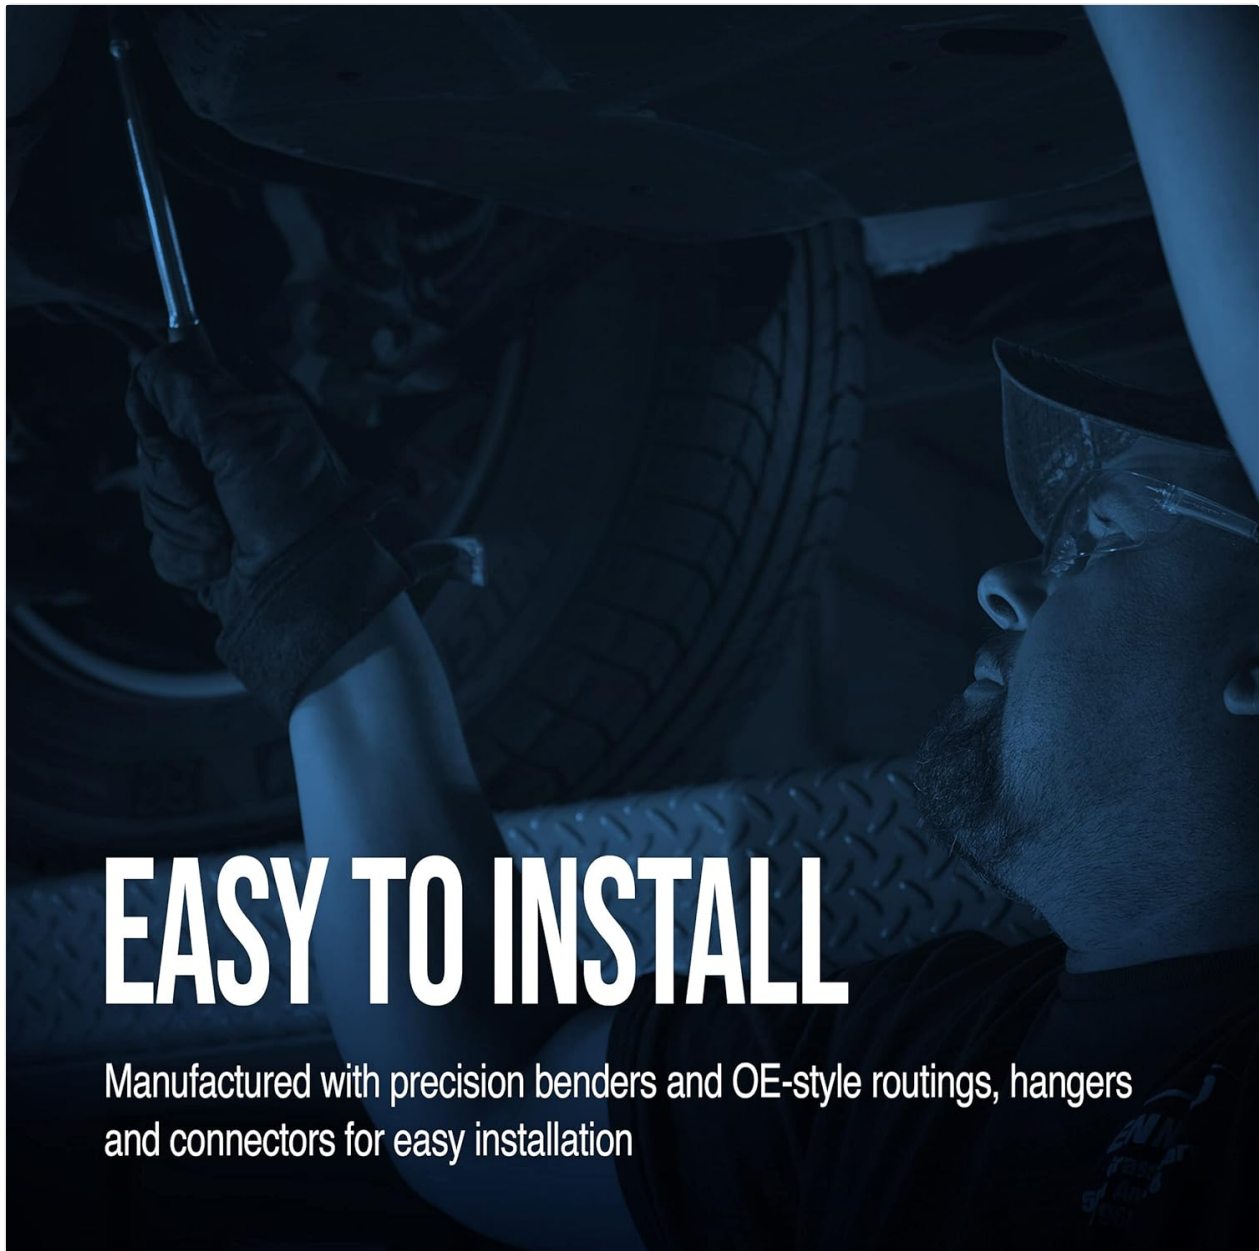 


Image 2.1: A professional mechanic performing an exhaust system installation, demonstrating the ease of installation with proper tools.

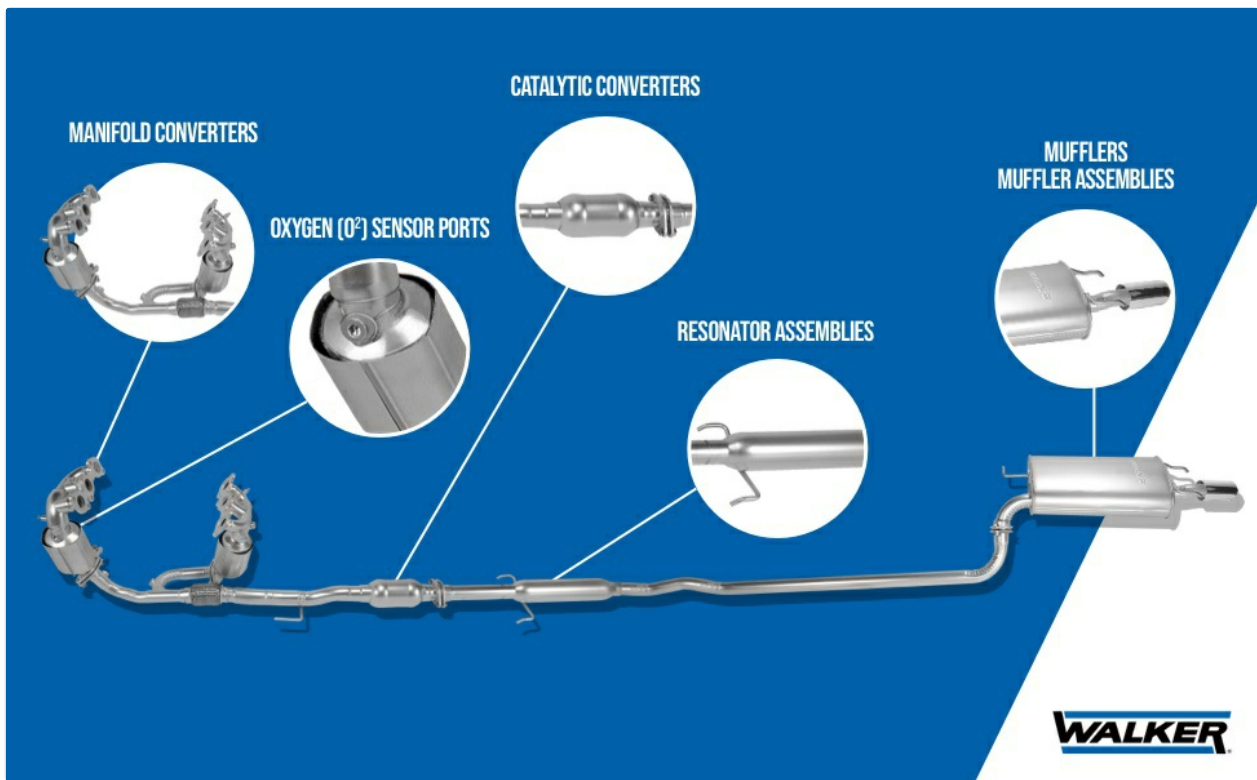 


Image 2.2: A diagram illustrating the various components of a typical automotive exhaust system, including manifold converters, oxygen sensor ports, catalytic converters, resonator assemblies, and mufflers.

3. OPERATING CONSIDERATIONS

Once the Walker 53887 Exhaust Pipe is correctly installed, the vehicle's exhaust system should function as intended, providing efficient exhaust gas flow and maintaining appropriate noise levels.

Post-Installation Expectations:

- **Normal Operation:** The exhaust pipe is designed to integrate seamlessly with your vehicle's existing exhaust system, contributing to its overall performance and sound characteristics.
- **Initial Odor/Smoke:** It is normal to experience a slight burning smell or light smoke during the first few drives after installation. This is typically due to protective coatings on the new pipe burning off and should dissipate quickly.
- **Sound:** The exhaust sound should be consistent with the vehicle's original equipment. Any significant change in sound may indicate an issue.

OE PERFORMANCE

Designed to perform and fit like original equipment



Image 3.1: A vehicle in motion, symbolizing the restoration of original equipment performance after installation of the exhaust pipe.

4. MAINTENANCE

Regular inspection and basic maintenance can help extend the life of your Walker 53887 Exhaust Pipe and the entire exhaust system.

Maintenance Recommendations:

- **Periodic Inspection:** Routinely inspect the exhaust system for signs of rust, cracks, loose connections, or damage. Pay close attention to welds, hangers, and clamps.
- **Check for Leaks:** Listen for hissing or puffing sounds, which may indicate an exhaust leak. Leaks can also be identified by black soot around joints or cracks.
- **Secure Hangers and Clamps:** Ensure all exhaust hangers and clamps are securely fastened. Loose components can lead to excessive vibration and premature wear.
- **Avoid Road Hazards:** Drive carefully to avoid impacts with road debris, speed bumps, or uneven

surfaces that could damage the exhaust system.

- **Professional Check-ups:** Include exhaust system inspection as part of your vehicle's regular service appointments.

5. TROUBLESHOOTING

If you experience issues with your exhaust system after installing the Walker 53887 Exhaust Pipe, consider the following common problems and potential solutions.

Common Issues:

- **Excessive Noise:**
 - **Possible Cause:** Loose connections, exhaust leak, damaged muffler or resonator, or a broken hanger.
 - **Solution:** Inspect all connections for tightness. Check for visible leaks (soot marks). Ensure all hangers are intact and supporting the system correctly.
- **Rattling or Vibrations:**
 - **Possible Cause:** Loose exhaust components, broken hangers, or contact with the vehicle's chassis.
 - **Solution:** Check all mounting points and hangers. Ensure the exhaust pipe has adequate clearance from the vehicle's undercarriage.
- **Exhaust Fumes in Cabin:**
 - **Possible Cause:** Significant exhaust leak, especially near the engine or passenger compartment.
 - **Solution:** Immediately investigate and repair any exhaust leaks. This is a serious safety concern due to carbon monoxide.
- **Reduced Engine Performance or Fuel Economy:**
 - **Possible Cause:** Restricted exhaust flow (e.g., collapsed pipe, internal blockage) or a significant exhaust leak affecting sensor readings.
 - **Solution:** Inspect the entire exhaust system for blockages or severe leaks. Professional diagnosis may be required.

If troubleshooting steps do not resolve the issue, consult a qualified automotive technician.

BETTER TOGETHER

Use premium Walker accessories when installing Walker catalytic converters and mufflers for a complete exhaust system upgrade

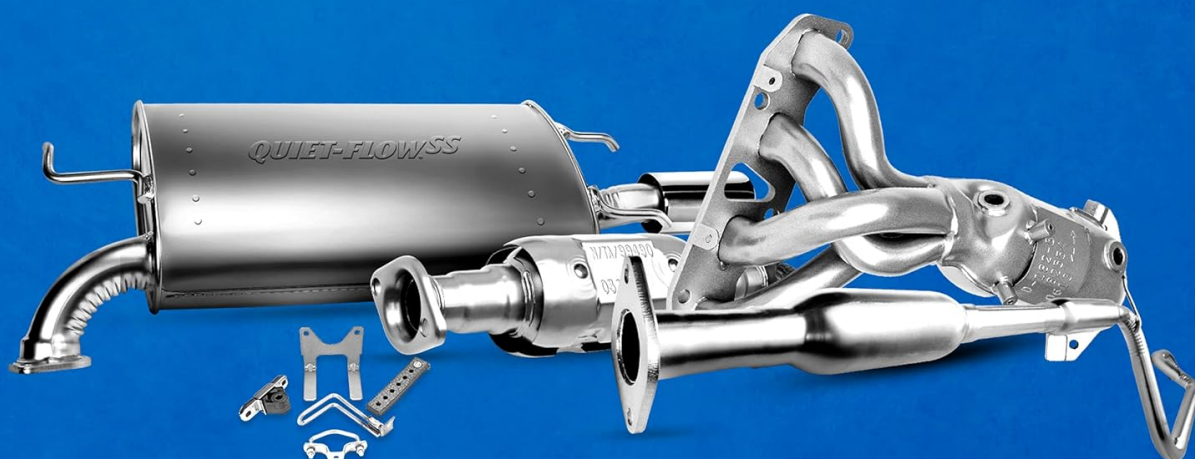 


Image 5.1: A collection of Walker exhaust system components, emphasizing that using compatible parts together ensures optimal system performance.

6. SPECIFICATIONS

The following specifications pertain to the Walker 53887 Exhaust Pipe:

AVAILABLE IN DIFFERENT SIZES

Offered in a variety of lengths and diameters for your vehicle repair needs

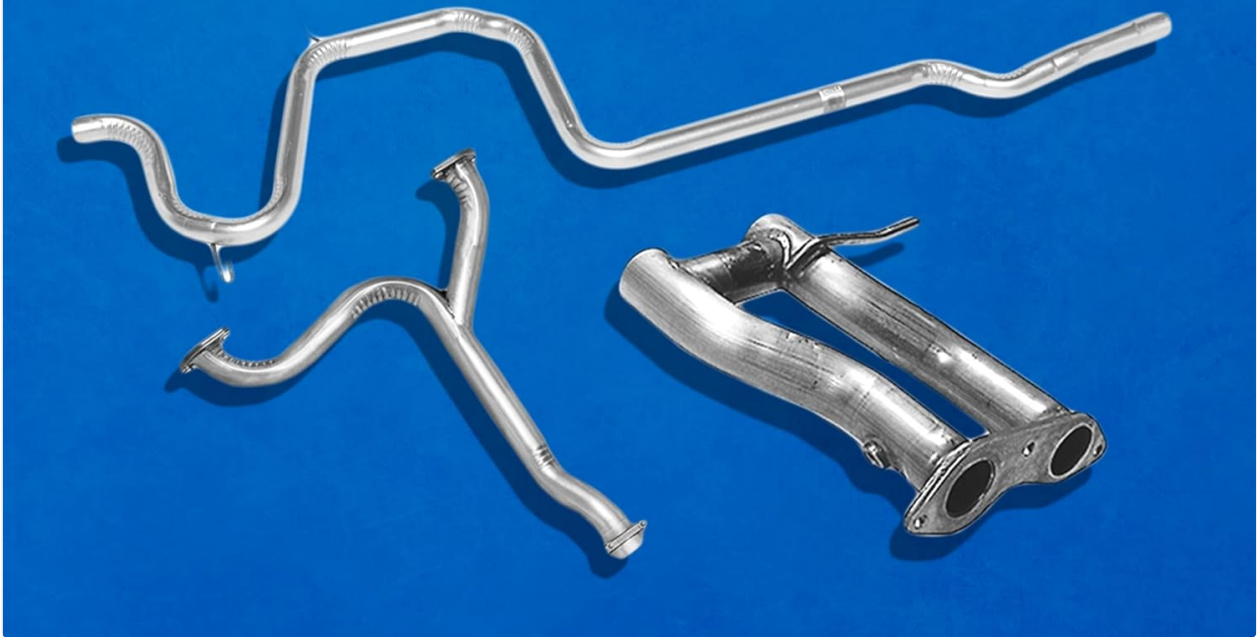 


Image 6.1: An assortment of exhaust pipes, illustrating the variety of lengths and diameters available for different vehicle repair needs.

Specification	Detail
Model Number	53887
Brand	Walker
Installation Type	Bolt-On
Material	Alloy Steel (Aluminized Steel)
Item Weight	6.3 pounds
Product Dimensions	10 x 30 x 6 inches
Vehicle Service Type	Car
Shape	Round

Specification	Detail
UPC	086387538879

7. WARRANTY INFORMATION

Specific warranty details for the Walker 53887 Exhaust Pipe are not provided within this document. For information regarding product warranty, including terms, conditions, and duration, please refer to the official Walker product packaging or contact Walker customer service directly.

8. SUPPORT

 
For technical assistance, installation questions, or further product inquiries, please contact Walker customer support or the retailer from whom the product was purchased. Ensure you have your product model number (53887) and vehicle information readily available when seeking support.



Image 8.1: The official logo for Walker Exhaust Systems.




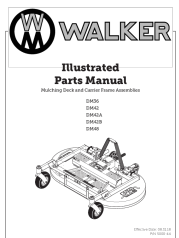

© 2023 Walker Exhaust Systems. All rights reserved.

Related Documents - 53887

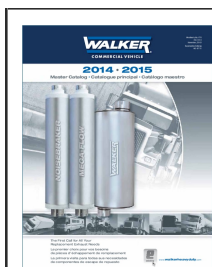

[Walker Commercial Vehicle 2014-2015 Master Catalog](#)

Comprehensive catalog from Walker featuring exhaust system components for commercial vehicles, including mufflers, flex pipes, and accessories. Covers heavy-duty, medium-duty trucks, buses, and agricultural applications with model identification and technical specifications.

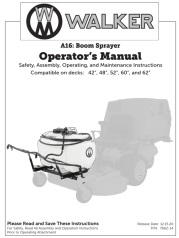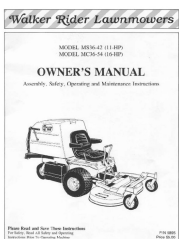 <p>WALKER A16 Boom Sprayer Operator's Manual Safety, Assembly, Operating and Maintenance Instructions Compatible on decks: 42", 48", 52", 60", and 62"</p> <p>Please Read and Save These Instructions For Future Reference</p>	<p>Walker A16 Boom Sprayer Operator's Manual: Safety, Assembly, Operation, Maintenance</p> <p>Comprehensive operator's manual for the Walker A16 Boom Sprayer, covering safety instructions, assembly procedures, operating guidelines, maintenance tips, troubleshooting, and parts lists. Compatible with various Walker mower decks.</p>
 <p>Walker Rider Lawnmowers MODEL MS36-42 (11-HP) MODEL MC36-54 (16-HP) OWNER'S MANUAL Assembly, Safety, Operating and Maintenance Instructions</p> <p>Please Read and Save These Instructions For Future Reference</p>	<p>Walker Rider Lawnmower Owner's Manual MS36-42 MC36-54</p> <p>Owner's manual for Walker Rider Lawnmower models MS36-42 (11-HP) and MC36-54 (16-HP), detailing assembly, safety, operation, and maintenance. Includes specifications and troubleshooting.</p>
 <p>WALKER Illustrated Parts Manual C19</p> <p>Please Read and Save These Instructions For Future Reference</p>	<p>Walker C19 Illustrated Parts Manual</p> <p>Detailed illustrated parts manual for the Walker C19 riding mower, providing comprehensive lists and diagrams for all components, including chassis, engine, drive systems, and accessories. Essential for maintenance and repair.</p>
 <p>WALKER Illustrated Parts Manual Mulching Decks and Carrier Frame Assemblies DM36 DM42 DM42A DM42B DM48</p> <p>Please Read and Save These Instructions For Future Reference</p>	<p>Walker Illustrated Parts Manual for DM36, DM42, DM42A, DM42B, DM48 Mulching Decks and Carrier Frames</p> <p>This illustrated parts manual provides detailed information for Walker DM36, DM42, DM42A, DM42B, and DM48 mulching decks and carrier frame assemblies. It includes part numbers, descriptions, diagrams, and assembly instructions to help identify and order replacement components for Walker lawn mowers.</p>
 <p>WALKER Illustrated Parts Manual T23</p> <p>Please Read and Save These Instructions For Future Reference</p>	<p>Walker T23 Illustrated Parts Manual</p> <p>Comprehensive illustrated parts manual for the Walker T23 commercial rider mower. Includes detailed diagrams, part numbers, and assembly information for maintenance and repair of all major components, including the Rehlko/Kohler engine.</p>