

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PROSCAN](#) /

› [Proscan CRK83X PSVR82 TV Remote Control User Manual](#)


PROSCAN CRK83X PSVR82

Proscan CRK83X PSVR82 TV Remote Control User Manual

Model: CRK83X PSVR82

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Proscan CRK83X PSVR82 TV Remote Control. This remote is designed to work seamlessly with various Proscan TV and VCR models, offering a direct replacement or compatible control solution.

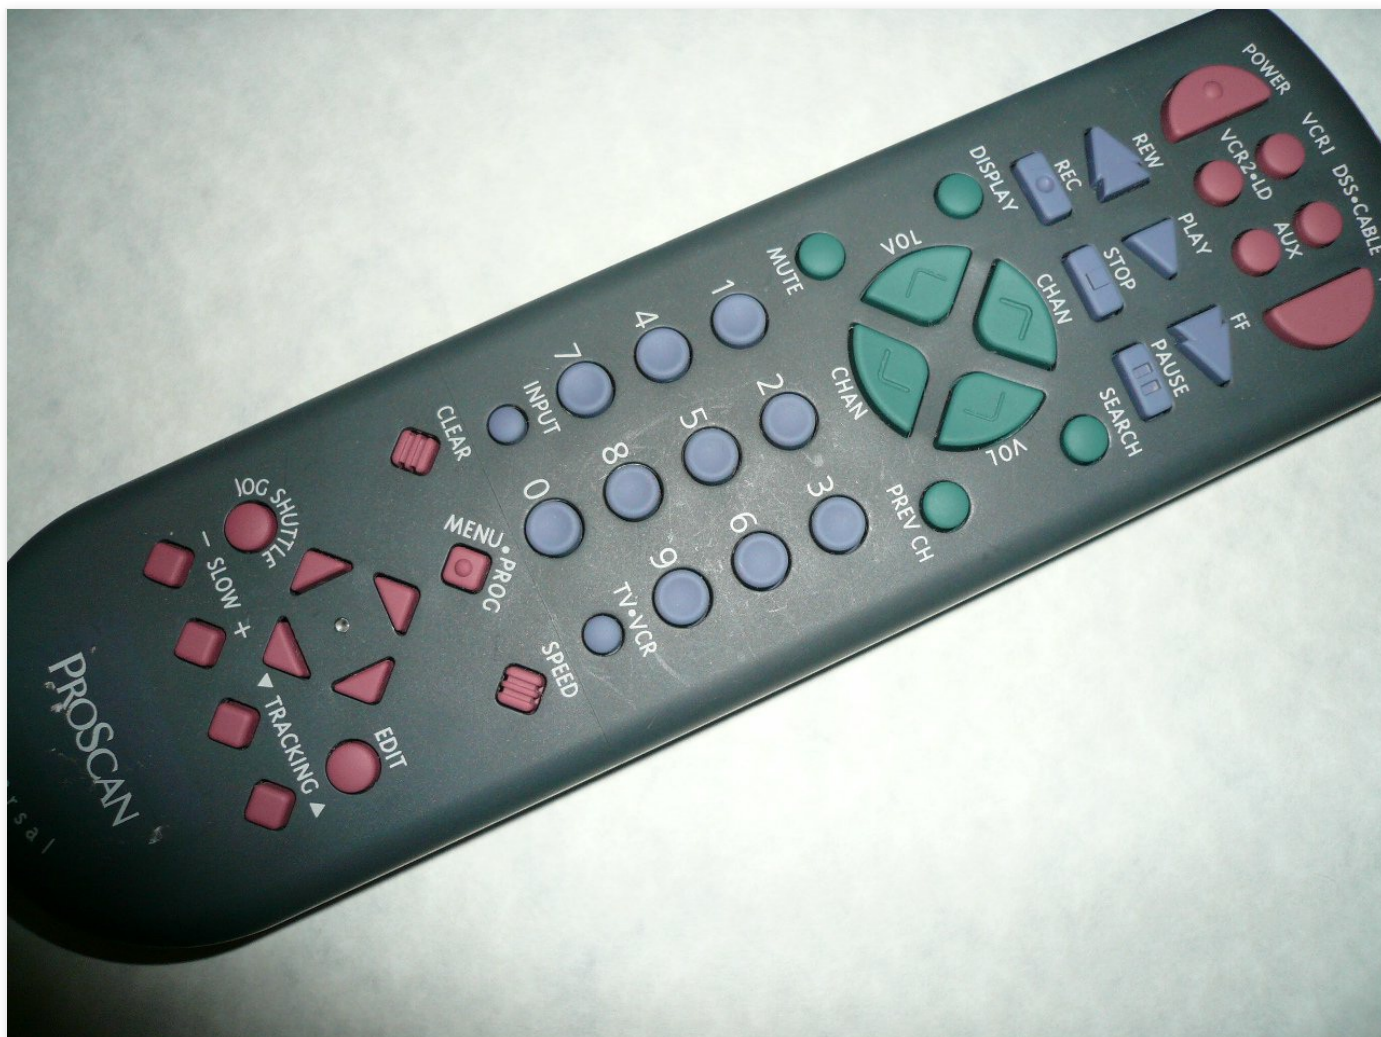

An image showing the Proscan CRK83X PSVR82 TV Remote Control, highlighting its ergonomic design and button layout. The remote is dark gray with purple and teal buttons, clearly labeled for various functions.

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

2. Initial Use

The Proscan CRK83X PSVR82 remote control is typically pre-programmed for compatible Proscan TV and VCR models. No complex programming steps are usually required for initial use with supported devices. Simply point the remote at your device and press the desired function button.

This remote is compatible with a wide range of models, including but not limited to: P5VR74, PAVR57, PCVR72, PRVR71, PSDR72, PSDR73, PSNKVSR72, PSNPSVR57, PSNPSVR65, PSNPSVR70, PSNPSVR71, PSNPSVR72, PSNPSVR73, PSNPSVR74, PSNPSVRR73, PSNR65, PSNVR74, PSRV65, PSRV71, PSRV72, PSRV74, PSRVR65, PSRVR71, PSUR70, PSUR72, PSV174, PSV65, PSV71, PSV72, PSVDR73, PSVER72, PSVH57, PSVP71, PSVR22, PSVR27, PSVR57, PSVR61, PSVR62, PSVR65, PSVR72L, PSVR72VCR, PSVR75, PSVR79, PSVR83, PSVT73, PSVV73, PSZR65, PSZR71, PSZR73, PVSR73, R65, RCU800, RSVR73, SPVR65, SSVR62, VR653HF, VR730, VR730HF.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your television and VCR.

Button Name	Function
POWER	Turns the connected device (TV/VCR) on or off.
VCR1, DSS/CABLE, VCR2/LD, AUX	Selects the input source for the television or VCR.
MUTE	Mutes or unmutes the audio output.
VOL +/-	Adjusts the volume level up or down.
CHAN +/-	Changes the channel up or down.
PREV CH	Switches to the previously viewed channel.
DISPLAY	Displays on-screen information such as channel number or time.
REC	Initiates recording on the VCR.
REW	Rewinds the tape during VCR playback.
PLAY	Starts playback of a tape or disc.
FF	Fast forwards the tape during VCR playback.
STOP	Stops playback or recording.
PAUSE	Pauses playback or recording.

Button Name	Function
SEARCH	Activates search function, typically for VCR content.
Number Pad (0-9)	Directly enters channel numbers or menu selections.
INPUT	Cycles through available input sources.
CLEAR	Clears entered numbers or menu selections.
MENU / PROG	Accesses the on-screen menu or programming functions.
TV-VCR	Toggles control between TV and VCR modes.
JOG SHUTTLE	Provides frame-by-frame or variable speed control for VCR playback.
SLOW +/-	Adjusts slow-motion speed during VCR playback.
SPEED	Adjusts playback speed, typically for VCR.
TRACKING ▲ / ▼	Adjusts the VCR tracking for optimal picture quality.
EDIT	Activates editing functions, typically for VCR.

MAINTENANCE

Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Refer to the "Battery Installation" section under Setup for detailed instructions.

Always dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working.	<ul style="list-style-type: none"> • Batteries: Check if batteries are inserted correctly with correct polarity (+/-). Replace old or dead batteries. • Line of Sight: Ensure there are no obstructions between the remote and the device's infrared sensor. • Distance: You may be too far from the device. Move closer. • Device Power: Ensure the TV/VCR is powered on.

Problem	Possible Cause / Solution
Remote works intermittently.	<ul style="list-style-type: none">• Low Batteries: Batteries may be weak. Replace them.• Interference: Other electronic devices might be causing interference.
Certain buttons do not respond.	<ul style="list-style-type: none">• Mode Selection: Ensure the remote is in the correct mode (e.g., TV mode for TV functions, VCR mode for VCR functions). Use the VCR1, VCR2/LD, DSS/CABLE, AUX, or TV-VCR buttons to switch modes.• Compatibility: Verify that the function you are trying to use is supported by your specific TV or VCR model.

SPECIFICATIONS

- **Brand:** PROSCAN
- **Model:** CRK83X PSVR82
- **Manufacturer:** Proscan
- **Compatible Devices:** Television (and various Proscan VCR models as listed in Setup section)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **ASIN:** B00P82T2LS
- **Date First Available:** November 4, 2014

WARRANTY AND SUPPORT

Specific warranty information for the Proscan CRK83X PSVR82 TV Remote Control is not provided in this manual. Please refer to the product packaging or contact your retailer for details regarding warranty coverage.






For further assistance or technical support, please contact the manufacturer or your point of purchase. No specific support contact details are available in this document.



© 2024 PROSCAN. All rights reserved.

Related Documents - CRK83X PSVR82

尺寸105*148mm 80g书纸 黑白印刷	Proscan Elite 13.3" Swivel Screen Portable DVD Player User Manual This user manual provides comprehensive instructions for the Proscan Elite 13.3" Swivel Screen Portable DVD Player (Model No.: PEDVD1332), covering setup, operation, features, troubleshooting, and warranty information.
------------------------------	---

<p>PROSCAN</p> <p>PLT7777G</p>  <p>USER'S MANUAL</p>	<p>PROSCAN PLT7777G Tablet User Manual</p> <p>Comprehensive user manual for the PROSCAN PLT7777G tablet, covering setup, features, system settings, specifications, and important attention points.</p>
	<p>PROSCAN PPS1339 DG Bluetooth Speaker User Manual</p> <p>User manual for the PROSCAN PPS1339 DG Bluetooth Speaker, detailing safety instructions, features like Bluetooth 5.0 and AUX input, operation, charging, troubleshooting, and warranty information from Curtis International Ltd.</p>
	<p>Proscan PSB3205 Bluetooth TV Soundbar Speaker User Manual</p> <p>User manual for the Proscan PSB3205 Bluetooth TV Soundbar Speaker. Learn about setup, features, specifications, and troubleshooting for enhanced audio.</p>
<p>PROSCAN</p> <p>PLT7802</p>  <p>USER'S MANUAL</p>	<p>Proscan PLT7802 User's Manual</p> <p>User manual for the Proscan PLT7802 tablet, providing detailed instructions on setup, features, system settings, specifications, and important usage precautions.</p>
	<p>Proscan PSP1705 Bluetooth Speaker: User Manual & Setup Guide</p> <p>Get started with your Proscan PSP1705 Bluetooth Speaker. This user manual provides essential safety information, setup instructions, features overview, troubleshooting tips, and warranty details for optimal use.</p>