

## Smartwares CL-1492

# Smartwares CL-1492 Alarm Clock Radio User Manual

Model: CL-1492

## INTRODUCTION

Thank you for purchasing the Smartwares CL-1492 Alarm Clock Radio. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper functionality and to maximize your experience.

The Smartwares CL-1492 is designed to provide reliable timekeeping, dual alarm functionality, FM radio, and a unique time projection feature. It ensures you wake up on time, every time, with your preferred settings.

## PACKAGE CONTENTS

- Smartwares CL-1492 Alarm Clock Radio
- User Manual (this document)

*Note: A CR2032 battery (not included) is required for backup memory function.*

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your Smartwares CL-1492 Alarm Clock Radio.



**Figure 1:** Front view of the Smartwares CL-1492 Alarm Clock Radio. It features a large green digital time display, control buttons below the display, and an adjustable time projector on the left side.

### Key Features:

- Digital FM Radio Alarm Clock
- Dual Alarm Function
- 10 Preset Radio Stations
- Time Projection onto Wall or Ceiling
- Adjustable Display Brightness
- Snooze Function
- Weekend Alarm Cancellation
- CR2032 Battery Backup (battery not included)

### SETUP

#### 1. Power Connection:

Connect the alarm clock radio to a standard 230 Volt AC power outlet. The display will light up.

#### 2. Installing Backup Battery:

To retain time and alarm settings during a power outage, install a CR2032 button cell battery (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-) when inserting the battery.

#### 3. Setting the Time:

1. Press and hold the **TIME SET** button (refer to product diagram for button location, typically on the back or side).
2. While holding **TIME SET**, use the **HOUR** and **MINUTE** buttons to adjust the current time.

3. Release the **TIME SET** button to save the time.

## 4. Adjusting Display Brightness:

Press the **DISPLAY/DIMMER** button repeatedly to cycle through different brightness levels for the green LED display. Choose the level most comfortable for your environment.

## OPERATING INSTRUCTIONS

---

### 1. Setting Alarms (Alarm 1 & Alarm 2):

The CL-1492 features two independent alarms.

1. Press and hold the **ALARM 1** or **ALARM 2** button.
2. While holding the alarm button, use the **HOURL** and **MINUTE** buttons to set the desired alarm time.
3. Release the alarm button.
4. Press the **ALARM 1** or **ALARM 2** button repeatedly to cycle through alarm modes: Radio, Buzzer, or Off. An indicator icon will appear on the display for active alarms.

### 2. Snooze Function:

When an alarm sounds, press the large **SNOOZE** button (usually located on top of the unit) to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period.

### 3. Disabling Alarm:

To turn off a sounding alarm, press the corresponding **ALARM 1** or **ALARM 2** button, or the **POWER/ALARM OFF** button. To completely disable an alarm, cycle through its modes until "Off" is selected.

### 4. FM Radio Operation:

1. Press the **POWER** button to turn on the radio.
2. Press the **TUNE +** or **TUNE -** buttons to manually adjust the frequency.
3. Press and hold **TUNE +** or **TUNE -** for automatic station scanning.
4. To save a preset: Tune to the desired station, then press and hold the **MEM** button. Use the **PRESET +** or **PRESET -** buttons to select a preset number (1-10), then press **MEM** again to confirm.
5. To recall a preset: Press the **PRESET +** or **PRESET -** buttons to cycle through saved stations.
6. Adjust volume using the **VOL +** and **VOL -** buttons.

### 5. Time Projection:

The CL-1492 features a built-in projector to display the time on a wall or ceiling.

- Adjust the projector lens (located on the left side of the unit) to direct the time display.
- Rotate the focus wheel on the projector to sharpen the projected image.
- Press the **PROJECTOR ON/OFF** button to activate or deactivate the projection.
- Some models may have a button to rotate the projected image 180 degrees for optimal viewing.

## MAINTENANCE

---

### Cleaning:

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.

Battery Replacement:

If the backup battery (CR2032) is depleted, replace it promptly to ensure settings are retained during power interruptions. Follow the instructions in the "Setup" section for battery installation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged into a working outlet. Test outlet with another device.
Alarm does not sound.	Alarm not set; alarm volume too low; alarm mode set to Off.	Verify alarm time and mode (Radio/Buzzer) are correctly set. Increase alarm volume.
Radio static or poor reception.	Antenna not extended; weak signal.	Fully extend the FM wire antenna. Reposition the unit for better reception.
Projected time is blurry.	Focus not adjusted.	Rotate the focus wheel on the projector until the image is clear.
Settings lost after power outage.	Backup battery not installed or depleted.	Install a fresh CR2032 battery or replace existing one.

SPECIFICATIONS

Model Number	CL-1492
Brand	Smartwares
Dimensions (L x W x H)	18.5 x 10.3 x 6.6 cm (7.3 x 4.1 x 2.6 inches)
Weight	530 grams (1.17 lbs)
Power Source	230 Volts AC
Backup Battery	CR2032 (not included)
Material	Silver (referring to casing color/finish)
Features	FM Radio, Dual Alarm, Time Projection, Adjustable Display

WARRANTY AND SUPPORT







For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official Smartwares website. Keep your proof of purchase for warranty claims.


Smartwares Contact Information:

- Website: [www.smartwares.eu](http://www.smartwares.eu) (Example, actual URL may vary)
- Customer Service: Refer to your regional Smartwares support contact details.

© 2024 Smartwares. All rights reserved.


### Related Documents - CL-1492

	<p><a href="#">AudioSonic CL-1492 Clock Radio with Projection - User Manual</a></p> <p>User manual for the AudioSonic CL-1492 clock radio, featuring projection, alarm functions, radio, and dimmer. Includes safety instructions, operation guide, and warranty information.</p>
	<p><a href="#">Cubic Alarm Clock Operating Manual</a></p> <p>Comprehensive operating manual for the Cubic Alarm Clock (Model H-CL-04), detailing functions, settings, specifications, and safety precautions for optimal user experience.</p>
	<p><a href="#">Smartwares RM370 Battery-Powered Carbon Monoxide Alarm User Manual</a></p> <p>Comprehensive guide for the Smartwares RM370 battery-powered carbon monoxide alarm, covering features, specifications, installation, operation, maintenance, and safety precautions.</p>
	<p><a href="#">Smartwares RM175RF Smoke Alarm Device User Manual and Instructions</a></p> <p>Comprehensive user manual for the Smartwares RM175RF smoke alarm device, covering general information, activation, mounting, alarm silence, pairing, battery replacement, maintenance, troubleshooting, technical specifications, and conformity declaration.</p>
	<p><a href="#">Smartwares FGA-1304 Carbon Monoxide Detector User Manual</a></p> <p>Comprehensive user manual for the Smartwares FGA-1304 Carbon Monoxide Detector, covering installation, operation, safety, and maintenance to ensure home safety against carbon monoxide poisoning.</p>
	<p><a href="#">Smartwares FGA-1304 Carbon Monoxide Detector Manual</a></p> <p>User manual for the Smartwares FGA-1304 Carbon Monoxide Detector, providing instructions on installation, operation, maintenance, and safety precautions. Includes technical specifications and troubleshooting information.</p>

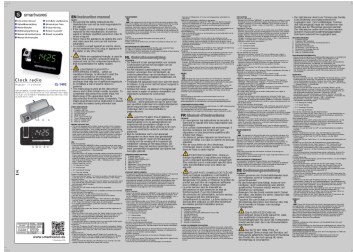

## [\[pdf\]](#) User Manual Instructions Documentation

CL 1492 IM Audiosonic Klokradio Smartwares 5dfb649e 5683 4e37 9858 b561ecaaf1b9 smartwares eu nl  
product attachment productId attachmentName |||  
www.smartwares.eu Smartwares 2018 EN Instruction manual SAFETY By ignoring  
the safety instruction ... tenance. DECLARATION OF CONFORMITY Hereby,  
Smartwares Europe declares that the radio equipment type **CL-1492** is in compliance  
with Directive 2014/53/EU The full text of the EU declaration of conformity...  
lang:en **score:30** filesize: 1.06 M page\_count: 3 document date: 2019-05-24

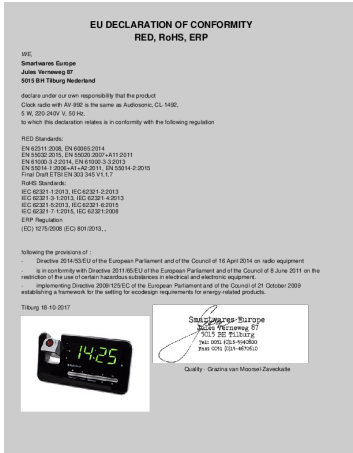

## [\[pdf\]](#) Decleration of Conformity

DoC CL 1492 20171018 Audiosonic Klokradio Smartwares b0707cd9 0e28 448f 9d67 fa37d0fac974  
smartwares eu nl product attachment productId attachmentName |||  
EU DECLARATION OF CONFORMITY RED, RoHS, ERP WE, Smartwares Europe  
Jules Verneweg 87 5015 BH Tilburg Nederland declare under our own responsibility  
that the product Clock radio with AV-992 is the same as Audiosonic, **CL-1492**, 5 W,  
220-240V V, 50 Hz. to which this declaration relates is in conformity w...  
lang:en **score:29** filesize: 71.09 K page\_count: 1 document date: 2017-10-18



## [\[pdf\]](#) Specifications Datasheet Borchure

Product Brochure Datasheet 174 KB Specs Smartwares CL 1492 radio Clock Digital Black Silver mmo  
24883501 1537282721 71 17815 objects icecat biz |||  
**CL-1492** Clock radio Projection - Hi-lo dimmer This AudioSonic clock radio is, next to  
its conventional display, equipped with the capability to project the time on your wall  
or ceiling. Dual alarm function so you can program 2 different wake up times with the  
ability for weekend cancellation. Proje...  
lang:en **score:19** filesize: 173.72 K page\_count: 2 document date: 2018-08-17