

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SadoTech](#) /

› [SadoTech Wireless Caregiver Call Button System User Manual](#)

SadoTech ST-H

Wireless Caregiver Call Button System User Manual

Brand: SadoTech | Model: ST-H

INTRODUCTION

The SadoTech Wireless Caregiver Call Button System is designed to provide immediate assistance and peace of mind for seniors, the elderly, and individuals with special needs. This system includes a portable call button transmitter and a vibrating receiver, ensuring caregivers are promptly notified when assistance is required. Its simple setup and multiple alert options make it a reliable solution for assisted living environments and home care.



Image: The main components of the SadoTech Wireless Caregiver Call Button System, including the plug-in receiver, the portable vibrating receiver, and the call button transmitter.

COMPONENTS

Your SadoTech Wireless Caregiver Call Button System typically includes the following components:

- **Vibrating Receiver:** A portable unit that vibrates, flashes an LED, and can chime to alert the caregiver. Features an ON/OFF switch and a belt clip for easy carrying.
- **Call Button Transmitter:** A small, push-button device used by the care recipient to send an alert.
- **Plug-in Receiver (Optional/Included in some kits):** A wall-plug receiver that provides audible chimes and an LED light alert.
- **Accessories:** Includes adhesive tape or anchors/screws for mounting, and necessary batteries (e.g., 1 AAA battery for the vibrating receiver).



Image: A detailed diagram illustrating the various parts of the SadoTech Caregiver System, including the main receiver, vibrating transmitter, and call button transmitter, highlighting features like LED indicators, volume controls, and speaker.

SETUP

1. Install Batteries:

- For the **Vibrating Receiver**: Open the battery compartment and insert 1 AAA battery (included), ensuring correct polarity. Close the compartment securely.
- For the **Call Button Transmitter**: The transmitter typically comes with a pre-installed A23 12V battery. If replacement is needed, refer to the specific instructions for your transmitter model.

2. **Power On the Vibrating Receiver**: Locate the ON/OFF switch on the side of the vibrating receiver and slide it to the "ON" position. A small LED light may illuminate briefly.

3. **Plug in the Plug-in Receiver (if applicable)**: Insert the plug-in receiver into a standard electrical outlet in a central location where the caregiver can easily hear or see the alerts.

4. **Pairing (if necessary)**: Your units should be pre-paired from the factory. If they are not responding, or if you are

adding new components, refer to the pairing instructions in the full PDF manual (link provided in Support section).

5. **Placement of Call Button:** The call button transmitter is portable and can be placed within easy reach of the care recipient, such as on a bedside table, in a pocket, or worn with a belt clip.



Image: Included accessories for installation, such as adhesive stickers for easy mounting and screws with anchors for more permanent fixture, along with the required small batteries.

OPERATING INSTRUCTIONS

1. Sending an Alert:

To send an alert, the care recipient simply presses the large button on the Call Button Transmitter. This sends a wireless signal to the paired receiver(s).

2. Receiving an Alert:

- **Vibrating Receiver:** Upon receiving a signal, the portable vibrating receiver will vibrate, flash its LED light, and emit a chime (if not in silent mode).

- **Plug-in Receiver:** The plug-in receiver will emit a selected chime and flash its LED light.

3. Adjusting Settings (Vibrating Receiver):

- **Volume Levels:** The vibrating receiver has 4 adjustable volume levels. Use the volume button (usually a small button on the side or back) to cycle through the levels.
- **Silent Mode:** To use only vibration and LED alerts, set the volume to the lowest level or activate silent mode if available on your specific model.
- **Belt Clip:** Attach the vibrating receiver to a belt or clothing using the integrated belt clip for easy portability.

4. Adjusting Settings (Plug-in Receiver):

- **Melodies/Chimes:** The plug-in receiver offers 32 different melodies/chimes. Use the melody selection button (often a music note icon) to choose your preferred alert sound.
- **Volume Levels:** Adjust the volume using the dedicated volume button on the side of the plug-in receiver.



Image: The portable vibrating receiver shown clipped to a belt, demonstrating its discreet and wearable design for caregivers.



Image: A close-up of the vibrating doorbell being held, highlighting its compact size and the ease with which it can be carried or placed discreetly.

MAINTENANCE

- **Battery Replacement:**

Replace batteries in the vibrating receiver (1 AAA) and call button transmitter (A23 12V) as needed. Low battery indicators (if present) will signal when replacement is due. Always use fresh batteries of the specified type.

- **Cleaning:**

Wipe the units with a soft, dry cloth. Do not use abrasive cleaners or immerse the units in water. Ensure no moisture enters the battery compartments or electronic components.

- **Storage:**

If storing the system for an extended period, remove all batteries to prevent leakage and damage to the devices.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver not responding to transmitter.	Low or dead batteries in transmitter or receiver. Units are out of range. Units are not paired.	Replace batteries in both units. Move units closer together. Refer to the full manual for pairing instructions.
Weak or inconsistent signal.	Interference from other electronic devices. Obstructions (thick walls, metal objects).	Relocate units away from potential interference sources. Adjust placement to minimize obstructions.
No sound from receiver.	Volume is set too low or in silent mode.	Increase volume using the volume button.

SPECIFICATIONS

Feature	Detail
Model Number	ST-H
Voltage	12 Volts
Control Method	Touch
Noise Level	110 dB
Item Weight	6.9 ounces
Product Dimensions	3.25 x 1.5 x 3.5 inches
Batteries	1 AAA batteries required (included)
Material	ABS Plastic
Coverage	900 feet

WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the official SadoTech website or contact customer service. A comprehensive user manual in PDF format is also available for download:

[Download Full User Manual \(PDF\)](#)