

Poolmaster 06584

Poolmaster Water Pop Mesh Pool Lounge Instruction Manual

Model: 06584

[Safety Information](#)[Setup](#)[Operation](#)[Maintenance
Support](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)

INTRODUCTION

Thank you for choosing the Poolmaster Water Pop Mesh Pool Lounge. This manual provides important information for the safe and proper use, setup, and maintenance of your new pool lounge. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING: This is not a life-saving device. Do not leave children unattended while in use. Use only under competent supervision. This product is intended for adults. Always ensure the lounge is fully inflated before use.

- Do not over-inflate.
- Keep away from sharp objects and abrasive surfaces.
- Do not use in rough water or strong currents.
- Inspect for damage before each use.
- Do not jump or dive onto the lounge.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the Poolmaster Water Pop Mesh Pool Lounge from its packaging.
2. **Locate Valve:** Find the inflation valve on the lounge.
3. **Inflate:** Use an air pump (not included) to inflate the lounge. Inflate until firm to the touch but not rigid. Do not over-inflate.
4. **Secure Valve:** Firmly close and push the inflation valve flush with the lounge surface to prevent air leakage.



Image: The Poolmaster Water Pop Mesh Pool Lounge in its yellow color, showing its shape and design. This image illustrates the product before and after inflation.

OPERATING INSTRUCTIONS

Once fully inflated, the Water Pop Mesh Pool Lounge is ready for use in a swimming pool or calm body of water. Ensure the water depth is appropriate for safe lounging.

- **Entering the Lounge:** Gently ease yourself onto the lounge in the water. The mesh center seat is designed to keep you cool by allowing water to pass through.
- **Comfort:** The contoured backrest provides support for comfortable lounging.
- **Beverage Holder:** Utilize the integrated beverage holder for convenience.
- **Exiting the Lounge:** Carefully slide off the lounge into the water or onto the pool edge.



Image: Three Poolmaster Water Pop Mesh Pool Lounges (red, yellow, blue) in use in a swimming pool, demonstrating how individuals can relax comfortably on them.

MAINTENANCE

- **Cleaning:** After each use, rinse the lounge with fresh water to remove chlorine, salt, or dirt. Wipe dry with a soft cloth.
- **Storage:** When not in use, deflate the lounge by opening the valve and gently pressing out the air. Fold neatly and store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect the lounge for punctures, tears, or signs of wear. Repair small punctures with a vinyl repair kit (not included).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lounge deflates quickly.	◦ Valve not securely closed. ◦ Small puncture or leak.	◦ Ensure the inflation valve is fully closed and pushed flush. ◦ Locate the leak (e.g., by submerging in soapy water) and repair with a vinyl repair kit.
Lounge feels unstable.	◦ Under-inflated. ◦ Used in rough water.	◦ Inflate to the recommended firmness. ◦ Use only in calm water conditions.

SPECIFICATIONS

Feature	Detail
Brand	Poolmaster
Model Number	06584
Material	14-gauge Vinyl
Approximate Deflated Dimensions	48 inches (L) x 44 inches (W)
Item Weight	2.62 pounds (1.19 Kilograms)

Feature	Detail
Recommended Age	Adults
Features	Mesh center seat, contoured backrest, integrated beverage holder

WARRANTY & SUPPORT

For warranty information or product support, please contact Poolmaster customer service directly. Refer to the product packaging or the official Poolmaster website for contact details.

Note: Specific warranty terms may vary and are subject to the manufacturer's policy at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question