

Miele G 4910 SC CLS

Miele G 4910 SC CLS Freestanding Dishwasher User Manual

Model: G 4910 SC CLS

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Miele G 4910 SC CLS freestanding dishwasher. Please read these instructions carefully before installation, first use, or maintenance. Retain this manual for future reference.

SAFETY INSTRUCTIONS

- Ensure the dishwasher is properly earthed.
- Do not allow children to play with or operate the appliance.
- Keep detergents and rinse aid out of reach of children.
- Sharp items should be loaded with points down to prevent injury.
- Do not open the door during operation, as hot water may spray out.
- In case of malfunction, switch off the appliance and disconnect it from the power supply.

SETUP AND INSTALLATION

The Miele G 4910 SC CLS is a freestanding dishwasher designed for easy integration into your kitchen. Proper installation is crucial for optimal performance and safety.

Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any transport damage. Report any damage immediately to your supplier.

Positioning

Place the dishwasher on a firm, level surface. Adjust the feet to ensure stability and proper leveling. Ensure adequate space for door opening and closing.

Water Connection

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.05 MPa (0.5 bar) and a maximum of 1 MPa (10 bar).
- Ensure all connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe, ensuring it is not kinked or obstructed.

Electrical Connection

Connect the appliance to a properly earthed electrical outlet. The voltage requirement is 230 Volts. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS



Image 1: Front view of the Miele G 4910 SC CLS freestanding dishwasher, showing the stainless steel finish and the control panel with a digital display and push buttons. The Miele logo is visible on the right side of the control panel.

Control Panel Overview

The control panel features a digital display and various push buttons for program selection and settings. Refer to Image 1 for a visual guide.

- **Power Button:** Turns the dishwasher on/off.
- **Program Selection Buttons:** Allows selection of different wash programs (e.g., Eco, Automatic, Intensive, Quick).
- **Digital Display:** Shows remaining time, program status, and error codes.
- **Start/Stop Button:** Initiates or pauses a wash program.
- **Option Buttons:** For additional functions like 'Express' or 'Extra Dry'.

Loading the Dishwasher

Load dishes efficiently to ensure optimal cleaning. Scrape off large food particles before loading. Avoid

overcrowding. The dishwasher is designed for 14 place settings.

- **Lower Basket:** Suitable for large items like plates, serving dishes, and pots.
- **Upper Basket:** For glasses, cups, and smaller plates. Adjust height if necessary.
- **Cutlery Basket:** Place cutlery with handles down, except for knives which should be placed with points down for safety.

Adding Detergent and Rinse Aid

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser. Follow detergent manufacturer's instructions.
- **Rinse Aid:** Fill the rinse aid dispenser when the indicator light illuminates. Rinse aid helps with drying and prevents water spots.
- **Salt:** If your water is hard, fill the salt reservoir with dishwasher salt to prevent limescale buildup.

Program Selection and Start

1. Load the dishwasher and add detergent/rinse aid/salt.
2. Close the dishwasher door firmly.
3. Press the Power button to turn on the appliance.
4. Select the desired wash program using the program selection buttons. The digital display will show the estimated program duration.
5. Press the Start/Stop button to begin the program.

Interrupting or Cancelling a Program

To interrupt a program, carefully open the door. The program will pause. To resume, close the door. To cancel a program, press and hold the Start/Stop button for a few seconds. The dishwasher will drain and reset.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Miele dishwasher.

Cleaning Filters

The filter system should be cleaned regularly (e.g., once a week or as needed). Remove the lower basket, twist and lift out the filter assembly. Rinse under running water to remove food particles. Reassemble and secure firmly.

Cleaning Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any debris from the nozzles using a thin object like a toothpick. Ensure they rotate freely after reinstallation.

Exterior and Interior Cleaning

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stainless steel, use a specialized stainless steel cleaner.
- **Interior:** Periodically run a dishwasher cleaning cycle with a specialized dishwasher cleaner to remove grease and limescale buildup.

Winter Storage

If the dishwasher is to be stored in an unheated location during winter, drain all water from the appliance to prevent freezing damage. Consult a qualified technician if unsure.

TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Clean filters.
Water remaining in tub	Clogged drain hose or filter; Drain pump malfunction.	Check and clear drain hose/filter; Contact service if pump is faulty.
Excessive noise	Dishes interfering with spray arms; Foreign object in pump.	Rearrange dishes; Inspect pump area for obstructions.

SPECIFICATIONS




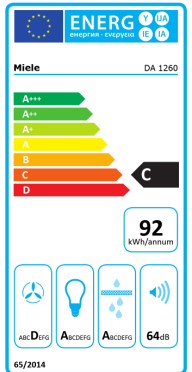

Feature	Detail
Model	G 4910 SC CLS
Type	Freestanding Dishwasher
Dimensions (W x D x H)	59.8 x 60 x 84.5 cm (23.5 x 23.6 x 33.3 inches)
Weight	54.5 kg (120.1 lbs)
Material	Stainless Steel
Place Settings	14
Noise Level	46 dB
Voltage	230 Volts
Controls	Push Buttons
Special Feature	Compact design

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or visit the official Miele website. For technical support, spare parts, or service requests, please contact Miele customer service in your region. Ensure you have your model number (G 4910 SC CLS) and purchase date available when contacting support.

Note: Software updates are not guaranteed for this model.

Related Documents - G 4910 SC CLS

 <p>Operating and Installation Instructions Commercial Washing Machine PWM 912 PWM 916 PWM 920</p>	<p>Miele PWM 912, 916, 920 Commercial Washing Machine: Operating and Installation Guide</p> <p>Comprehensive operating and installation instructions for Miele PWM 912, PWM 916, and PWM 920 commercial washing machines. Covers safety, operation, maintenance, installation, and technical specifications for these electric heating, stainless steel professional appliances.</p>
 <p>Miele H 2861 BP</p>	<p>Miele H 2861 BP Oven: Technical Specifications, Features & Installation Guide</p> <p>Detailed information on the Miele H 2861 BP built-in oven, a Stainless Steel Multifunction Oven with pyrolytic cleaning and Miele@home connectivity. Includes features, technical specifications, dimensions, and installation guidelines for models HME3702 and others.</p>
 <p>Operating Instructions Dishwasher</p>	<p>Miele Dishwasher Operating Instructions - Models G 5266, G 5268</p> <p>This document provides comprehensive operating instructions for the Miele Dishwasher (models G 5266, G 5268, and related series). It details safe installation, proper usage, loading techniques, cleaning and maintenance, and troubleshooting to ensure optimal performance and longevity of your Miele appliance.</p>
 <p>Miele DA 1260</p>	<p>Miele DA 1260 Stainless Steel Cooker Hood - Product Overview</p> <p>Information about the Miele DA 1260 Stainless Steel Cooker Hood, detailing its features and specifications.</p>
 <p>Installation plan PLW 8683</p>	<p>Miele PLW 8683: Installation Plan and Technical Specifications</p> <p>Detailed installation plan and technical specifications for the Miele PLW 8683 professional laboratory washer-disinfector. Covers dimensions, connections, electrical requirements, and operational data. M.-Nr. 12 854 850.</p>



PFD 101 / PFD 102i / PFD 103 SCi

de Kurzgebräuchsanweisung Gewerbegeschirrspüler
en Commercial dishwasher quick start guide
es Instrucciones breves de manejo del lavavajillas industrial
fr Mode d'emploi abrégé lave-vaisselle professionnel
it Istruzioni d'uso brevi per lavastoviglie industriale
pt Verkozte gebruiksaanwijzing professionele vaatwasser
pt Instruções de utilização resumidas das máquinas de lavar louça industriais

10-19-11 101-102

[Miele PFD 101/102i/103 SCi Gewerbespülmaschine: Kurzanleitung & Bedienung](#)

Entdecken Sie die Miele PFD 101, PFD 102i und PFD 103 SCi Gewerbespülmaschinen mit dieser umfassenden Kurzanleitung. Erfahren Sie mehr über Installation, Bedienung, Programme und Sicherheitshinweise für Ihren professionellen Geschirrspüler.