

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [T'nB](#) /
- › T'nB Clicky Wireless Mouse Black User Manual

T'nB MS2UW

T'nB Clicky Wireless Mouse Black User Manual

Model: MS2UW

INTRODUCTION

Thank you for choosing the T'nB Clicky Wireless Mouse. This manual provides essential information for the proper setup, operation, and maintenance of your new wireless mouse. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

The T'nB Clicky Wireless Mouse offers easy, quick, and very simple installation with Plug & Play functionality, requiring no software installation. Its ergonomic design ensures a comfortable grip. This mouse features an automatic stand-by system for energy saving, eliminating the need for an on/off button. It utilizes 2.4GHz radio frequency wireless technology and has a 1200 DPI optical sensor.

SAFETY INFORMATION

- Do not expose the mouse to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the mouse to strong impacts.
- Do not attempt to disassemble or modify the mouse. This will void the warranty.
- Keep the mouse and its components out of reach of children.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x T'nB Clicky Wireless Mouse
- 1 x USB Receiver (Note: The USB receiver is typically delivered inside or along with the mouse, often in the battery compartment.)
- 1 x AAA Battery (included)

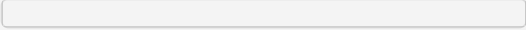


Image: The T'nB Clicky Wireless Mouse shown alongside its compact USB receiver.

SETUP

1. Battery Installation

Locate the battery compartment on the underside of the mouse. Open the compartment cover. Insert the provided AAA battery, ensuring the polarity (+/-) matches the diagram inside the compartment. Close the cover securely.



Image: Angled view of the T'nB Clicky Wireless Mouse, illustrating its ergonomic shape and the general area of the battery compartment on the underside.

2. Connecting the USB Receiver

Remove the USB receiver from its storage slot, usually located within the battery compartment or near it. Plug the USB receiver into an available USB port on your computer. The system will automatically detect and install the necessary drivers (Plug & Play).



Image: Top-down view of the T'nB Clicky Wireless Mouse, clearly showing the scroll wheel and left/right click buttons, with the USB receiver detached and positioned above the mouse.

OPERATING INSTRUCTIONS

1. Power On/Off

The T'nB Clicky Wireless Mouse does not have a manual on/off switch. It features an automatic stand-by system. Simply plug in the USB receiver and the mouse will become active when moved or a button is clicked. It will enter a low-power sleep mode after a period of inactivity to conserve battery life.

2. Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Opens context menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be clicked for middle-click functionality (application dependent).

3. DPI (Dots Per Inch)

The mouse operates at 1200 DPI, providing a good balance of speed and precision for general use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the mouse. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When the mouse performance degrades or it stops responding, replace the AAA battery. Ensure correct polarity.
- **Storage:** When not in use for extended periods, it is recommended to remove the battery to prevent leakage.

Store the USB receiver in its designated slot within the mouse to prevent loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding.	Low or dead battery.	Replace the AAA battery.
Mouse not responding.	USB receiver not properly connected.	Ensure the USB receiver is firmly plugged into a working USB port. Try a different USB port.
Mouse cursor erratic or jumpy.	Dirty optical sensor or unsuitable surface.	Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective, opaque surface or a mouse pad.
Short wireless range or interference.	Obstacles between mouse and receiver, or other wireless devices.	Move the mouse closer to the USB receiver. Ensure no large metal objects are between them. Move other 2.4GHz wireless devices further away.
Mouse does not enter standby.	Constant movement or sensor interference.	Ensure the mouse is placed on a stable surface and not being inadvertently moved.

SPECIFICATIONS

- **Model:** MS2UW
- **Connectivity Technology:** Wireless (USB, Funk 2.4GHz Radio Frequency)
- **Movement Detection Technology:** Optical
- **DPI:** 1200 DPI
- **Color:** Black
- **Power Source:** 1 x AAA Battery (included)
- **Product Dimensions:** 1.77 x 3.39 x 5.51 inches (4.5 x 8.6 x 14 cm)
- **Item Weight:** 2.46 ounces (70 grams)
- **Special Feature:** Automatic Stand-by System, Plug & Play
- **Manufacturer:** T'nB
- **Date First Available:** March 6, 2015

WARRANTY AND SUPPORT

T'nB products are designed and manufactured to the highest quality standards. For information regarding warranty terms, technical support, or customer service, please refer to the official T'nB website or contact your local retailer. For further assistance, please visit the [T'nB official website](#).

