

somfy 1805237

Somfy Telis 1 Chronis RTS Pure Remote (Model 1805237) Instruction Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

The Somfy Telis 1 Chronis RTS Pure Remote is a single-channel radio technology (RTS) remote control designed for operating motorized applications such as shades, blinds, or awnings. It features both manual control and an integrated timer for automatic operation, allowing for scheduled open and close functions. This manual provides comprehensive instructions to ensure proper installation, programming, and use of your remote.





Image 1.1: Front view of the Somfy Telis 1 Chronis RTS Pure Remote, showing the display and control buttons.

2. PRODUCT FEATURES

- **Quick Set Feature:** Easily program or modify the automatic operation of motorized applications with a brief button press.
- **Automatic Mode:** Schedule one open and one close function per day. Different schedules can be set for weekdays and weekends.
- **Manual Mode:** Provides direct control over motorized shades, allowing users to override programmed operations at any time.
- **Hand-held / Wall Mount:** The remote can be used as a portable hand-held device or mounted to a wall using the included clip for convenient access.

Telis 1 Chronis RTS®

Single Channel Zone Control and Timer

MANUAL MODE

- Operates like any single hand-held remote

AUTOMATIC MODE

- ⌚ Two possible timed schedules for simple automation
- 4:40 Current time
- Mo Tu We Th Fr Sa Su Programmed days
- 01 02 Time slots
- 8:30 View automatic schedules: Up or Down
- Low battery indicator

Confirm and mode selection button

"Up" button

"Stop" button or "my" favorite position

"Down" button

Display: Easily view current time and the next programmed operation is always displayed.

Navigation buttons to move through days and scheduled commands.



Image 2.1: The remote shown mounted on a wall using its clip.

3. SETUP

3.1. Battery Installation

The Somfy Telis 1 Chronis RTS Pure Remote requires one CR2 battery (included). To install or replace the battery:

1. Locate the battery compartment cover on the back of the remote.
2. Carefully remove the cover.
3. Insert the CR2 battery, ensuring correct polarity (+/-).
4. Replace the battery compartment cover securely.

3.2. Pairing with Motorized Application

To control your motorized application, the Telis 1 Chronis remote must be paired. This process typically involves placing the remote in programming mode and then activating the programming function on your motorized unit. Refer to your motorized application's specific instructions for its programming button

location and procedure. A common pairing method involves using an existing Somfy RTS remote:

1. On an already programmed Somfy RTS remote, press and hold the programming button (usually a small button on the back or side) until the motorized application jogs (moves slightly up and down).
2. Within 2 minutes, take your new Telis 1 Chronis remote.
3. Press and hold the programming button on the back of the new Telis 1 Chronis remote until the motorized application jogs again.
4. The new remote is now paired and ready for use.

If you do not have an existing remote, consult the instructions for your specific Somfy motor for alternative pairing methods, which may involve pressing a program button directly on the motor head.

4. OPERATING INSTRUCTIONS

The Telis 1 Chronis remote offers both manual and automatic control modes. The display shows the current time and the next programmed operation.



Image 4.1: Detailed diagram illustrating the remote's buttons and display indicators for both manual and automatic operation modes.

4.1. Manual Mode

In Manual Mode, the remote functions like a standard hand-held remote, allowing direct control of your motorized application.

- **Up (▲) button:** Moves the application upwards (e.g., opens shades).
- **Down (▼) button:** Moves the application downwards (e.g., closes shades).
- **"my" button:** Stops the application or moves it to a pre-programmed favorite intermediate position. Pressing it again will resume the previous movement or activate the favorite position.
- **Confirm and Mode Selection button:** Used to confirm selections and switch between manual and automatic modes.

4.2. Automatic Mode and Scheduling

The Automatic Mode allows you to set timed schedules for your motorized application. The remote supports two possible timed schedules: one open and one close function per day, with separate scheduling options for weekdays and weekends.

1. **Entering Automatic Mode:** Use the Confirm and Mode Selection button to toggle to Automatic Mode. The display will show indicators for programmed days and time slots.
2. **Setting Time:** Use the navigation buttons (often integrated with the Up/Down or separate buttons near the display) to adjust the current time.
3. **Programming Schedules:**
 - Navigate through the schedule settings using the navigation buttons.
 - Select the desired day(s) (e.g., Mon-Fri, Sat-Sun, or individual days).
 - Set the desired "open" time and "close" time for the selected day(s).
 - Confirm each setting using the Confirm button.
4. **Overriding Automatic Mode:** You can manually operate the application at any time using the Up, Down, or "my" buttons. This will temporarily override the programmed schedule until the next scheduled event.

The display will show the current time and the next programmed operation, along with indicators for programmed days and a low battery indicator.

5. MAINTENANCE

5.1. Battery Replacement

When the low battery indicator appears on the display, it is time to replace the CR2 battery. Follow the steps outlined in Section 3.1 for battery installation.

Important: Dispose of used batteries responsibly according to local regulations.

5.2. Cleaning

Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface or internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not control the application.	Battery is low or depleted. Remote is not paired with the application. Remote is out of range.	Replace the CR2 battery. Perform the pairing procedure (refer to Section 3.2). Move closer to the motorized application.
Automatic schedule is not activating.	Remote is in Manual Mode. Incorrect time or schedule settings. Low battery.	Switch the remote to Automatic Mode. Verify and correct the current time and programmed schedules. Replace the CR2 battery.
Application jogs but does not respond to commands.	Programming issue or interference.	Re-pair the remote with the application (refer to Section 3.2). Ensure no other RTS devices are interfering.

7. SPECIFICATIONS

- **Model Number:** 1805237
- **Brand:** Somfy
- **Channels:** 1-Channel
- **Technology:** RTS (Radio Technology Somfy)
- **Power Source:** 1 x CR2 Battery (included)
- **Material:** Plastic
- **Color:** White
- **Item Weight:** Approximately 4 ounces (113 grams)
- **Product Dimensions:** Approximately 6 x 2 x 5 inches (15.24 x 5.08 x 12.7 cm)

8. WARRANTY AND SUPPORT

The Somfy Telis 1 Chronis RTS Pure Remote (Model 1805237) is covered by a **5-year warranty** from the date of purchase, covering defects in materials and workmanship under normal use.



Image 8.1: Somfy 5-year warranty logo.

For technical support, warranty claims, or further assistance, please contact Somfy customer service or visit the official Somfy website. Keep your proof of purchase for warranty validation.

Official Somfy Website: www.somfy.com

© 2023 Somfy. All rights reserved.

Related Documents - 1805237

	<p>Somfy Telis 1 Chronis RTS: User Manual and Programming Guide</p> <p>Detailed user manual for the Somfy Telis 1 Chronis RTS remote control and timer, covering setup, manual and automatic operation, programming schedules, and troubleshooting tips for smart window coverings.</p>
	<p>Somfy Tilt 50 WireFree RTS Programming and Operation Instructions</p> <p>A comprehensive guide detailing the programming and operation of Somfy Tilt 50 WireFree RTS motorized window covering systems. Covers initial setup, limit setting, transmitter pairing, and operational modes for various Somfy remote controls.</p>
	<p>Somfy Telis 6 Chronis RTS User Manual</p> <p>User manual for the Somfy Telis 6 Chronis RTS remote control, detailing installation, usage, programming, and technical specifications.</p>



Telis 6 Chronis RTS

Radio Technology Somfy®
RTS
Somfy

[Somfy Telis 6 Chronis RTS Remote Control User Manual](#)

Comprehensive user manual for the Somfy Telis 6 Chronis RTS remote control transmitter, covering installation, operation, programming, and troubleshooting for automated home systems.



Radio Technology Somfy®


Pocket Programming Guide



Somfy

[Somfy RTS Pocket Programming Guide](#)

Comprehensive guide to programming Somfy Radio Technology Somfy® (RTS) motors and controls, covering remotes, sensors, and smartphone integration for motorized window coverings.

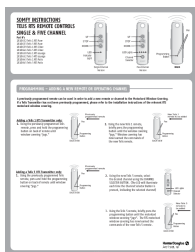

[Somfy Telis RTS Remote Controls: Programming and Operation Guide](#)

Comprehensive guide to programming and operating Somfy Telis RTS single and five-channel remote controls for motorized window coverings, including setting favorite positions and replacing batteries.