

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer AA Cell 1.5 Volt MAX Battery (Model 06470) Instruction Manual

Energizer 06470

Energizer AA Cell 1.5 Volt MAX Battery (Model 06470) Instruction Manual

Model: 06470 | Brand: Energizer

INTRODUCTION

This manual provides essential information for the safe and effective use of Energizer AA Cell 1.5 Volt MAX Alkaline Batteries, Model 06470. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

Energizer MAX AA batteries are designed to provide reliable power for everyday devices. This package contains six 1.5-volt alkaline AA batteries.



Image 1: Front view of the Energizer AA MAX 6-pack battery packaging. The packaging displays six AA batteries, the Energizer MAX logo, and indicates "Protects Your Devices" with a 10-year power retention claim.



Image 2: Back view of the Energizer AA MAX 6-pack battery packaging. This side includes warnings, usage instructions, and a QR code for more information. It also states "Energizer MAX batteries are designed not to leak in your devices. Guaranteed."

SETUP AND INSTALLATION

- 1. Identify Battery Compartment:** Locate the battery compartment on your electronic device.
- 2. Open Compartment:** Open the battery compartment cover. This may involve sliding, lifting, or unscrewing, depending on the device.
- 3. Observe Polarity:** Note the positive (+) and negative (-) markings inside the battery compartment. These indicate the correct orientation for battery insertion.
- 4. Insert Batteries:** Insert the Energizer AA batteries, ensuring that the positive (+) end of the battery aligns with the positive (+) marking in the compartment, and the negative (-) end aligns with the negative (-) marking. Incorrect polarity can prevent the device from functioning and may cause battery leakage or damage.

5. **Close Compartment:** Securely close the battery compartment cover.

Warning: Do not install backwards, charge, put in fire or mix with used or other battery types. May explode or leak causing injury. Replace all batteries at the same time.

OPERATING INSTRUCTIONS

Once properly installed, Energizer AA MAX batteries are ready for use. They are suitable for a wide range of everyday devices requiring AA size batteries, such as:

- Clocks
- Remote controls
- Flashlights
- Toys
- Wireless mice and keyboards
- Portable radios

For optimal performance, ensure your device is compatible with 1.5-volt alkaline AA batteries.

MAINTENANCE AND STORAGE

- **Storage:** Store unused batteries in their original packaging in a cool, dry place at room temperature. Avoid extreme temperatures and direct sunlight.
- **Handling:** Do not carry loose batteries in your pocket or purse with metal objects like coins or keys, as this can cause a short circuit.
- **Disposal:** Dispose of used batteries according to local regulations. Many communities offer battery recycling programs. Do not dispose of batteries in household trash or fire.
- **Replacement:** Replace all batteries in a device at the same time. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or reduced performance.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Device not powering on	Incorrect battery installation (polarity), depleted batteries, faulty device.	Check battery polarity. Replace with new batteries. Test the device with known working batteries.
Short battery life	High-drain device, mixing old and new batteries, extreme temperatures.	Ensure all batteries are new and of the same type. Operate device within recommended temperature ranges.
Battery leakage	Over-discharge, mixing battery types, physical damage, extreme temperatures.	Remove leaking batteries carefully (wear gloves). Clean compartment. Replace with new, identical batteries. Avoid mixing battery types.

SPECIFICATIONS

- **Battery Type:** AA Alkaline

- **Voltage:** 1.5 Volts
- **Model Number:** 06470 (E91BPF-6)
- **Quantity:** 6 batteries per pack
- **Shelf Life:** Holds power up to 10 years in storage
- **Manufacturer:** Energizer Batteries
- **ASIN:** B00PDS3A2Y
- **UPC:** 0039800064707

WARRANTY AND GUARANTEE

Energizer MAX batteries are designed not to leak in your devices. Energizer guarantees against damage to your device caused by leakage from Energizer MAX batteries. For full details and claim procedures, please refer to the official Energizer website or contact customer support.

For more information, you may visit the Energizer website or scan the QR code found on the product packaging (refer to Image 2). A direct link to additional information is <http://2d-scan.us/53655710>.

SUPPORT

For further assistance or inquiries regarding Energizer products, please visit the official Energizer website or contact their customer service department. Contact information can typically be found on the product packaging or the Energizer corporate website.

Manufacturer: Energizer Holdings, Inc.

Website: www.energizer.com

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question