

Epson V11H672020

Epson PowerLite 525W LCD Projector User Manual

Model: V11H672020

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Epson PowerLite 525W LCD Projector. Please read this manual thoroughly before using the projector and retain it for future reference.

The Epson PowerLite 525W is a short-throw LCD projector designed for educational and professional environments, offering vibrant images and flexible installation options.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the projector and ensure personal safety:

- Do not block ventilation openings. Ensure adequate airflow around the projector.
- Do not look directly into the projector lens when the lamp is on. The bright light can cause eye damage.
- Do not place the projector on an unstable cart, stand, or table.
- Use only the power cord supplied with the projector.
- Unplug the projector from the power outlet before cleaning or when not in use for extended periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- Epson PowerLite 525W LCD Projector
- Power Cord
- Remote Control with Batteries
- Computer Cable (VGA)
- CD-ROM with Projector Software and Documentation
- Quick Setup Guide

4. PRODUCT OVERVIEW

The Epson PowerLite 525W features a compact design with various ports for connectivity and controls for operation.



Figure 4.1: Front-top view of the Epson PowerLite 525W LCD Projector. This image shows the projector's white casing, the large lens on the front, and control buttons on the top panel. The Epson logo is visible on the front and top, along with "WXGA" and "HDMI" labels near the lens.

Front Panel

- **Projection Lens:** Emits the image.
- **Focus Ring:** Adjusts image sharpness.
- **Zoom Lever:** Adjusts image size.
- **Ventilation Grille:** For air intake and exhaust.

Top Panel Controls

- **Power Button:** Turns the projector on or off.
- **Source Search Button:** Cycles through input sources.
- **Menu Button:** Accesses the on-screen display (OSD) menu.
- **Arrow Buttons:** Navigate menu options.
- **Enter Button:** Confirms selections.
- **Keystone Correction Buttons:** Adjust image shape.

Rear Panel Ports

- **HDMI Port:** For digital video and audio input.
- **VGA (Computer) Port:** For analog video input.
- **USB-A Port:** For USB display or media playback.
- **USB-B Port:** For USB display or remote control.
- **Audio In/Out Jacks:** For external audio devices.
- **LAN Port:** For network connectivity.
- **Power Inlet:** Connects to the power cord.

5. SETUP

5.1 Placement

Position the projector on a stable, flat surface or mount it securely. Due to its short-throw capability, the projector can be placed close to the screen or wall. Ensure there is sufficient space around the projector for ventilation.

5.2 Connecting to Power

1. Connect the supplied power cord to the projector's power inlet.
2. Plug the other end of the power cord into a grounded electrical outlet.

5.3 Connecting to Source Devices

Connect your video source (computer, Blu-ray player, etc.) to the projector using the appropriate cable.

- **HDMI:** For high-definition digital video and audio. Connect an HDMI cable from your device to the projector's HDMI port.
- **VGA:** For analog computer video. Connect a VGA cable from your computer to the projector's VGA port.
- **USB:** For USB display or media. Connect a USB cable from your computer to the projector's USB-B port, or a USB storage device to the USB-A port.

5.4 Initial Power On

1. Press the Power button on the projector or remote control. The power light will turn blue.
2. Wait for the projector to warm up and display an image. This may take a few moments.

6. OPERATING

6.1 Power On/Off

- **To Power On:** Press the Power button once.
- **To Power Off:** Press the Power button twice. The projector will display a shutdown message before turning off.

6.2 Input Selection

Press the **Source Search** button on the projector or remote control to cycle through available input sources (HDMI, Computer, USB, etc.) until your desired source is displayed.

6.3 Image Adjustments

- **Focus:** Rotate the focus ring on the lens until the image is sharp.
- **Zoom:** Adjust the zoom lever on the lens to change the image size.
- **Keystone Correction:** If the image appears trapezoidal, use the **Keystone** buttons on the projector or remote to correct the shape.

6.4 Menu Navigation

Press the **Menu** button to access the projector's On-Screen Display (OSD) menu. Use the arrow buttons to navigate and the **Enter** button to select options. Press **Menu** again to exit.

6.5 Audio Settings

Adjust the volume using the volume buttons on the remote control. Further audio settings can be found within the OSD menu.

7. MAINTENANCE

7.1 Lamp Replacement

The projector lamp has a limited lifespan. When the lamp indicator light turns orange or the image becomes dim, it may be time to replace the lamp. Refer to the full user guide on the Epson support website for detailed lamp replacement instructions.

Caution: Allow the projector to cool down completely before attempting to replace the lamp. Lamps operate at high temperatures.

7.2 Air Filter Cleaning

Regularly clean the air filter to maintain optimal performance and prevent overheating. The filter is typically located on the side or bottom of the projector. Gently remove dust using a soft brush or vacuum cleaner.

7.3 General Cleaning

Wipe the projector's exterior with a soft, dry cloth. For stubborn marks, use a cloth lightly dampened with water. Do not use abrasive cleaners or solvents. Clean the lens with a lens cleaning cloth designed for optical surfaces.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your projector.

Problem	Possible Cause	Solution
No image displayed	Power cord not connected Incorrect input source selected Source device not powered on or outputting signal	Ensure power cord is securely connected. Press the Source Search button to select the correct input. Check the source device's power and video output settings.
Image is blurry	Focus not adjusted Lens is dirty	Adjust the focus ring on the lens. Clean the projector lens with a soft, dry cloth.
Image is trapezoidal	Projector not perpendicular to screen	Use the Keystone correction buttons to adjust the image shape.
Projector overheats and shuts down	Blocked ventilation Dirty air filter	Ensure adequate space around the projector. Clean the air filter.

9. SPECIFICATIONS

Feature	Detail
Model Number	V11H672020
Display Technology	3LCD
Color Brightness	2800 lumens
White Brightness	2800 lumens
Native Resolution	1280 x 800 (WXGA)
Aspect Ratio	16:10
Lamp Life	Up to 5000 hours (Normal Mode)
Connectivity	HDMI, VGA, USB-A, USB-B, Audio In/Out, LAN
Product Dimensions	16.6 x 14.7 x 10.8 inches
Item Weight	8.6 pounds
Power Consumption (Normal)	293 W

Feature	Detail
Power Consumption (ECO)	229 W

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your projector or visit the official Epson support website. You can typically find detailed warranty terms, driver downloads, and contact information for customer service there.

Note: Warranty terms may vary by region and purchase date. Keep your proof of purchase for warranty claims.

© 2024 Epson Corporation. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question