

Nerf B0885

Nerf Rebelle Super Soaker Cascade Blaster Instruction Manual

Model: B0885

[Introduction](#) [Safety Information](#) [What's Included](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

The Nerf Rebelle Super Soaker Cascade Blaster is designed for water-based play. This manual provides instructions for safe assembly, operation, and maintenance of your blaster.



Image 1.1: Nerf Rebelle Super Soaker Cascade Blaster in original packaging.

2. SAFETY INFORMATION

- **WARNING:** Do not aim at eyes or face.
- Use only clean tap water in the blaster. Do not use other liquids.
- Adult supervision is recommended for young children.
- Keep away from electrical devices and outlets.
- Inspect the blaster for damage before each use. Do not use if damaged.

3. WHAT'S INCLUDED

The package contains the following item:

- Nerf Rebelle Super Soaker Cascade Blaster (Model B0885)

4. SETUP

4.1 Filling the Water Tank

1. Locate the water tank cap on the top of the blaster.
2. Twist the cap counter-clockwise to open the water tank.
3. Fill the tank with clean tap water. The blaster has a capacity of up to 20 fluid ounces (approximately 591 ml).
4. Twist the cap clockwise to securely close the water tank. Ensure it is tightly sealed to prevent leaks.



Image 4.1: Location of the water tank cap for filling.

5. OPERATING INSTRUCTIONS

5.1 Firing the Blaster

1. Ensure the water tank is filled and securely closed.

2. Hold the blaster firmly with both hands.
3. Aim the blaster at your target, ensuring it is not aimed at eyes or face.
4. Pull the trigger to launch a stream of water. The blaster can hit targets up to 38 feet away.
5. Repeat as desired. Refill the tank when water levels are low.

6. MAINTENANCE

6.1 Cleaning

- After each use, empty any remaining water from the tank.
- Rinse the tank with clean water and allow it to air dry completely before storage.
- Wipe the exterior of the blaster with a damp cloth if needed. Do not submerge the entire blaster in water.

6.2 Storage

- Store the blaster in a cool, dry place away from direct sunlight.
- Ensure the blaster is completely dry before storing to prevent mold or mildew.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster not firing water.	Water tank is empty.	Refill the water tank.
Blaster not firing water.	Water tank cap is not securely closed.	Ensure the cap is twisted clockwise until tight.
Weak water stream.	Low water level in tank.	Refill the water tank.
Water leakage.	Water tank cap is loose or damaged.	Tighten the cap. If leakage persists, inspect the cap for damage.

8. SPECIFICATIONS

Model Number	B0885
Brand	Nerf
Manufacturer	Hasbro
Capacity	20 Fluid Ounces (approx. 591 ml)
Maximum Range	Up to 38 Feet
Item Weight	0.4 Kilograms
Item Dimensions (LxWxH)	2.95 x 12.52 x 7.76 inches

Material Type	Plastic
Operation Mode	Manual
Batteries Required	No
Assembly Required	No
Indoor/Outdoor Usage	Outdoor
Recommended Age	72 months (6 years) to 1188 months (99 years)

9. WARRANTY INFORMATION

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for details on returns or exchanges.

10. SUPPORT

For further assistance or inquiries regarding the Nerf Rebelle Super Soaker Cascade Blaster, please contact the retailer where the product was purchased. For general information about Nerf products, you may visit the official Hasbro website.



Image 10.1: Hasbro, the manufacturer of Nerf products.