

Anker AK-A7721121

Anker Ultra Compact Slim Profile Wireless Bluetooth Keyboard

Instruction Manual - Model AK-A7721121

INTRODUCTION

Thank you for choosing the Anker Ultra Compact Slim Profile Wireless Bluetooth Keyboard. This manual provides essential information for setting up, operating, and maintaining your new keyboard. Please read it carefully to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- Anker Ultra Compact Bluetooth Keyboard
- 2.3ft Micro USB charging cable
- Welcome guide

SETUP

1. Charging the Keyboard

Before initial use, fully charge the keyboard using the provided Micro USB cable. Connect the Micro USB end to the keyboard's charging port and the USB-A end to a power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

2. Pairing with Your Device

1. Ensure the keyboard is charged and powered on. The power switch is located on the side of the keyboard.
2. Activate Bluetooth on your device (iOS, Android, Mac OS, or Windows).
3. On the keyboard, press the **Fn** key simultaneously with the Bluetooth pairing key (usually indicated by a Bluetooth icon or 'Pair' text). The Bluetooth indicator light on the keyboard will begin to flash, indicating it is in pairing mode.
4. On your device, search for available Bluetooth devices. Select "Anker Bluetooth Keyboard" from the list.
5. Follow any on-screen prompts to complete the pairing process. A successful connection will be indicated by the Bluetooth light on the keyboard turning solid or off, depending on the model.

Note: The keyboard is only compatible with devices that use Bluetooth 3.0 or higher. It is not compatible with Mac OS X El Capitan.

UNIVERSAL COMPATIBILITY

Works with Android, iOS, Windows and Mac.



Android



iOS



Windows



Mac OS



Image: The Anker keyboard demonstrating universal compatibility with various operating systems.

OPERATING THE KEYBOARD

Typing and Function Keys

The keyboard features low-profile, matte finish keys designed for smooth and quiet typing. It includes standard alphanumeric keys, as well as a row of function keys (F1-F12) that can be used for multimedia control and other shortcuts when pressed in combination with the **Fn** key.

COMFORTABLE KEYS

Enjoy quiet and smooth keystroke action.



Image: A close-up view of the keyboard keys, highlighting the comfortable scissor spring mechanism for quiet and smooth keystrokes.

Operating System Specific Notes

- **iOS, Android, Mac OS, Windows:** The keyboard is broadly compatible with these operating systems.
- **Android 4.4 and 5.0.1 users:** The Caps Lock indicator light will NOT illuminate, but the Caps Lock function will still operate normally.
- **Windows:** Page Up, Page Down, Home, and End keys may function differently depending on the application.

Power Saving Mode

After 30 minutes of inactivity, the keyboard will automatically enter power-saving mode. To wake it up, simply press any key and wait 2-3 seconds for it to reconnect to your device.

MAINTENANCE

Cleaning

To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials

that could damage the finish or keys.

Battery Care

The keyboard features a rechargeable lithium battery with an approximate 6-month life on a single charge (based on 2 hours of non-stop use per day). To prolong battery life, avoid extreme temperatures and store the keyboard in a cool, dry place when not in use for extended periods.

OUTSTANDING BATTERY LIFE

Lasts over six months on a single charge.



*Artistic rendering

Image: An artistic rendering showing the internal built-in lithium battery of the Anker keyboard, emphasizing its long battery life.

TROUBLESHOOTING

- **Keyboard not connecting:** Ensure Bluetooth is enabled on your device and the keyboard is in pairing mode. Try restarting both the keyboard and your device.
- **Keys not responding:** Check the battery level and recharge if necessary. Ensure the keyboard is properly paired and within range of your device.
- **Caps Lock indicator not working on Android:** For Android versions 4.4 and 5.0.1, the Caps Lock indicator light will not function, but the Caps Lock feature itself will still work. This is a known system behavior.
- **Incompatibility with Mac OS X El Capitan:** This keyboard is not compatible with Mac OS X El Capitan.

SPECIFICATIONS



Image: The Anker keyboard with its compact dimensions clearly marked.

Feature	Detail
Brand	Anker
Model Number	AK-A7721121
Connectivity Technology	Bluetooth
Compatible Devices	Laptop, PC (iOS, Android, Mac OS, Windows)
Keyboard Layout	QWERTY
Number of Keys	78
Product Dimensions	11.3"L x 5"W x 0.5"H
Item Weight	11.36 ounces
Power Source	Battery Powered (Rechargeable Lithium)
Battery Life	Up to 6 months (based on 2 hours/day use)
Material	Plastic
Color	White

WARRANTY

Anker provides an 18-month warranty for this product. For warranty claims or further details, please refer to the contact information in the Support section.

SUPPORT

For technical support, customer service, or warranty inquiries, please visit the official Anker website or contact their customer support team directly. Contact details can typically be found in the welcome guide included with your product or on the Anker support page online.

© 2026 Anker Innovations. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question