

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Briggs & Stratton](#) /
- › [Briggs & Stratton 841316 Cover: Genuine OEM Part Instruction Manual](#)

Briggs & Stratton 841316

Briggs & Stratton 841316 Cover: Genuine OEM Part Instruction Manual

Model: 841316

IMPORTANT COMPATIBILITY INFORMATION

Before proceeding with installation, it is crucial to verify that this part is compatible with your specific equipment model. Many replacement parts may appear similar but are designed for different models. Always check your equipment's model number against the part number to ensure a correct fit.



Image Description: A person holds a red stop sign. Text on the image reads: "Does your part fit? STOP. Many replacement parts look the same but won't fit your model. Don't be fooled! Check your model number before you buy." This emphasizes the importance of verifying part compatibility.

PRODUCT OVERVIEW

The Briggs & Stratton 841316 Cover is a genuine Original Equipment Manufacturer (OEM) replacement part designed for specific Briggs & Stratton engines. This cover plays a vital role in protecting internal engine components, such as the air filter, from debris and environmental elements, ensuring optimal engine performance and longevity.

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

Image Description: A detailed view of the Briggs & Stratton 841316 Cover, showcasing its design and construction as a genuine OEM part. The image provides a clear visual reference of the product.

INSTALLATION INSTRUCTIONS

1. **Safety First:** Ensure the engine is turned off, cooled down, and the spark plug wire is disconnected to prevent accidental starting.
2. **Locate Existing Cover:** Identify the current cover on your Briggs & Stratton engine. This is typically found over the air filter housing.
3. **Remove Old Cover:** Carefully unlatch or unscrew any fasteners securing the old cover. Gently remove it, noting its orientation.
4. **Inspect Area:** While the cover is off, inspect the air filter and surrounding area for any debris or damage. Clean as necessary.
5. **Position New Cover:** Align the new Briggs & Stratton 841316 Cover with the air filter housing. Ensure it seats properly without forcing.

6. **Secure Cover:** Fasten the new cover using the original latches or screws. Ensure it is securely attached to prevent air leaks or dislodgement during operation.

7. **Reconnect Spark Plug:** Once the cover is securely installed, reconnect the spark plug wire.

Note: Refer to your specific engine's service manual for detailed diagrams and torque specifications if available.

OPERATION

The Briggs & Stratton 841316 Cover is a passive component designed to protect the engine's air filter and other internal parts from dirt, dust, and moisture. Once correctly installed, it operates continuously as part of the engine's protective system. No specific user interaction is required for its operation beyond proper installation.

MAINTENANCE

- **Regular Inspection:** Periodically inspect the cover for cracks, damage, or signs of wear. Ensure all fasteners are tight.
- **Cleaning:** Clean the exterior of the cover with a damp cloth to remove accumulated dirt and debris. Avoid using harsh chemicals that could damage the material.
- **Seal Integrity:** Check the seal between the cover and the air filter housing to ensure it remains intact and provides a tight fit. A compromised seal can allow unfiltered air into the engine.
- **Replacement:** If the cover becomes severely damaged, cracked, or no longer provides a secure fit, replace it with a genuine Briggs & Stratton 841316 OEM part to maintain engine protection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cover does not fit properly.	Incorrect part for your engine model.	Verify your engine model number and ensure you have the correct Briggs & Stratton 841316 part.
Cover is loose after installation.	Fasteners not fully secured or damaged.	Ensure all latches/screws are tightened. Inspect fasteners for damage and replace if necessary.
Visible cracks or damage on cover.	Impact or material fatigue.	Replace the damaged cover with a new Briggs & Stratton 841316 OEM part to maintain protection.

SPECIFICATIONS

Part Number: 841316

Type: Genuine Original Equipment Manufacturer (OEM) Cover

Manufacturer: Briggs & Stratton

Product Dimensions: 1 x 1 x 1 inches

Item Weight: 1.02 pounds

ASIN: B00PKE0LPA

National Stock Number: 5340-01-626-4515

WARRANTY AND SUPPORT

As a genuine Briggs & Stratton OEM part, this product is covered by the standard Briggs & Stratton warranty policy. For specific warranty details, claims, or technical support, please contact Briggs & Stratton customer service directly or visit their official website. Always provide your product model number and the part number (841316) when seeking assistance. You can find more information and contact details on the official [Briggs & Stratton Store on Amazon](#) or their corporate website.