

[Manuals.plus](#) /

› [Power Rangers](#) /

› Power Rangers Dino Charge Megazord Instruction Manual

Power Rangers 42096

Power Rangers Dino Charge Megazord Instruction Manual

Model: 42096

INTRODUCTION

The Power Rangers Dino Charge Megazord is a versatile action figure that can transform between three individual Dino Zords and combine to form the powerful Megazord. This manual provides instructions for assembly, operation, and care to ensure optimal enjoyment and longevity of your toy.



Image: The Power Rangers Dino Charge Megazord in its combined form, featuring red, blue, and pink components.

PACKAGE CONTENTS

Your Power Rangers Dino Charge Megazord package should contain the following items:

- 1 x Red T-Rex Zord
- 1 x Blue Stego Zord
- 1 x Pink Tricera Zord
- 1 x Dino Charger



Image: The retail packaging for the Power Rangers Dino Charge Megazord, showing the combined figure and individual Zords.

SETUP AND ASSEMBLY

The Dino Charge Megazord can be assembled from its three individual Dino Zords. Follow these steps to combine them:

1. **Prepare the T-Rex Zord:** Ensure the Red T-Rex Zord is in its standing dinosaur form.

2. **Attach the Stego Zord:** The Blue Stego Zord forms the left arm of the Megazord. Connect it to the designated port on the left side of the T-Rex Zord.
3. **Attach the Tricera Zord:** The Pink Tricera Zord forms the right arm of the Megazord. Connect it to the designated port on the right side of the T-Rex Zord.
4. **Final Adjustments:** Adjust the limbs and head of the Megazord to achieve the desired pose.



Image: The three individual Dino Zords (Red T-Rex, Blue Stego, Pink Tricera) before combination.

OPERATING INSTRUCTIONS

The Dino Charge Megazord offers multiple play modes:

1. Individual Dino Zord Play

Each Dino Zord can be played with individually. They feature articulated parts for dynamic posing.

- **Red T-Rex Zord:** The core of the Megazord, capable of standing independently.
- **Blue Stego Zord:** Features a spiky back and can be posed.
- **Pink Tricera Zord:** Equipped with a drill-like horn and can be posed.



Image: The Red T-Rex Dino Zord in its standalone form.

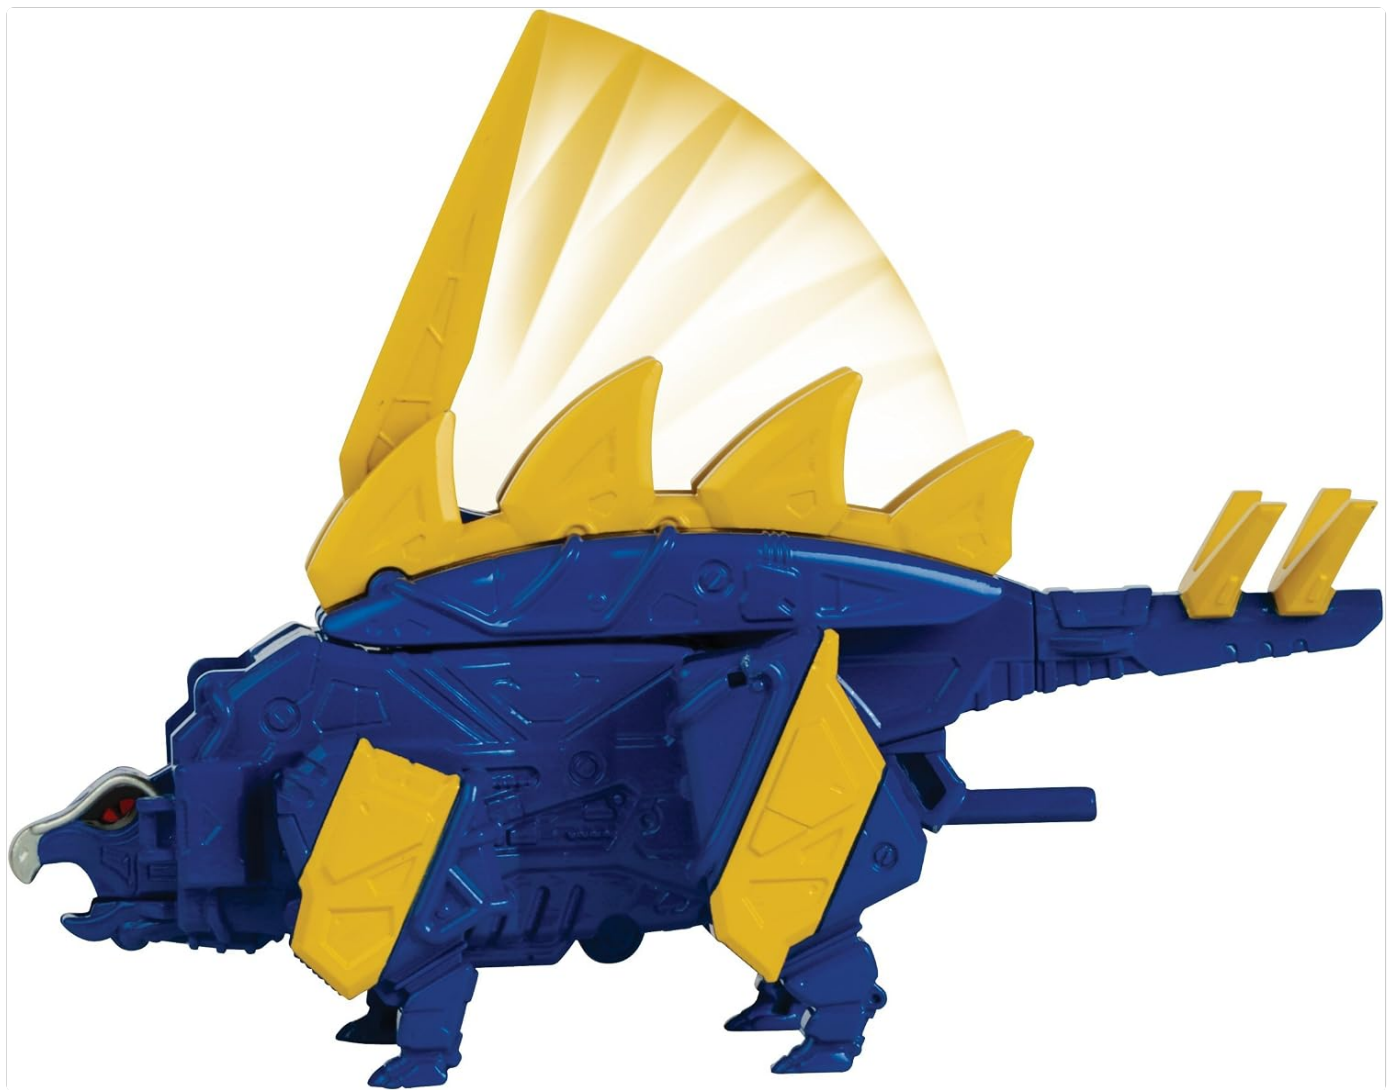


Image: The Blue Stego Dino Zord in its standalone form.



Image: The Pink Tricera Dino Zord in its standalone form.

2. Megazord Combination

Combine the three Dino Zords as described in the "Setup and Assembly" section to form the powerful Dino Charge Megazord.

3. Dino Charger Activation

Insert the included Dino Charger into the mouth of any of the Dino Zords to activate special features or sounds (if applicable to the specific Zord or other compatible Power Ranger Battle Gear items).



Image: A hand inserting a Dino Charger into the mouth of the Red T-Rex Zord.



Image: A hand inserting a Dino Charger into the mouth of the Blue Stego Zord.



Image: A hand inserting a Dino Charger into the mouth of the Pink Tricera Zord.

4. Zord Builder Compatibility

The Dino Charge Megazord is part of the Zord Builder system. This allows you to combine it with other Zord Builder items (sold separately) to create unique and powerful Megazord combinations.

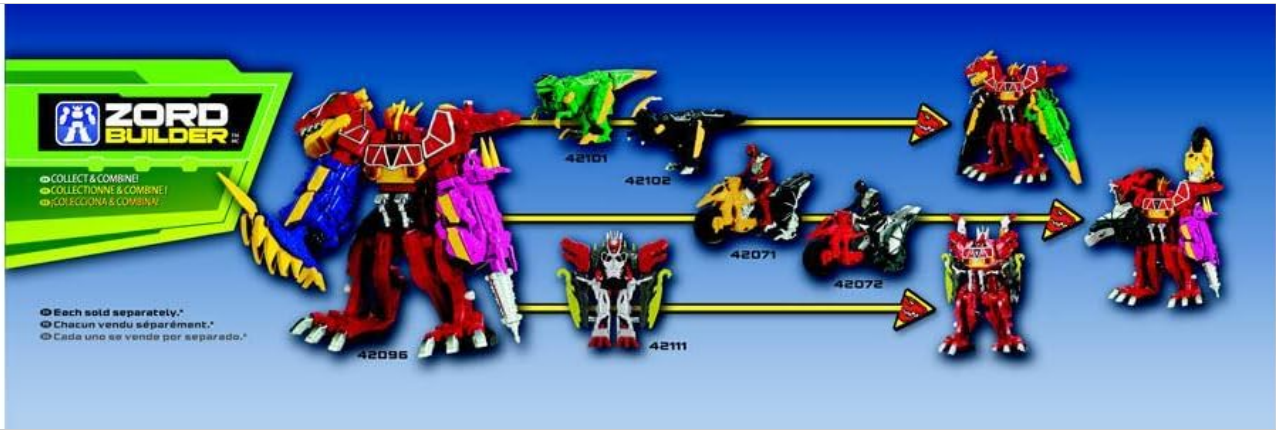


Image: Examples of various Zord Builder combinations, showing how different Zords can connect.

MAINTENANCE

To keep your Power Rangers Dino Charge Megazord in optimal condition:

- **Cleaning:** Wipe the toy with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight to prevent discoloration or damage.
- **Handling:** Avoid excessive force when connecting or disconnecting parts to prevent breakage.

TROUBLESHOOTING

If you encounter any issues with your Dino Charge Megazord, consider the following:

- **Parts not connecting:** Ensure all parts are aligned correctly before attempting to connect them. Refer to the "Setup and Assembly" section.
- **Dino Charger not activating features:** Verify the Dino Charger is fully inserted into the Zord's mouth. Ensure the Zord is compatible with Dino Charger activation.
- **Loose joints:** Over time, joints may become slightly loose with repeated play. This is normal wear and tear.

SPECIFICATIONS

Brand:	Power Rangers
Model Number:	42096
UPC:	045557420963
Material:	Plastic
Item Weight:	1.94 Pounds
Item Dimensions (L x W x H):	4.25 x 9.5 x 12 inches
Recommended Age:	48 months (4 years) and up
Assembly Required:	No (assembly is part of play)
Batteries Required:	No

WARRANTY INFORMATION

This product is covered by a **90-day warranty** against manufacturer defects. Please retain your proof of purchase for warranty claims. For further details, contact the manufacturer.

SUPPORT

For additional assistance, questions, or to report any issues, please visit the official Power Rangers website or contact Bandai America Incorporated customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.

You can also visit the [Power Rangers Store on Amazon](#) for more product information and related items.

© 2026 Power Rangers. All rights reserved. Bandai America Incorporated.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question