

## Disney HC218CZR

# Disney Baby Minnie Mouse Foldable Highchair

MODEL: HC218CZR

## Introduction

---

Thank you for choosing the Disney Baby Minnie Mouse Foldable Highchair. This highchair is designed for convenience, portability, and ease of cleaning, making mealtime enjoyable for both parent and child. Please read this manual thoroughly before assembly and use to ensure safe operation and proper maintenance of your highchair.

## Safety Information

---

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- **Age and Weight Limits:** This highchair is suitable for children from 6 months of age and up to a maximum weight of 50 pounds (22.7 kg).
- **Always Use Restraints:** Always secure your child in the highchair using the 3-point harness. Adjust the harness snugly around your child.
- **Never Leave Child Unattended:** Never leave your child unattended in the highchair. Constant supervision is required.
- **Ensure Stability:** Always ensure the highchair is fully open and locked into position before placing your child in it. Use on a flat, level, and stable surface.
- **Avoid Hazards:** Keep the highchair away from open flames, heat sources, and electrical appliances. Do not place the highchair near windows where a child could reach cords or pull themselves up.
- **Inspect Regularly:** Periodically check the highchair for loose fasteners, worn parts, or damaged material. Do not use if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- **Prevent Falls:** Do not allow children to climb into or out of the highchair unassisted. Do not allow children to play with the highchair.

## Setup

---

The Disney Baby Minnie Mouse Foldable Highchair requires minimal setup. It arrives largely pre-

assembled and primarily needs to be unfolded and the tray attached.

1. **Unfolding the Highchair:** Place the folded highchair on a flat surface. Grasp the top frame and gently pull the legs apart until the highchair clicks into its fully open and locked position. Ensure all four legs are firmly on the ground and the frame is stable.
2. **Attaching the Tray:** Align the tray with the armrests. Push the tray onto the armrests until it clicks securely into place. The tray can be adjusted to three different positions.



Image: Highchair with the tray attached, ready for use.

## Operating Instructions

---

### Tray Adjustment

The highchair features a 3-position adjustable tray to accommodate your child as they grow.

1. To adjust the tray, locate the release levers on the underside of the tray, typically on both sides.
2. Squeeze the levers and slide the tray forward or backward to the desired position.
3. Release the levers to lock the tray in place. Ensure both sides are securely locked.

### Harness Use

The 3-point harness keeps your child secure during mealtime.

1. Place your child in the highchair.
2. Bring the waist straps around your child's waist and connect them to the crotch strap buckle.
3. Adjust the straps to ensure a snug but comfortable fit. The harness should not be too tight or too loose.



Image: Front view of the highchair, highlighting the harness system.

### **Folding for Storage**

The highchair features a simple fold mechanism for compact storage.

1. Remove the tray before folding.
2. Locate the folding mechanisms, typically on the sides of the highchair frame.
3. Follow the specific instructions on the highchair frame (often involving pushing buttons or pulling levers) to release the locking mechanism.
4. Gently push the front and back legs together until the highchair folds compactly.



Image: The highchair folded for compact storage.

## Cleaning and Maintenance

---

Regular cleaning ensures hygiene and extends the life of your highchair.

- **Tray Insert:** The tray insert is dishwasher-safe for easy and thorough cleaning. Remove it from the main tray and place it in the dishwasher.
- **Seat Pad:** The seat pad is wipeable. Use a damp cloth with mild soap and water to clean spills and messes. Do not machine wash or submerge the seat pad.
- **Frame:** Wipe the highchair frame with a damp cloth and mild soap. Dry thoroughly.
- **Harness Straps:** Clean harness straps with a damp cloth and mild soap. Allow to air dry completely before use.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, bleach, or strong detergents, as these can damage the materials.

## Storage

---

When not in use, the highchair can be folded compactly and stands on its own, making it ideal for small spaces or travel.

- Ensure the highchair is clean and dry before storing.
- Fold the highchair as described in the 'Folding for Storage' section.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

## Troubleshooting

---

If you encounter any issues with your highchair, please refer to the following common solutions:

- **Highchair does not lock open:** Ensure all folding mechanisms are fully extended and clicked into place. Check for any obstructions.
- **Tray does not attach securely:** Verify that the tray is aligned correctly with both armrests and that the release levers are fully engaged after sliding the tray into position.
- **Harness is difficult to adjust:** Ensure the straps are not twisted. Refer to the 'Harness Use' section for proper adjustment.

If you are unable to resolve an issue, please contact Disney customer support for assistance.

## Specifications

---

<b>Brand</b>	Disney
<b>Model Number</b>	HC218CZR
<b>Product Dimensions (Unfolded)</b>	18.3"D x 6.1"W x 25.39"H
<b>Item Weight</b>	12.77 pounds (5.79 kg)
<b>Maximum Weight Recommendation</b>	50 Pounds (22.7 kg)
<b>Age Range</b>	6 months and up
<b>Tray Positions</b>	3-position adjustable
<b>Portability</b>	Foldable, stands alone when folded

## Warranty and Support

---

For warranty information, replacement parts, or further assistance, please contact Disney customer support. Keep your purchase receipt for warranty claims.

**Online Support:** Visit the official Disney Baby website for product registration and support resources.

**Contact Information:** Refer to the packaging or the official Disney website for the most current customer service contact details.



### [4 FT Animated Holiday Minnie Mouse - Use and Care Guide](#)

This guide provides instructions for the setup, operation, and care of the 4 FT Animated Holiday Minnie Mouse. Learn how to assemble, use the different settings, and store the product safely.



### [Disney Minnie 6V Train & Tracks: User Manual and Safety Guide](#)

Comprehensive guide for the Disney Minnie 6V Train & Tracks ride-on toy, covering charging, operation, safety precautions, and warranty information. Includes detailed instructions for assembly and maintenance.



### [Mickey and Minnie Mouse RC Vehicle User Manual](#)

Instructions and safety information for operating the Disney 9 Inch Mickey Mouse Fire Truck RC Vehicle and Disney 9 Inch Minnie Mouse Bake Shop RC Vehicle by MegaGain International Ltd.



### [Disney Minnie Mouse Watch - Warranty and Safety Information](#)

Official warranty and safety information for the Disney Minnie Mouse watch (Model MN1064). Includes details on product care, disposal, and manufacturer information.



### [The Little Mermaid Twinkle Trove Activity Gym - Assembly and Care Instructions](#)

Comprehensive guide for the Disney's The Little Mermaid Twinkle Trove Activity Gym, including safety warnings, assembly instructions, care and cleaning tips, and battery information. Features multilingual support.



### [Setting Up a Disney MagicMobile Pass for iPhone, Apple Watch, and Android Devices](#)

Learn how to set up and use your Disney MagicMobile Pass on iPhone, Apple Watch, and Android smartphones with Google Wallet for seamless access to theme parks, Lightning Lane entrances, and more.