

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Home Accents Holiday](#) /
- › Home Accents Holiday Universal 12-inch Light Stakes (Model 80282) Instruction Manual

Home Accents Holiday 80282

Universal 12-inch Light Stakes Instruction Manual

Brand: Home Accents Holiday | Model: 80282

1. INTRODUCTION

Thank you for choosing the Home Accents Holiday Universal 12-inch Light Stakes. These stakes are designed to securely hold your outdoor holiday lights, providing a neat and festive display. This manual provides essential information for the safe and effective use of your light stakes.



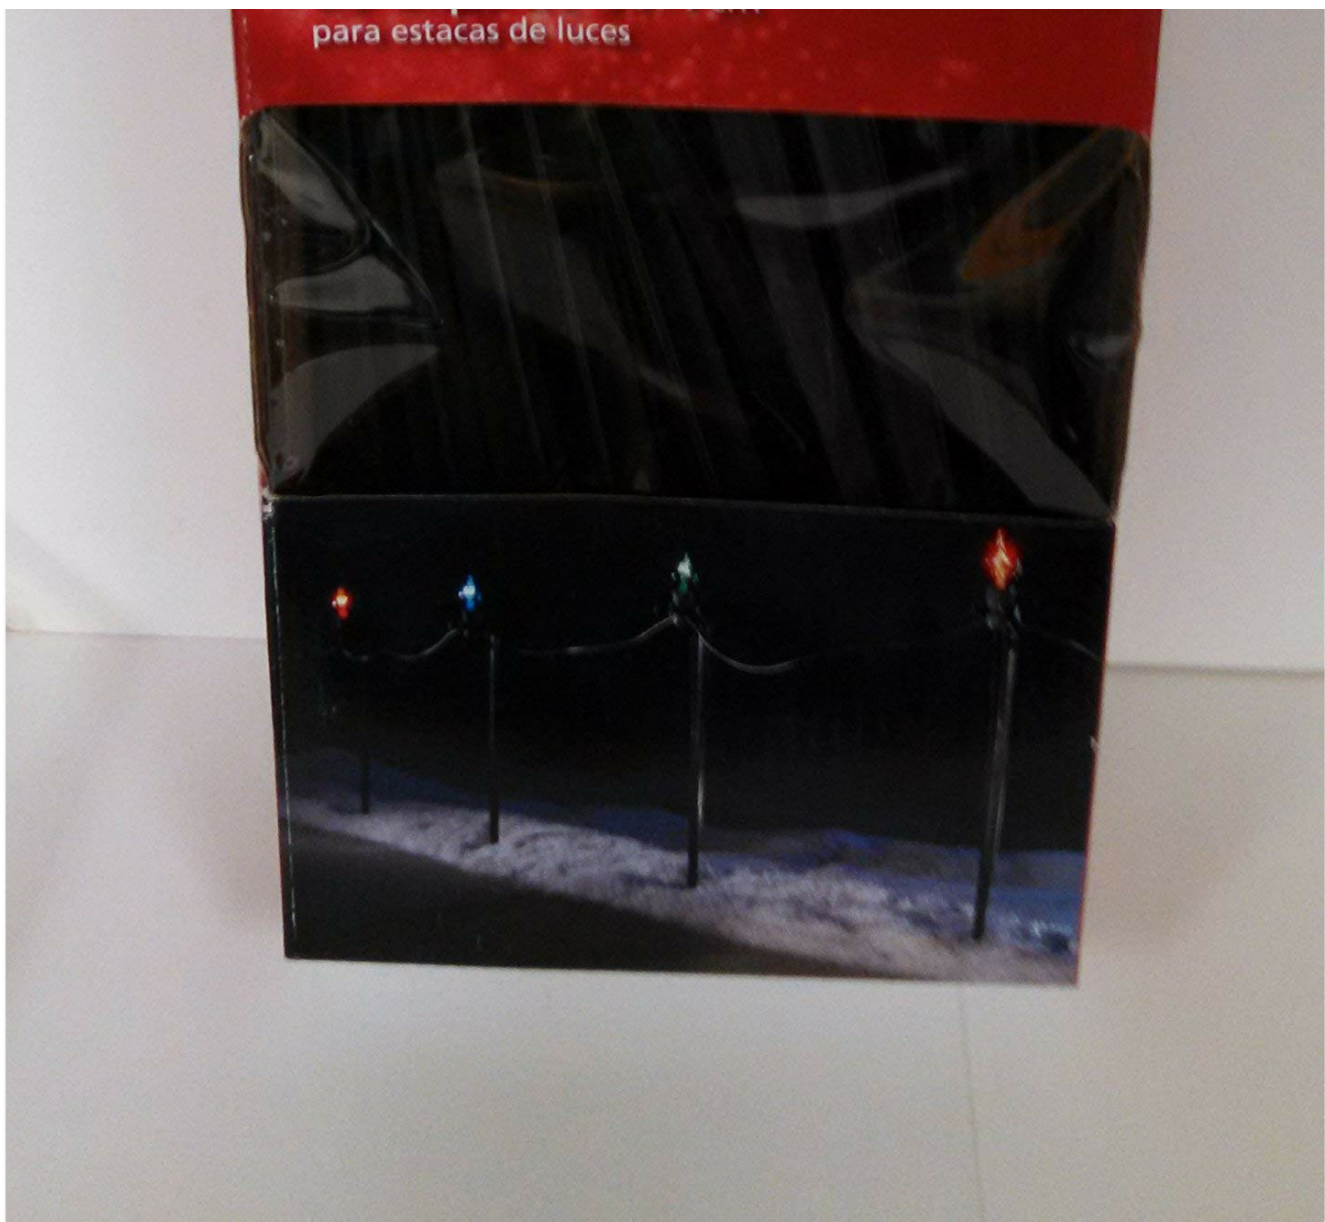


Figure 1: Home Accents Holiday Universal 12-inch Light Stakes (25 count).

2. SAFETY INFORMATION

CAUTION: Sharp pointed end. Handle with care during insertion and removal. Always ensure proper installation to prevent dislodging. Avoid exposure to extreme temperatures and harsh chemicals.

- Keep out of reach of children.
- Do not use stakes for purposes other than intended.
- Inspect stakes for damage before each use. Discard any broken or cracked stakes.
- Ensure electrical cords are not pinched or damaged by the stakes.

3. PACKAGE CONTENTS

Your package should contain the following items:

- 25 x Universal 12-inch Light Stakes

4. SETUP AND INSTALLATION

Follow these steps to set up your light stakes for outdoor holiday lighting:

1. **Prepare the Stakes:** If your stakes come with a foldable top piece, gently bend it over until it clicks into place, forming the light clip.
2. **Attach Lights:** Carefully place the socket of your C7 or C9 holiday light bulb into the clip at the top of the stake. Ensure the light is securely held.
3. **Secure the Wire:** Guide the light string wire into the designated notch on the stake to keep it tidy and prevent it from interfering with the light bulb.
4. **Ground Insertion:** Push the pointed end of the assembled light stake firmly into the ground. Ensure the stake is vertical and stable. For softer ground, the pointed end allows for easy insertion. For harder ground, apply steady pressure.
5. **Spacing:** Space the stakes evenly according to your desired lighting design.

Setup Demonstration Videos

Your browser does not support the video tag.

Video 1: This video demonstrates the flexibility of the light stakes and how to attach a light bulb to the stake using the integrated clip. It also shows the stakes in use with various colored lights in a festive outdoor setting.

Your browser does not support the video tag.

Video 2: This video illustrates the process of placing a C7/C9 light socket onto the stake and securing the wire. It concludes with a display of multiple stakes holding lights along a garden path, enhancing outdoor holiday decorations.

Your browser does not support the video tag.

Video 3: This video demonstrates how to attach a Christmas light bulb to the stake and then insert the stake into the ground. It shows the stakes effectively holding lights for outdoor holiday displays.

Your browser does not support the video tag.

Video 4: This video shows the process of attaching a light bulb to the stake and inserting it into the ground. It highlights the ease of use for setting up Christmas lights with these stakes.

5. OPERATING INSTRUCTIONS

Once installed, your light stakes will hold your holiday lights in place. Ensure all electrical connections are secure and weather-resistant according to your light set's instructions. The stakes are designed to keep your lights elevated and visible, creating a consistent and attractive display.

6. MAINTENANCE

- **Cleaning:** Clean stakes with a damp cloth and mild soap if necessary. Avoid harsh chemicals that may degrade the plastic.
- **Storage:** After the holiday season, remove stakes from the ground, clean them, and store them in a cool, dry place away from direct sunlight to prolong their lifespan.
- **Inspection:** Regularly inspect stakes for any signs of wear, damage, or brittleness, especially before and after storage.

7. TROUBLESHOOTING

- **Stakes Breaking During Installation:** Ensure the ground is not excessively hard or frozen. If the ground is too firm, pre-drill a small pilot hole or soften the soil with water before inserting the stakes.
- **Lights Not Staying in Clip:** Verify that the light bulb socket is correctly seated and clicked into the stake's clip.

mechanism. Ensure the light set is compatible with C7/C9 style clips.

- **Stakes Leaning/Falling Over:** Ensure the stakes are pushed deep enough into the ground to provide adequate stability. For very soft or loose soil, consider using additional support or repositioning.

8. SPECIFICATIONS

Feature	Detail
Brand	Home Accents Holiday
Model Number	80282
Material	Plastic, Polypropylene (PP)
Color	Black
Product Dimensions	12 inches (Length)
Item Weight	0.79 Pounds (for 25 count)
Number of Pieces	25
UPC	086786802823
Manufacturer	Gemmy

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the original product packaging or contact Home Accents Holiday customer service directly. Keep your purchase receipt for any warranty claims.