

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hello Kitty](#) /

› [Hello Kitty KT2035P Personal CD Player User Manual](#)

Hello Kitty KT2035P

Hello Kitty KT2035P Personal CD Player User Manual

Model: KT2035P

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Hello Kitty KT2035P Personal CD Player. Please read this manual thoroughly before using the device to ensure proper function and longevity.

PRODUCT OVERVIEW



Figure 1: Front view of the Hello Kitty KT2035P Personal CD Player with included earbuds connected.



Figure 2: Side view of the Hello Kitty KT2035P Personal CD Player, showing the compact design and earbud connection.



Figure 3: The Hello Kitty KT2035P Personal CD Player with its lid open, revealing a compact disc placed inside the disc tray.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the CD player.
2. Open the battery compartment cover.
3. Insert two (2) AA alkaline batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Connecting Earbuds

- Insert the 3.5mm jack of the included stereo earbuds into the headphone port on the side of the CD player.
- Ensure the connection is firm.

3. Powering On/Off

- To power on, press the **PLAY/PAUSE** button.
- To power off, press the **STOP** button twice, or the unit will automatically power off after a period of inactivity.

OPERATING INSTRUCTIONS

1. Loading a CD

1. Gently lift the lid of the CD player.
2. Place a CD (CD-R/RW compatible) onto the center spindle with the label side facing up.
3. Press the CD down gently until it clicks into place.
4. Close the lid securely.

2. Basic Playback Controls

- **PLAY/PAUSE** (▶/⏸): Press once to start playback. Press again to pause. Press again to resume.
- **STOP** (■): Press once to stop playback. Press twice to power off the unit.
- **SKIP/SEARCH FORWARD** (▶▶): Press once to skip to the next track. Press and hold to fast-forward within a track.
- **SKIP/SEARCH BACK** (◀◀): Press once to skip to the beginning of the current track. Press twice to skip to the previous track. Press and hold to fast-rewind within a track.

3. Repeat Functions

- Press the **MODE** button (or equivalent, refer to device markings) repeatedly to cycle through repeat modes:
 - **REPEAT 1**: Repeats the current track.
 - **REPEAT ALL**: Repeats all tracks on the CD.
 - **RANDOM/SHUFFLE**: Plays tracks in a random order.
 - **INTRO**: Plays the first few seconds of each track.

4. Programmable Memory

The CD player allows you to program a sequence of tracks to play in a specific order.

1. In STOP mode, press the **PROGRAM** button (or equivalent).
2. Use the **SKIP/SEARCH** buttons to select the desired track number.
3. Press the **PROGRAM** button again to confirm and add the track to the program list.
4. Repeat steps 2-3 for all desired tracks.
5. Press the **PLAY** button to start playback of the programmed sequence.

5. Anti-Skip Protection

The Hello Kitty KT2035P features 60-second anti-skip protection, which buffers audio data to prevent interruptions during minor bumps or shakes. This feature is automatically active during playback.

6. Bass Boost

Activate the Bass Boost function (if available, typically a switch or button labeled **BASS** or **BBS**) to enhance low-frequency audio output for a richer sound experience.

7. Line-Out Jack Usage

The line-out jack allows you to connect the CD player to external speakers or an amplifier. Use a standard 3.5mm audio cable (not included) to connect the line-out jack on the CD player to the auxiliary input of your external audio system.

MAINTENANCE

1. Cleaning the CD Player

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- For the lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth specifically designed for optical lenses.

2. Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
CD does not play.	CD is dirty, scratched, or inserted incorrectly. Lid is not closed.	Clean the CD. Ensure the CD is placed correctly with the label side up. Close the lid firmly.
Sound skipping or distortion.	CD is dirty or scratched. Unit is subjected to excessive vibration.	Clean the CD. Ensure the unit is on a stable surface or minimize movement. Anti-skip protection has limits.
No sound from earbuds.	Earbuds not properly connected. Volume too low. Faulty earbuds.	Ensure earbuds are fully plugged in. Increase volume. Test with another pair of earbuds.

SPECIFICATIONS

- **Model Number:** FBA_KT2035P
- **Brand:** Hello Kitty
- **Compatible Disc Formats:** CD, CD-R/RW
- **Anti-Skip Protection:** 60 seconds
- **Power Source:** 2 x AA Batteries (not included)
- **Audio Output:** 3.5mm Headphone Jack, 3.5mm Line-out Jack
- **Special Features:** Programmable Memory, Bass Boost, Intro/Random Play, Repeat 1 or All
- **Dimensions:** 14.22 x 2.54 x 14.22 cm (approx. 5.6 x 1 x 5.6 inches)
- **Weight:** 226.8 g (approx. 0.5 lbs)

WARRANTY AND SUPPORT

Warranty information for the Hello Kitty KT2035P Personal CD Player is typically provided at the point of purchase or included with the product packaging. Please refer to these documents for details regarding warranty coverage and terms.

For technical support or further assistance, please contact the retailer or manufacturer's customer service department using the contact information provided with your purchase.

