



[Manuals.plus](#) /

› [Fotorama](#) /

› Fotorama Tap It Wireless Pod Game: Instruction Manual for Model 3085

Fotorama 3085

Fotorama Tap It Wireless Pod Game: Instruction Manual

Model: 3085

INTRODUCTION

Welcome to the Fotorama Tap It Wireless Pod Game! This high-tech, fast-paced game offers four exciting modes designed to enhance hand-eye coordination, agility, and memory. This manual provides comprehensive instructions for setup, gameplay, and maintenance to ensure an optimal experience.



Image: The Fotorama Tap It game box with four illuminated wireless pods, showcasing the product's packaging and core components.

PACKAGE CONTENTS

- 4 Wireless Game Pods
- Instruction Manual (this document)

Each game set includes four wireless pods. Additional pods can be connected for expanded gameplay, supporting up to 24 pods in total.

BUY MULTIPLE TAP IT GAMES

EACH GAME
COMES WITH
4 PODS

ALL
PODS SYNC
TOGETHER

AND PLAY WITH UP TO **24** PODS

Image: Several Fotorama Tap It pods, some glowing, arranged on a white surface, illustrating the potential for connecting multiple sets for larger games.

SETUP GUIDE

1. **Battery Installation:** Each pod requires 2 AAA batteries (not included). Locate the battery compartment on the underside of each pod, open it, insert the batteries according to the polarity markings, and close the compartment securely.
2. **Power On:** Locate the ON/OFF switch on the underside of each pod. Slide the switch to the "ON" position. You will hear a beep, and the pod will light up, indicating it is ready for use.
3. **Synchronization:** The pods automatically synchronize with each other when powered on. One pod will act as the master unit, allowing you to select game modes.

Your browser does not support the video tag.

Video: An official product video demonstrating the Fotorama Tap It game in action, showing how the pods light up and are interacted

with during gameplay.

GAME MODES

The Fotorama Tap It game features four distinct game modes, offering varied challenges and fun for up to 8 players. You can connect up to 24 pods for an even larger game experience.

BUILT IN GAME SETTINGS



SWITCH • PONG • TAP IT! • MEMORY

Image: A visual representation of the four game modes: Tap It, Pong, Switch, and Memory, with brief descriptions of each game's objective.

1. Tap It

In this mode, each player is assigned a specific color. The objective is to tap your assigned color pod as many times as possible within a 60-second time limit. The player with the most taps on their color wins.

2. Pong

Two players arrange their pods in a straight line. Players take turns tapping the illuminated pod to "send" the light to the next pod. The game intensifies as the light moves faster, challenging players to maintain the sequence without missing a tap.

3. Switch

Players strategically place pods around a room or backyard. When a pod illuminates with your assigned color, race to it and tap it before the color switches to another pod. The player who successfully taps their color the most times wins.

4. Memory

This mode challenges players to remember and replicate a sequence of illuminated pods. The game starts with a short sequence, and each successful replication adds another step to the pattern, testing memory and reaction skills.



IMPROVES:

**AGILITY • MEMORY • SPEED
HAND EYE COORDINATION**

Image: Two children actively engaged in playing the Tap It game, demonstrating the interactive nature and the focus on agility and hand-eye coordination.

CARE AND MAINTENANCE

- **Cleaning:** Wipe pods with a soft, dry cloth. Do not immerse in water or use harsh chemicals.
- **Storage:** Store pods in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods to prevent leakage.
- **Battery Replacement:** Replace batteries when pods become unresponsive or lights dim. Ensure correct battery type (AAA) and polarity.

TROUBLESHOOTING

Issue	Solution
Pods not turning on.	Check battery installation and ensure batteries are fresh. Verify the ON/OFF switch is in the "ON" position.
Pods not synchronizing.	Ensure all pods are within close proximity and powered on. If issues persist, turn all pods off and then on again.
Lights are dim or unresponsive.	Replace batteries in the affected pods.
Game ends unexpectedly.	This may indicate a missed tap or an incorrect action for the selected game mode. Review game rules.

PRODUCT SPECIFICATIONS

Model Number: 3085

Product Dimensions: 3 x 3 x 2.5 inches (per pod)

Item Weight: 14.1 ounces (total for 4 pods)

Manufacturer: Fotorama

Recommended Age: 6 years and up

Power Source: 2 AAA batteries per pod (not included)

Connectivity: Wireless

IMPORTANT SAFETY INFORMATION

WARNING: Not suitable for children under 3 years due to small parts. Choking hazard.

- Always supervise young children during play.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly.



WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Fotorama website. Keep your purchase receipt for warranty claims.