

[Manuals.plus](#) /

› [Fotorama](#) /

› Fotorama Alien Vision Shooting Game (Model KrrXxGN3128ejbzD) Instruction Manual

Fotorama KrrXxGN3128ejbzD

Fotorama Alien Vision Shooting Game Instruction Manual

Model: KrrXxGN3128ejbzD

INTRODUCTION

The Fotorama Alien Vision Shooting Game provides an interactive experience where players use high-tech goggles and a wrist blaster to engage with virtual aliens. This manual provides essential information for setup, operation, and maintenance to ensure optimal enjoyment and safety.

SAFETY INFORMATION

- **Age Recommendation:** Suitable for children ages 5 and up.
- **Choking Hazard:** Contains small parts. Not for children under 3 years.
- **Battery Safety:** Always use the correct type of batteries (AAA). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly.
- **Supervision:** Adult supervision is recommended during play.
- **Not Virtual Reality:** This product is not a Virtual Reality (VR) game. The goggles project images onto the lenses, allowing interaction with the real environment.

WHAT'S IN THE BOX

- 1 Pair of Space Goggles
- 1 Wrist Blaster

Note: 6 AAA batteries are required and not included.

SETUP

1. Battery Installation

1. Locate the battery compartments on both the Space Goggles and the Wrist Blaster.

2. Using a small Phillips head screwdriver, open the battery compartment covers.
3. Insert 3 AAA batteries into the Space Goggles, ensuring correct polarity (+/-).
4. Insert 3 AAA batteries into the Wrist Blaster, ensuring correct polarity (+/-).
5. Replace the battery compartment covers and secure them with the screws.

2. Assembling Goggles and Wrist Blaster

- Attach the adjustable strap to the Space Goggles for a secure and comfortable fit.
- Secure the Wrist Blaster to your wrist using its adjustable strap.

Your browser does not support the video tag.

Video: Official Fotorama Alien Vision Set Up Guide. This video demonstrates how to install batteries and assemble the goggles and wrist blaster.



Image: A diagram illustrating the battery compartments for both the goggles and the wrist blaster, indicating that 6 AAA batteries are required.

OPERATING INSTRUCTIONS

1. Starting the Game

- Put on the Space Goggles and secure them comfortably.
- Wear the Wrist Blaster on your dominant hand.
- The game will automatically begin once powered on, or by pressing a button on the goggles (refer to specific model instructions if available).

2. Gameplay

- Aliens will appear projected onto the lenses of your goggles.
- Aim the Wrist Blaster at the aliens you see and press the trigger button to "shoot" them.
- Listen for roaring sounds, indicating a successful hit.
- **Scoring:** Different colored aliens may yield different points. For example, tagging a red alien provides double points.
- **Difficulty Levels:** The game features 4 difficulty levels. Select your preferred level using the controls on the goggles (if applicable).
- At the end of each round, the game's "home base" will announce your score.



Image: A visual representation of what the player sees through the goggles, with various aliens appearing in the field of view, some highlighted with target reticles.

Your browser does not support the video tag.

Video: Official Fotorama Alien Vision Commercial. This video demonstrates the gameplay experience, showing how aliens appear in the goggles and how the wrist blaster is used.

MAINTENANCE

- **Cleaning:** Wipe the goggles and wrist blaster with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace all 6 AAA batteries when the game's performance diminishes or sounds become distorted.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Game does not turn on.	Batteries are incorrectly installed or depleted.	Check battery polarity and replace all 6 AAA batteries with new ones.
Aliens are not visible in the goggles.	Goggles are not powered on or internal projector issue.	Ensure goggles have fresh batteries and are turned on. If problem persists, contact customer support.
Wrist Blaster is not registering shots.	Blaster batteries are low or connection issue.	Replace Wrist Blaster batteries. Ensure the blaster is properly synced with the goggles (if applicable, refer to specific model instructions).
Sound is distorted or absent.	Low batteries.	Replace batteries in both the goggles and the wrist blaster.

SPECIFICATIONS

- **Product Dimensions:** 9.5 x 4.5 x 7 inches
- **Item Weight:** 1.06 pounds
- **Model Number:** KrrXxGN3128ejbzD
- **Manufacturer Recommended Age:** 5 - 10 years
- **Batteries Required:** 6 AAA batteries (3 for goggles, 3 for blaster)
- **Manufacturer:** Fotorama

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact Fotorama customer service directly. Contact details can typically be found on the product packaging or the official Fotorama website.