

[Manuals.plus](#) /

› [Fotorama](#) /

› Fotorama Juan Calakas Ghost Hunting Game Instruction Manual

Fotorama B00PPWSTQK

Fotorama Juan Calakas Ghost Hunting Game Instruction Manual

Model: B00PPWSTQK

PRODUCT OVERVIEW

The Fotorama Juan Calakas Ghost Hunting Game is an interactive board game designed for players to eliminate as many projected ghosts as possible within a specified time limit. This game provides an engaging experience for children and adults alike, focusing on quick reflexes and observation.



Image: Front view of the Juan Calakas game box, showing the main character and game elements.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD. This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended during play.

SETUP

1. **Unpack Components:** Carefully remove all game components from the packaging. Ensure all parts are present: Juan Calakas figure, ghost-eliminating pistol.

2. **Install Batteries:** The game requires batteries. Juan Calakas requires 3 AAA batteries, and the pistol requires 3 AA batteries. (*Note: Batteries are not included*)
 - Locate the battery compartments on Juan Calakas and the pistol.
 - Using a screwdriver (not included), open the battery compartment covers.
 - Insert the required batteries, ensuring correct polarity (+/-).
 - Replace the battery compartment covers and secure them with the screws.
3. **Prepare Play Area:** For optimal ghost projection, play in a dimly lit or dark room. Clear any obstacles that might interfere with the projected images or movement.



Image: Back of the game box illustrating the setup and gameplay steps, including battery installation.

OPERATING INSTRUCTIONS

Follow these steps to begin playing the Juan Calakas Ghost Hunting Game:

1. **Activate Juan Calakas:** Turn on the Juan Calakas figure. It will begin to rotate its head.
2. **Synchronize Pistol:** Activate the ghost-eliminating pistol. Ensure it is synchronized with Juan Calakas. The pistol will emit a sound or light indicating it's ready.
3. **Ghost Projections:** Juan Calakas will rotate its head, projecting images of ghosts onto the surrounding walls or surfaces for brief moments.
4. **Shoot the Ghosts:** Aim the pistol at the projected ghosts and fire rapidly. Each successful hit will be registered by the pistol.
5. **Winning the Game:** The objective is to hit as many ghosts as possible within the game's time limit. The player who eliminates the most ghosts wins.



Image: Close-up view of the Juan Calakas figure, highlighting its design and features.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the Juan Calakas figure and the pistol. Do not use abrasive cleaners or immerse components in water.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries from the game components if they will not be used for an extended period to prevent leakage and damage.

TROUBLESHOOTING

- **Game Not Turning On:**
 - Ensure batteries are correctly installed with proper polarity.
 - Check if batteries are fresh and fully charged. Replace if necessary.
 - Verify that the power switch is in the "ON" position.
- **Ghosts Not Projecting Clearly:**
 - Ensure the room is sufficiently dark. Ambient light can diminish projection clarity.
 - Check for any obstructions blocking the projector lens on Juan Calakas.
 - Verify that Juan Calakas is placed on a stable, level surface.
- **Pistol Not Registering Hits:**
 - Confirm the pistol is properly synchronized with Juan Calakas.
 - Ensure you are aiming directly at the projected ghost images.
 - Check the pistol's batteries.

SPECIFICATIONS

Brand	Fotorama
Model Number	B00PPWSTQK (ASIN)
Material	Plastic
Dimensions	22.86 x 10.16 x 22.86 cm (9 x 4 x 9 inches)
Weight	460 g (1.01 lbs)
Recommended Age	6 years and up

Number of Players	1 (<i>Note: While listed as 1 player, competitive play with multiple pistols is implied by gameplay.</i>)
Batteries Required	Yes (3 AAA for Juan Calakas, 3 AA for pistol - not included)
Assembly Required	No

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or replacement parts, please contact Fotorama customer service. Refer to the product packaging or the official Fotorama website for contact details.

Online Resources: You may find additional support and FAQs on the official [Fotorama Brand Store](#).