

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Prestige](#) /
- › [Prestige Squeezo 200-Watt Slow Juicer User Manual](#)

Prestige Squeezo Slow Juicer

Prestige Squeezo 200-Watt Slow Juicer Instruction Manual

Model: Squeezo Slow Juicer

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Prestige Squeezo 200-Watt Slow Juicer. Please read this manual thoroughly before first use and retain it for future reference.

The Prestige Squeezo Slow Juicer is designed for efficient juice extraction, utilizing slow juicing technology to preserve nutritional content. It features a 200-watt motor and a durable Ultem juicing screw for optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage (230 Volts).
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the feeding chute during operation to prevent injury and damage to the juicer. Use the food pusher provided.
- Always ensure the juicer is correctly assembled and the interlocking system is engaged before switching it on.
- Unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Do not operate the juicer if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Supervise children to ensure they do not play with the appliance.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Prestige Squeezo Slow Juicer:

- **Motor Base:** Contains the 200-watt motor and control buttons.
- **Juicing Bowl:** Collects the extracted juice.
- **Juicing Screw (Auger):** Made of Ultem, this component gently presses fruits and vegetables.

- **Stainless Steel Sieve:** Separates juice from pulp.
- **Lid with Feeding Chute:** Where ingredients are inserted.
- **Food Pusher:** Used to guide ingredients into the chute.
- **Juice Outlet with Cap:** For dispensing juice.
- **Pulp Outlet:** For expelling pulp.
- **Cleaning Brush:** For maintenance.



Image 1: The Prestige Squeezo 200-Watt Slow Juicer in its assembled state. The image displays the main body, the feeding chute at the

top, the juice outlet with a tap on the side, and the control panel with 'ON' and 'REV' buttons.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your juicer before use:

1. Place the motor base on a stable, flat, and dry surface.
2. Align the juicing bowl with the motor base and rotate it clockwise until it locks securely into place.
3. Insert the juicing screw (auger) into the center of the juicing bowl.
4. Place the stainless steel sieve over the juicing screw, ensuring it sits correctly within the bowl.
5. Position the lid with the feeding chute onto the juicing bowl. Rotate it clockwise until the interlocking system engages and the lid is firmly secured. An arrow indicator on the lid and base will help align for "close" position.
6. Place juice and pulp collection containers under their respective outlets.
7. Ensure the juice outlet cap is closed if you wish to mix juice inside the bowl before dispensing.

5. OPERATING INSTRUCTIONS

Prepare your ingredients and begin juicing:

1. **Ingredient Preparation:** Wash all fruits and vegetables thoroughly. Remove large seeds, pits, and hard skins (e.g., pineapple, melon). Cut ingredients into pieces small enough to fit into the feeding chute.
2. **Power On:** Plug the juicer into a 230V power outlet. Press the 'ON' button to start the juicer.
3. **Feeding Ingredients:** Slowly feed the prepared ingredients into the feeding chute. Use the food pusher gently to guide them down. Do not force ingredients, as this can strain the motor.
4. **Juice Extraction:** The slow juicing technology will gently press the ingredients, separating the juice from the pulp. Juice will flow from the juice outlet, and pulp will be expelled from the pulp outlet.
5. **Reverse Function:** If ingredients get clogged, press and hold the 'REV' (Reverse) button for a few seconds to clear the blockage. Release the button, then press 'ON' to resume juicing.
6. **Finishing:** Once juicing is complete, press the 'OFF' button and unplug the appliance.

Note: For maximum extraction and to prevent clogging, alternate between soft and hard ingredients.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer. Always unplug the appliance before cleaning.

1. **Disassembly:** Turn off and unplug the juicer. Rotate the lid counter-clockwise to unlock and remove it. Remove the stainless steel sieve and juicing screw from the juicing bowl. Finally, unlock and remove the juicing bowl from the motor base.
2. **Rinsing:** Rinse all detachable parts (lid, juicing screw, sieve, juicing bowl, food pusher) under running water immediately after use. This prevents pulp from drying and sticking.
3. **Cleaning the Sieve:** Use the provided cleaning brush to thoroughly clean the stainless steel sieve. Pay special attention to the small mesh holes to remove any trapped pulp.
4. **Washing:** All detachable parts are dishwasher safe. Alternatively, wash them in warm, soapy water, then rinse and dry thoroughly.
5. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water.

6. **Storage:** Ensure all parts are completely dry before reassembling or storing the juicer in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Prestige Squeezo Slow Juicer, refer to the following common problems and solutions:

- **Juicer does not start:**

- Ensure the power cord is securely plugged into a working outlet.
- Verify that all parts are correctly assembled and the interlocking system is engaged. The juicer will not operate if not properly assembled.

- **Juicer stops during operation or gets clogged:**

- Ingredients may be too large or too much has been fed at once. Turn off the juicer, press and hold the 'REV' button for a few seconds to clear the blockage, then restart.
- Cut ingredients into smaller pieces and feed them slowly.

- **Excessive pulp in juice:**

- The stainless steel sieve may be clogged. Clean the sieve thoroughly using the provided brush.
- Ensure the sieve is correctly seated in the juicing bowl.

- **Loud noise or vibration:**

- Check that all components are correctly assembled and securely locked.
- Ensure the juicer is on a stable, flat surface.

If the problem persists after attempting these solutions, please contact Prestige customer support.

8. SPECIFICATIONS

Brand	Prestige
Model Number	Squeezo Slow Juicer
Maximum Power	200 Watts
Operating Voltage	230 Volts
Material	Stainless Steel (Blade, Sieve), Ultem (Juicing Screw)
Special Feature	Portable, Slow Juicing Technology
Product Care Instructions	Dishwasher Safe (detachable parts)
Item Weight	7 kg 600 g
Included Components	Juicer (Motor Base, Juicing Bowl, Juicing Screw, Sieve, Lid, Food Pusher, Cleaning Brush)

9. WARRANTY AND CUSTOMER SUPPORT

Prestige products are manufactured to high-quality standards. For warranty information, please refer to the warranty card

included with your purchase or visit the official Prestige website. In case of any issues or for customer support, please contact Prestige customer service directly.

Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Prestige. All rights reserved. This manual is for informational purposes only.