

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Transcend](#) /

› [Transcend 2GB Standard SD Memory Card User Manual for Panasonic PV-GS83 Camcorder](#)

Transcend PV-GS83-KSD2GB

Transcend 2GB Standard SD Memory Card User Manual

For use with compatible devices, including the Panasonic PV-GS83 Camcorder

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Transcend 2GB Standard Secure Digital (SD) Memory Card. This card is designed to provide reliable data storage for a variety of compatible electronic devices, such as digital cameras and camcorders, including the Panasonic PV-GS83 Camcorder. Please read these instructions carefully to ensure optimal performance and longevity of your memory card.



Image 1.1: Front view of the Transcend 2GB Standard SD Memory Card, showing the capacity and brand logo.

2. SETUP

2.1. Checking the Write-Protect Switch

Before inserting the SD card, ensure the write-protect switch on the side of the card is in the "unlocked" position.

(upward) position. If the switch is in the "locked" (downward) position, you will not be able to save or delete data on the card.



Image 2.1: The Transcend 2GB SD card, highlighting the small yellow write-protect switch on the left side.

2.2. Inserting the SD Card into the Panasonic PV-GS83 Camcorder

1. Locate the SD card slot on your Panasonic PV-GS83 Camcorder. Refer to your camcorder's instruction manual for the exact location.
2. Orient the SD card correctly, with the metal contacts facing the camcorder and the label facing outwards (or as indicated by the camcorder's slot design).
3. Gently push the SD card into the slot until it clicks into place. Do not force the card.
4. Close any cover or door protecting the SD card slot.



Image 2.2: A hand holding an SD card, demonstrating the typical orientation for insertion into a compatible device like a camcorder.

2.3. Formatting the SD Card

Warning: Formatting an SD card will erase all data permanently. Back up any important files before

proceeding.

It is highly recommended to format a new SD card, or an SD card that has been used in another device, directly within your Panasonic PV-GS83 Camcorder. This ensures optimal compatibility and performance.

1. Turn on your Panasonic PV-GS83 Camcorder.
2. Navigate to the camcorder's menu system. Look for options related to "Setup," "System," or "Card Tools."
3. Select the "Format" or "Initialize" option for the SD card.
4. Confirm the formatting process when prompted.
5. Once formatting is complete, the card is ready for use.

3. OPERATING THE SD CARD

3.1. Recording Video/Photos

Once the SD card is properly inserted and formatted, your Panasonic PV-GS83 Camcorder should automatically recognize it as a storage medium. Refer to your camcorder's manual for specific instructions on selecting the SD card as the recording destination and initiating recording.

- Ensure sufficient free space is available on the card before recording.
- Avoid removing the card during recording or data transfer to prevent data corruption.

3.2. Playing Back Content

To view recorded videos or photos, access the playback mode on your Panasonic PV-GS83 Camcorder. The camcorder will read the data directly from the SD card. Consult your camcorder's manual for detailed playback instructions.

3.3. Transferring Data to a Computer

To transfer files from the SD card to a computer, you have two primary methods:

1. **Using a Card Reader:** Remove the SD card from the camcorder and insert it into a compatible SD card reader connected to your computer. The card will appear as a removable drive.
2. **Connecting the Camcorder:** Connect your Panasonic PV-GS83 Camcorder directly to your computer using a USB cable (refer to your camcorder's manual for connection details). The camcorder may appear as a removable drive or require specific software.

Always safely eject or unmount the SD card from your computer's operating system before physically removing it from the card reader or disconnecting the camcorder.

4. MAINTENANCE

4.1. Handling Precautions

- Avoid bending, dropping, or subjecting the card to strong impacts.
- Keep the card away from extreme temperatures (hot or cold), direct sunlight, and high humidity.
- Do not touch the metal contacts on the back of the card. If they become dirty, gently wipe them with a clean, dry, lint-free cloth.
- Protect the card from static electricity.

4.2. Using the Write-Protect Switch

The small switch on the side of the SD card is a write-protect lock. When slid to the "lock" position (downward), it prevents any new data from being written to the card and existing data from being deleted or modified. This feature is useful for protecting important files from accidental erasure. To unlock, slide the switch to the "unlocked" (upward) position.

4.3. Storage

When not in use, store the Transcend SD card in a protective case to prevent dust, scratches, and physical damage.

5. TROUBLESHOOTING

5.1. Card Not Recognized by Device

- Ensure the card is inserted correctly and fully into the slot.
- Check if the metal contacts on the card are clean.
- Restart your camcorder or device.
- Try the card in another compatible device to determine if the issue is with the card or the device.

5.2. Cannot Write or Delete Data

- Verify that the write-protect switch on the SD card is in the "unlocked" position.
- Check if the card is full. Delete unnecessary files or transfer them to another storage device.
- If the card is corrupted, you may need to format it (see Section 2.3). Be aware that formatting will erase all data.

5.3. Slow Performance or Errors During Recording/Playback

- Ensure the card is compatible with your device's speed requirements.
- If the card has been used extensively, fragmentation might occur. Back up data and reformat the card.
- Check your device's settings; some devices may have different recording quality settings that affect data transfer rates.

6. SPECIFICATIONS

Feature	Specification
Brand	Transcend
Model Number	PV-GS83-KSD2GB
Flash Memory Type	SD (Secure Digital)
Memory Storage Capacity	2 GB
Hardware Interface	Secure Digital Card
Compatible Devices	Camcorder (e.g., Panasonic PV-GS83)
Product Dimensions	0.08 x 0.94 x 1.26 inches

Feature	Specification
Item Weight	0.16 ounces
UPC	876544364904

7. WARRANTY AND SUPPORT

Transcend memory cards are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the official Transcend website or the warranty information included with your product packaging.

For technical support, product inquiries, or further assistance, please visit the official Transcend support website or contact their customer service department. Keep your purchase receipt and product model information handy when seeking support.

Online Resources: www.transcend-info.com

© 2023 Transcend. All rights reserved. Information subject to change without notice.

Related Documents - PV-GS83-KSD2GB

 Transcend Micro Software User Guide User guide for the Transcend Micro CPAP device software, detailing configuration, compliance management, data reporting, and contact information for Transcend Inc.	
 Transcend JetFlash Vault 100 User Manual - Secure USB Flash Drive Official user manual for the Transcend JetFlash Vault 100, detailing how to set up passwords, use the device on Windows and Mac, access settings, and find support. Learn about secure portable storage.	

 <p>Quick Guide</p>	<p><u>Transcend Micro CPAP Machine Quick Guide</u></p> <p>A quick guide to setting up and using the Transcend Micro Continuous Positive Airway Pressure (CPAP) device, including information on its features, operation, and maintenance.</p>
 <p>User Manual</p>	<p><u>Transcend Micro CPAP User Manual</u></p> <p>User manual for the Transcend Micro CPAP device, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
 <p>Read user manual before use</p>	<p><u>Transcend 40W Sun-Watt Solar Charger User Manual - Portable Power Solution</u></p> <p>Comprehensive user manual for the Transcend 40W Sun-Watt™ Solar Charger. Learn about its features, intended use with the PowerAway™ Battery for CPAP devices, charging procedures, maintenance, technical specifications, and warranty information.</p>
 <p>Quick Guide</p>	<p><u>Transcend Micro CPAP Quick Guide: Setup, Operation, and Troubleshooting</u></p> <p>This quick guide provides essential information for the Transcend Micro CPAP device, including setup instructions, operating procedures, comfort features, app connectivity, troubleshooting tips, safety warnings, and maintenance guidelines.</p>