

[manuals.plus](#) /› [Transcend](#) /› [Transcend 2GB Standard Secure Digital \(SD\) Memory Card User Manual \(Model: HDC-SD80-KSD2GB\)](#)

Transcend HDC-SD80-KSD2GB

Transcend 2GB Standard Secure Digital (SD) Memory Card User Manual

Model: HDC-SD80-KSD2GB

1. INTRODUCTION

This manual provides essential instructions for the proper use, installation, and maintenance of your Transcend 2GB Standard Secure Digital (SD) Memory Card. Please read this manual thoroughly before using the product to ensure optimal performance and data integrity. This SD card is designed for reliable data storage in compatible electronic devices.

2. PRODUCT OVERVIEW

The Transcend 2GB Standard Secure Digital (SD) Memory Card is a compact, portable storage solution. It is designed to store digital data such as photos, videos, and documents. Its robust construction ensures stability, reliability, and durability for everyday use.



Image 1: Front view of the Transcend 2GB Standard SD Memory Card, showing the capacity and brand logo.

Key features include:

- 2GB storage capacity for digital content.
- Standard Secure Digital (SD) format for broad compatibility.
- Lightweight and compact design.

Highest Quality

 Stability  Reliability  Durability



Image 2: Illustrates the quality attributes of the SD card, emphasizing stability, reliability, and durability.

3. SETUP

To begin using your Transcend 2GB SD Memory Card, follow these steps:

- 1. Identify Compatible Device:** Ensure your device (e.g., digital camera, camcorder, card reader) supports Standard SD cards. This card is compatible with devices that accept SD (Secure Digital) format.
- 2. Locate SD Card Slot:** Power off your device. Locate the SD card slot, typically found on the side or bottom of cameras and camcorders.
- 3. Insert the Card:** Gently insert the SD card into the slot with the gold contacts facing down (or as indicated by your device's manual). Push until it clicks into place. Do not force the card.
- 4. Lock Switch (Optional):** The SD card features a small lock switch on its side. Sliding this switch down (towards the 'Lock' position) write-protects the card, preventing accidental deletion or modification of data. Slide it up to enable writing. Ensure the switch is in the 'unlocked' position for normal operation.
- 5. Power On Device:** Power on your device. The device should recognize the new memory card. You may be prompted to format the card if it's new or if you wish to erase all existing data.

Wide Compatibility

DSLR Cameras
HD Camcorders



Image 3: Demonstrates the wide compatibility of the SD card with devices like DSLR cameras and HD camcorders.

4. OPERATING INSTRUCTIONS

Once the SD card is properly installed and recognized by your device, you can begin using it for data storage.

- Formatting the Card:** For first-time use or to clear all data, it is recommended to format the card using your device's menu. Refer to your device's manual for specific formatting instructions. Formatting erases all data and prepares the card for optimal performance with that specific device.
- Storing Data:** When taking photos, recording videos, or saving files, your device will automatically store them on the inserted SD card. Ensure sufficient space is available before starting a new recording session.
- Accessing Data:** To view or transfer data, you can either connect your device directly to a computer or remove the SD card and insert it into a compatible card reader connected to a computer.
- Data Transfer:** When transferring files to or from the card, ensure the process completes fully before disconnecting the card or device. Interrupting data transfer can lead to data corruption.
- Safe Removal:** Always safely eject the SD card from your computer's operating system before physically removing it from the card reader. For cameras or camcorders, ensure the device is

powered off before removing the card.



Image 4: Depicts various SD cards, including the 2GB model, in a setting that emphasizes capturing and storing precious moments with a camera.

5. MAINTENANCE AND CARE

Proper care of your SD card will help ensure its longevity and the safety of your data.

- **Physical Protection:** Avoid bending, dropping, or exposing the card to excessive force. Store it in a protective case when not in use.
- **Environmental Conditions:** Keep the card away from extreme temperatures, direct sunlight, moisture, and strong magnetic fields.
- **Cleaning:** If necessary, gently wipe the gold contacts with a clean, dry, lint-free cloth. Do not use abrasive materials or liquids.
- **Data Backup:** Regularly back up important data from your SD card to another storage medium (e.g., computer hard drive, cloud storage) to prevent data loss.
- **Write Protection:** Utilize the write-protect switch to safeguard important data from accidental deletion or overwriting.

6. TROUBLESHOOTING

If you encounter issues with your Transcend SD card, consider the following common solutions:

- **Card Not Recognized:**

- Ensure the card is fully inserted into the slot.
- Check if the device supports Standard SD cards.
- Verify the card's lock switch is in the 'unlocked' position.
- Try the card in another compatible device or card reader to rule out a device issue.

- **Cannot Write/Delete Files:**

- Ensure the card's lock switch is in the 'unlocked' position.
- Check if the card is full.
- The card might be corrupted. Attempt to back up data (if possible) and then format the card.

- **Slow Performance:**

- Ensure your device's firmware is up to date.
- The card may be fragmented. Back up data and reformat the card.

- **Data Corruption:**

- Always safely eject the card from your computer or power off your device before removal.
- Avoid removing the card during data transfer or recording.

7. SPECIFICATIONS

Feature	Specification
Brand	Transcend
Model Number	HDC-SD80-KSD2GB
Flash Memory Type	SD (Secure Digital)
Memory Storage Capacity	2 GB
Hardware Interface	Secure Digital Card
Compatible Devices	Camera, Camcorder
Product Dimensions	0.94 x 0.08 x 1.26 inches
Item Weight	0.16 ounces
UPC	876544701204
Date First Available	June 15, 2012

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Transcend website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Transcend may offer additional protection plans for data recovery. Please check their official channels for details on available services.