

HOLIDAY TIME No Model

Holiday Time Gel Window Clings - Christmas Lights Instruction Manual

Model: No Model

INTRODUCTION

Thank you for choosing Holiday Time Gel Window Clings - Christmas Lights. These decorative gel clings are designed to add a festive touch to your windows. This manual provides essential information for the proper application, care, and maintenance of your window clings.

SETUP AND APPLICATION

Follow these steps for optimal application of your gel window clings:

1. **Prepare the Surface:** For best results, ensure the window surface is clean and dry. Wash the window thoroughly with a glass cleaner and wipe it dry before applying the clings. Dust or residue can prevent proper adhesion.
2. **Remove from Packaging:** Carefully remove the gel clings from their packaging sheet. Avoid stretching or tearing the clings during removal.
3. **Apply to Window:** Gently press the gel cling onto the desired clean window surface. Smooth out any air bubbles by pressing from the center outwards. The clings adhere through static electricity, not adhesive.
4. **Adjust Position:** If you need to reposition a cling, carefully peel it off and reapply it to a different spot on the clean window.



Image: Holiday Time Gel Window Clings - Christmas Lights as they appear on their original packaging sheet. This image illustrates the product's appearance before application.

OPERATING AND DISPLAY

These gel window clings are designed for temporary decoration. They can be applied to any smooth, non-porous surface, such as windows, mirrors, or glass doors. They are suitable for both interior and exterior display, though prolonged exposure to extreme weather conditions may affect their longevity.

- Ensure the surface is free of moisture for optimal adhesion.
- Avoid placing clings in direct sunlight for extended periods if you wish to preserve their color vibrancy over many seasons.

MAINTENANCE AND STORAGE

Proper care and storage will extend the life of your gel window clings:

- **Cleaning:** If a cling loses its stickiness or appears dirty, gently wash the cling in warm water with a mild soap. Rinse thoroughly and allow it to air dry on a clean, non-lint surface. Do not use abrasive cleaners or scrub vigorously.
- **Removal:** To remove, gently peel the cling from the window. Avoid pulling too quickly or forcefully to prevent stretching or tearing.
- **Storage:** Store the clings on their original backing sheet or on a piece of wax paper. Keep them flat in a cool, dry place away from direct sunlight to prevent them from drying out or sticking together permanently.

TROUBLESHOOTING

If you encounter issues with your gel window clings, consider the following:

- **Cling Not Sticking:**
 - Ensure the window surface is clean and dry. Any dust, dirt, or moisture will prevent adhesion.
 - Wash the cling in warm water as described in the Maintenance section to restore stickiness.
 - Verify the surface is smooth and non-porous.
- **Cling Tearing Easily:**
 - Gel clings are delicate. Handle them gently, especially during removal and application.
 - Avoid stretching the cling.
 - Ensure the cling is not exposed to extreme temperatures, which can make the material brittle.
- **Colors Fading:**
 - Prolonged exposure to direct sunlight can cause colors to fade over time. Consider placing clings on windows that receive less intense, direct sun.

SPECIFICATIONS

Package Dimensions	10 x 6 x 0.2 inches
Item Weight	1.6 ounces
ASIN	B00PWSWGDE
Item Model Number	No Model
Number of Pieces	1 sheet
Batteries Required	No

WARRANTY AND SUPPORT

Specific warranty information for Holiday Time Gel Window Clings - Christmas Lights is not provided in this manual. Please refer to the product packaging or contact the retailer where the item was purchased for details regarding warranty coverage or customer support. For general inquiries, please consult the Holiday Time brand's official resources.

© 2023 HOLIDAY TIME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question