

Redi-Remote RT313923805691


Redi-Remote Replacement Remote Control User Manual

Compatible with Models: 20PF7835, 15PF7835, 20FT331037 Guest, 313923805691

1. INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control. This remote is specifically designed to be compatible with various television models, including 20PF7835, 15PF7835, 20FT331037 Guest, and 313923805691. It is a custom-built replacement and does not require programming.



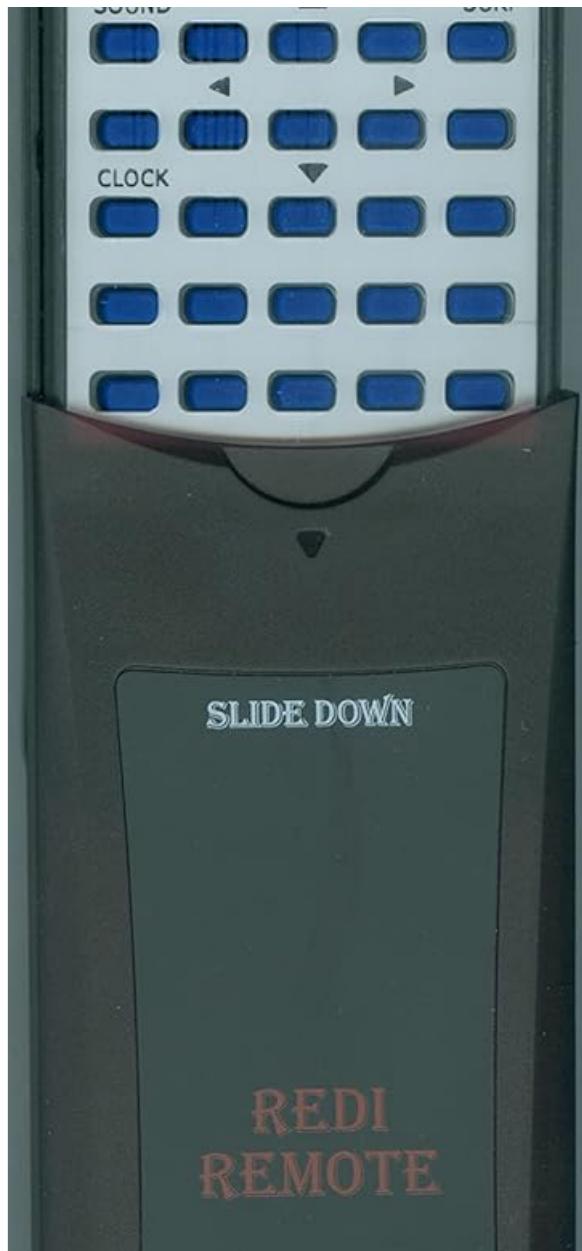

The image displays the Redi-Remote replacement remote control. The upper section features power, input, display, channel, volume, mute, menu, recall, and numeric keypad buttons. The lower section, initially covered by a sliding panel, reveals additional function buttons such as STATUS/EXIT, PROG/LIST, FORMAT, CC, RADIO, TV, A/CH, AUTO/SOUND, SOURCE, AUTO/PICTURE, SOUND, SURF, and navigation arrows, along with a CLOCK button. The bottom part of the remote has 'SLIDE DOWN' text indicating how to access the lower buttons, and the 'REDI REMOTE' brand name.

2. SETUP

2.1 Battery Installation

Your Redi-Remote requires 4 AAA batteries, which are included. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

The remote is ready for use immediately after battery installation; no programming is required.

3. OPERATING INSTRUCTIONS

This remote control is designed to function directly with compatible television models without any setup or code entry.

3.1 Basic Functions (Upper Section)

- **PWR (Power):** Turns the television on or off.
- **INPUT:** Cycles through available input sources (e.g., HDMI, AV).
- **CH+ / CH-:** Changes the television channel up or down.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **MUTE:** Silences or restores the television audio.
- **DISP (Display):** Shows on-screen information (e.g., current channel, time).
- **MENU:** Accesses the television's main menu.
- **RECALL:** Switches between the current and previously viewed channel.
- **Numeric Keypad (0-9, -, ENT):** Directly enters channel numbers. Use '-' for sub-channels or dash entry, and 'ENT' to confirm channel selection.
- **SLEEP:** Activates the sleep timer function (if supported by the TV).

3.2 Advanced Functions (Lower Section)

The lower half of the remote is concealed by a sliding cover. To access these buttons, gently slide the cover down.

- **STATUS/EXIT:** Displays status information or exits current menu/function.
- **PROG/LIST:** Accesses program guide or channel list.
- **FORMAT:** Adjusts screen aspect ratio or display format.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **RADIO:** Switches to radio mode (if supported by the TV).
- **TV:** Switches to TV mode.
- **A/CH:** Alternates between audio channels or inputs.
- **AUTO/SOUND:** Adjusts sound settings automatically or cycles through sound modes.
- **SOURCE:** Selects input source (similar to INPUT button).
- **AUTO/PICTURE:** Adjusts picture settings automatically or cycles through picture modes.
- **SOUND:** Accesses sound settings.
- **SURF:** Quickly browses channels.
- **CLOCK:** Displays or sets the clock.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.

4. MAINTENANCE

To ensure the longevity and proper functioning of your Redi-Remote, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or it stops responding. Always replace all batteries at the same time with new ones of the same type (AAA).

- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your Redi-Remote, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote and the television's infrared sensor.
 - Confirm you are pointing the remote directly at the television.
- **Certain Buttons Not Working:**
 - This may indicate a specific button malfunction or a need for battery replacement.
 - Ensure the sliding cover is fully open if you are trying to use buttons in the lower section.
- **Remote Does Not Control Auxiliary Devices:**
 - Redi-Remotes are designed to control only the specific unit they are compatible with and cannot be programmed for auxiliary devices.

If issues persist after following these steps, please contact the seller for further assistance.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Item Model Number	RT313923805691
Batteries	4 AAA batteries required (included)
Brand	Redi-Remote
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared

7. WARRANTY AND SUPPORT

As a custom-built replacement remote, this Redi-Remote is designed for immediate functionality with the specified models. For any questions regarding compatibility, functionality, or troubleshooting beyond this manual, please refer to the original purchase documentation or contact the seller directly. Redi-Remotes are not equipped with laser pointers or LED lights.

© 2024 Redi-Remote. All rights reserved.