

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for APEX TV Models LD4077M, LE3242, LE24H87, LD100RM

Redi-Remote RTLE24H87

Redi-Remote Replacement Remote Control User Manual

FOR APEX TV MODELS: LD4077M, LE3242, LE24H87, LD100RM

Model: RTLE24H87

Brand: Redi-Remote

1. Introduction

This manual provides instructions for the Redi-Remote replacement remote control, designed for seamless operation with various APEX television models. This remote is a custom-built replacement and is not an original APEX product. It is pre-programmed and requires no additional setup for the specified APEX TV models.

2. Package Contents

- 1 x Redi-Remote Replacement Remote Control (Model: RTLE24H87)
- 4 x AAA Batteries

3. Setup

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use. No programming is required.

4. Operating Instructions

4.1 Remote Control Layout and Button Functions

The Redi-Remote replacement control features a standard layout for easy navigation of your APEX television. The lower section of the remote is concealed by a sliding cover.



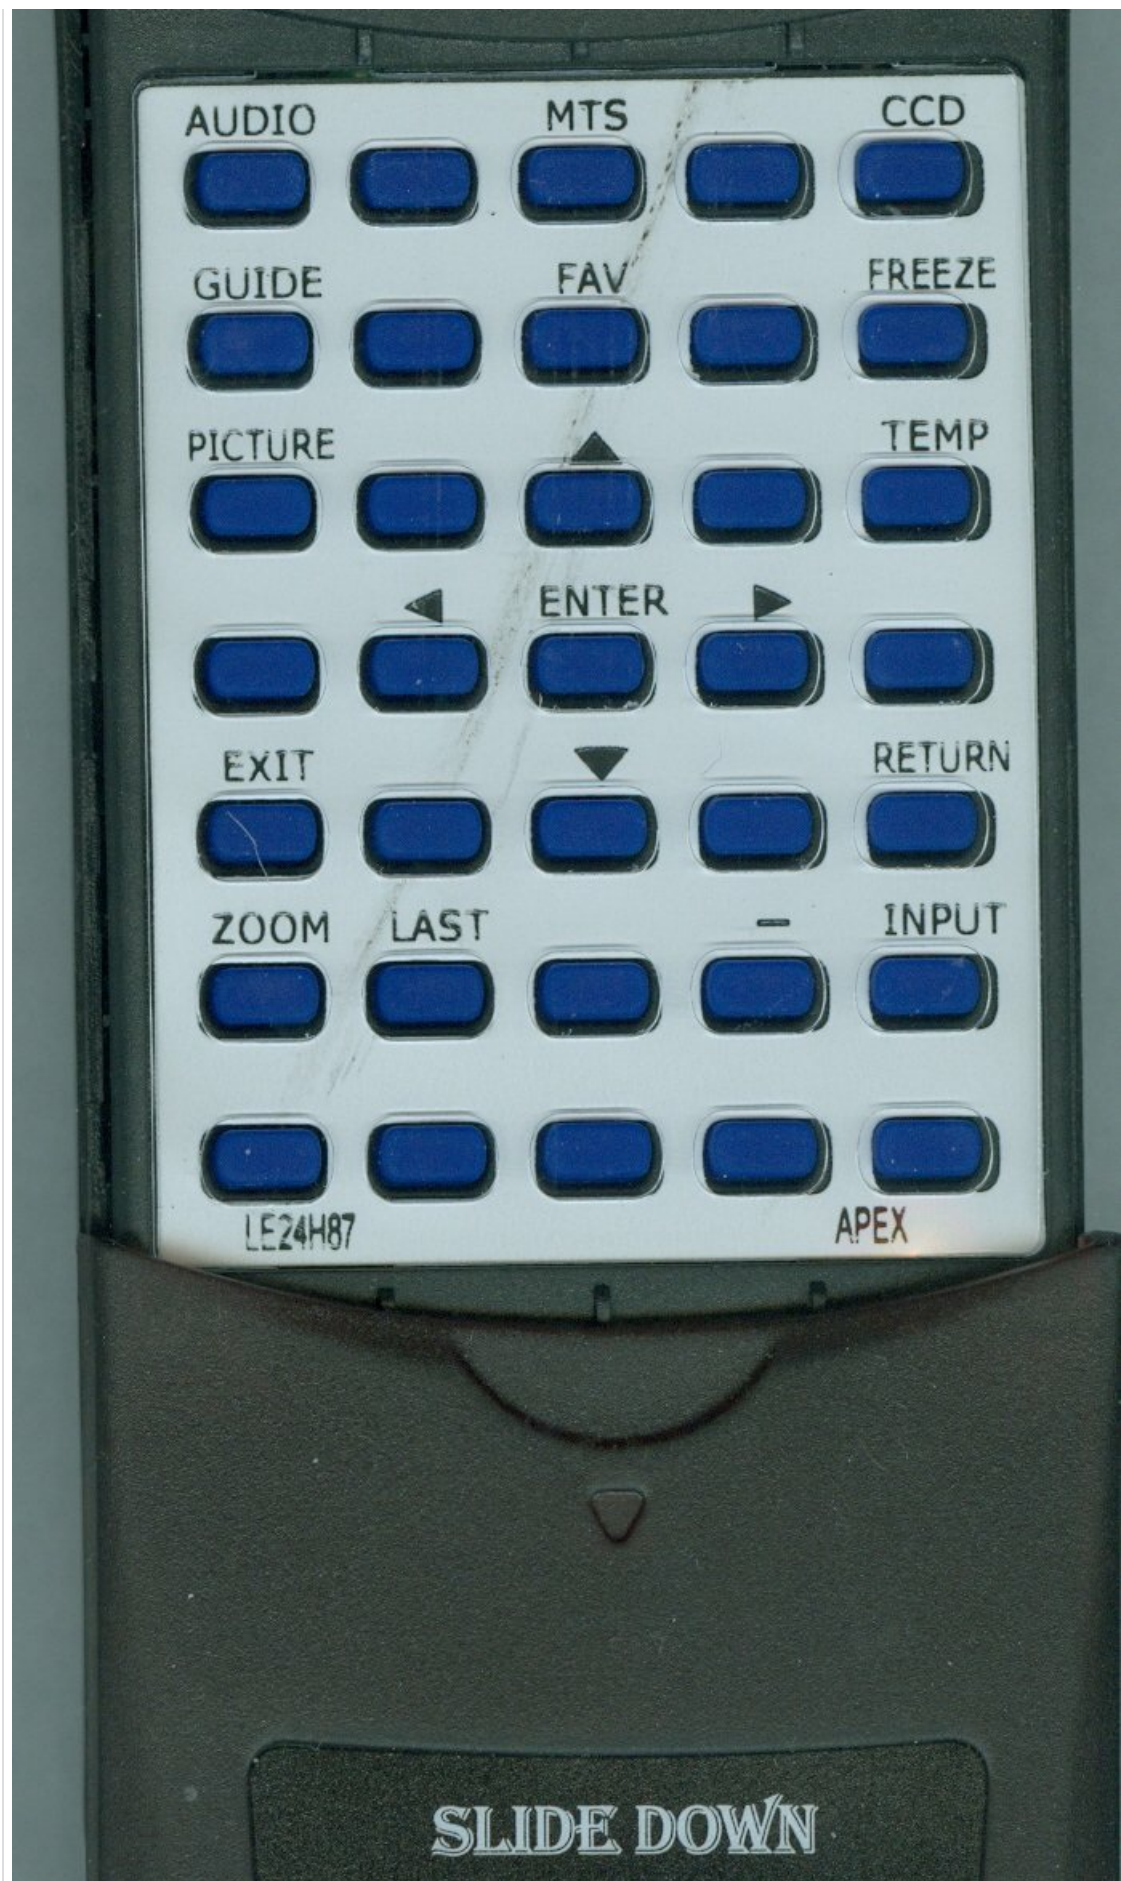


Image Description: A full view of the Redi-Remote replacement remote control. The top section features power, sleep, channel, volume, mute, menu, display, and recall buttons, along with a numeric keypad. The lower section, revealed by a sliding cover, contains additional function buttons such as audio, MTS, CCD, guide, favorite, freeze, picture, enter, temp, exit, return, zoom, last, and input.

4.2 Top Section Buttons

- **PWR** (Power): Turns the television on or off.
- **SLEEP**: Activates the sleep timer function.
- **TV/VIDEO**: Switches between TV and video input sources.
- **DISP** (Display): Shows on-screen display information.
- **VOL + / -** (Volume): Adjusts the volume level up or down.
- **MUTE**: Mutes or unmutes the television audio.
- **CH+ / CH-** (Channel): Changes the channel up or down.
- **MENU**: Accesses the television's main menu.
- **RECALL**: Returns to the previously viewed channel.
- **Numeric Keypad (0-9, 100, ENT)**: Directly enters channel numbers or other numerical inputs. The "100" button is for channels 100 and above. "ENT" (Enter) confirms numerical input.

4.3 Lower Section Buttons (Slide Down Cover)

To access these functions, slide the lower cover of the remote control downwards.

- **AUDIO**: Selects audio modes or tracks.
- **MTS**: Multi-channel Television Sound selection.
- **CCD**: Activates Closed Captioning.
- **GUIDE**: Displays the electronic program guide.
- **FAV** (Favorite): Accesses favorite channels.
- **FREEZE**: Freezes the current image on screen.
- **PICTURE**: Adjusts picture settings.
- **ENTER**: Confirms selections in menus or navigation.
- **TEMP**: (Function may vary by TV model; typically related to display settings or information).
- **EXIT**: Exits current menu or function.
- **RETURN**: Returns to the previous screen or menu.
- **ZOOM**: Zooms in on the picture.
- **LAST**: Returns to the last input or setting.
- **INPUT**: Selects input sources (e.g., HDMI, AV).

5. Maintenance

5.1 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries or different battery types.

6. Troubleshooting

- **Remote not responding:**

- Ensure batteries are inserted correctly with proper polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's infrared sensor.
- Ensure the remote is pointed directly at the TV.

- **Some buttons not working:**

- This remote is designed for specific APEX TV models. Verify your TV model is listed as compatible.
- Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.

- **Remote controls other devices:**

- This remote is specifically designed for APEX TVs and cannot be programmed to control auxiliary devices. If it's affecting other devices, ensure no other universal remotes are active or interfering.

7. Specifications

- **Model:** RTLE24H87
- **Brand:** Redi-Remote
- **Compatibility:** APEX TV models LD4077M, LE3242, LE24H87, LD100RM
- **Connectivity:** Infrared (IR)
- **Power Source:** 4 x AAA Batteries (included)
- **Dimensions:** 7 x 2.5 x 1 inches (approximately)
- **Weight:** 4.5 ounces (approximately)
- **Special Features:** No programming required, dedicated replacement remote.

8. Warranty and Support

For any concerns or support regarding your Redi-Remote replacement remote control, please contact the seller directly. This product is a custom replacement, and specific warranty details should be obtained from the point of purchase.