

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for MARANTZ SR3000, RC3000SR, QT22884030 User Manual

Redi-Remote RTQT22884030

Redi-Remote Replacement Remote Control User Manual

Model: RTQT22884030 | **Compatible with:** MARANTZ SR3000, RC3000SR, QT22884030

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed specifically for use with MARANTZ audio/video receivers. This remote is a custom-built replacement and is pre-programmed to operate the following MARANTZ models: SR3000, RC3000SR, and QT22884030. It is not an original MARANTZ remote but offers full functionality for the specified units.

The remote control is designed for simplicity and ease of use, requiring no programming. It is intended to control only the designated MARANTZ unit and cannot be programmed for auxiliary devices.

2. SETUP

2.1 Battery Installation

Your Redi-Remote control requires 4 AAA batteries, which are included. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Redi-Remote Replacement Remote Control. This image shows the front view of the remote control, highlighting its design and button layout. The remote measures approximately 7.5 inches in length.

3. OPERATING INSTRUCTIONS

This Redi-Remote control is pre-programmed for immediate use with your compatible MARANTZ unit. No additional setup or programming is required.

3.1 Basic Functions

- **Power:** Press the **POWER** button to turn your MARANTZ unit on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the audio volume.
- **Input Selection:** Use the **INPUT** or source selection buttons to switch between different audio/video inputs (e.g., CD, DVD, AUX).
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Navigation:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) and **ENTER/OK** button for menu navigation and selection.

3.2 Sliding Cover for Additional Buttons

The remote control features a sliding cover over its lower half. This cover conceals additional buttons for advanced functions. To access these buttons, gently slide the cover downwards. Once you are finished, you may slide it back up to protect the buttons.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace the batteries when the remote's performance diminishes or if it stops responding. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

If you experience issues with your Redi-Remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Check battery orientation. Replace all 4 AAA batteries with new ones.
Remote works intermittently.	Low battery power. Obstruction between remote and unit.	Replace batteries. Ensure clear line of sight to the MARANTZ unit's IR sensor.
Specific buttons not working.	Dirt or debris under buttons.	Clean the remote surface. If issue persists, contact support.

Problem	Possible Cause	Solution
Remote does not control auxiliary devices.	Remote is designed only for the specified MARANTZ unit.	This remote cannot be programmed to control other devices.

6. SPECIFICATIONS

Model Number:	RTQT22884030
Brand:	Redi-Remote
Compatible Devices:	MARANTZ SR3000, RC3000SR, QT22884030 (Receiver)
Connectivity Technology:	Infrared (IR)
Special Feature:	No Programming Required
Max Number of Supported Devices:	1
Product Dimensions:	7 x 2.5 x 1 inches (approximately 7 1/2" x 2 1/4" x 3/4")
Item Weight:	4.5 ounces
Batteries:	4 AAA batteries (included)
Laser Pointers/LED Lights:	Not equipped

7. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement control after purchase, please contact the seller directly. They can provide assistance with troubleshooting or product-related inquiries.

Note: This remote is a custom replacement and is not manufactured by MARANTZ.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question