

Holstein Housewares HU-09005R-M

Holstein Housewares Non-Stick 6-Section Multi-Food Maker

Model: HU-09005R-M

Brand: Holstein Housewares

INTRODUCTION

The Holstein Housewares Non-Stick 6-Section Multi-Food Maker is designed for convenient and efficient preparation of various foods. This versatile appliance allows you to effortlessly create up to 6 portions of arepas, mini pancakes, corncakes, cookies, or even baked eggs at a time. Its non-stick coating ensures easy food release and quick cleanup, while its compact design and built-in safety features make it a practical addition to any kitchen.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use oven mitts or gloves when handling the appliance during and after operation.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- To disconnect, remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.

PRODUCT FEATURES

- **Non-Stick Coating:** Ensures easy food release and simplifies cleaning.
- **Built-in Safety Lock:** Keeps the maker closed during cooking and storage for added safety.
- **Space-Saving Vertical Storage:** Compact design takes up minimal counter space.
- **Indicator Lights:** Red light indicates power on, green light indicates pre-heated and ready to cook.
- **Versatile Cooking:** Prepares up to 6 portions of arepas, mini pancakes, corncakes, cookies, or baked eggs.

6-SECTION AREPA MAKER



**NON-STICK COATING
FOR EASY CLEANING**
COBERTURA ANTIADHERENTE
PARA FACIL LIMPIEZA



**SPACE-SAVING
VERTICAL STORAGE**
ALMACENAJE VERTICAL
PARA AHORRAR ESPACIO



BUILT-IN SAFETY LOCK
CERRADURA DE SEGURIDAD



AREPA SIZE: 3.5INCH
TAMAÑO DE LA AREPA: 8.9CM



Image: Key features of the Holstein Housewares Multi-Food Maker, including non-stick coating, vertical storage, safety lock, and arepa size.

PRODUCT DIMENSIONS

The Holstein Housewares Multi-Food Maker features a compact design for easy storage and use.

- **Product Dimensions:** 4.9"D x 10.2"W x 11.8"H



Image: Top view of the Multi-Food Maker with measurements indicating its compact size.

SETUP

1. Unpack the appliance and remove all packaging materials.
2. Wipe the cooking plates with a damp cloth or sponge to remove any dust or residue. Dry thoroughly.
3. Place the appliance on a stable, heat-resistant surface near a power outlet.
4. Ensure the appliance is closed and the safety lock is engaged before plugging it in.

OPERATING INSTRUCTIONS

1. Plug the appliance into a 120V electrical outlet. The red indicator light will illuminate, signaling that the unit is powered on.
2. Allow the appliance to preheat. The green indicator light will turn on when the cooking plates have reached the optimal temperature.
3. Carefully open the lid using an oven mitt or heat-resistant gloves.

4. Lightly grease the non-stick cooking plates with a small amount of cooking oil or spray, if desired.
5. Place your prepared dough (e.g., arepa dough, pancake batter) into each of the 6 sections. Ensure not to overfill.
6. Close the lid and engage the safety lock.
7. Cook for approximately 7-10 minutes, or until the food is golden brown and cooked through. Cooking times may vary based on the recipe and desired crispness.
8. Once cooked, carefully open the lid and remove the food using a non-metallic utensil to avoid damaging the non-stick coating.
9. Unplug the appliance from the outlet and allow it to cool completely before cleaning.

Your browser does not support the video tag.

Video: Official demonstration of the Holstein Housewares Arepa Maker (Model HU-09005), showing its features and ease of use for preparing arepas.

CREATIVE RECIPES

Beyond traditional arepas, this multi-food maker is perfect for a variety of culinary creations:

- **Mini Pancakes:** Pour your favorite pancake batter into the sections for perfectly round, fluffy mini pancakes.
- **Corncakes:** Prepare sweet or savory corncakes for a delightful snack or side dish.
- **Baked Eggs:** Crack eggs directly into the sections for perfectly round baked eggs, ideal for breakfast sandwiches.
- **Cookies:** Use cookie dough for quick, evenly baked cookies.

More Delicious Recipes

**Arepas, pancakes, cookies, corn cakes,
mini tortillas, and much more!**

**Recetas versátiles:
arepas, panquecas, galletas, tortas de maíz,
mini tortillas y mucho más**



Image: The Multi-Food Maker in use, preparing arepas, pancakes, and eggs simultaneously.



Image: Arepas and eggs cooking in the Multi-Food Maker.



Image: Finished arepas with various fillings, ready to serve.

CARE AND CLEANING

Proper care and cleaning will ensure the longevity of your Multi-Food Maker:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not immerse the appliance in water or any other liquid.
3. Clean the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick surface.
4. Ensure all parts are thoroughly dry before storing.
5. Store the appliance in an upright position to save space.



Image: Close-up of the non-stick cooking surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly or power outlet issue.	Ensure the plug is fully inserted into a working outlet. Check the circuit breaker.
Food sticks to the plates.	Plates not sufficiently greased or residue build-up.	Lightly grease the plates before each use. Clean plates thoroughly after each use.
Food is not cooking evenly.	Dough portions are uneven or lid not fully closed.	Ensure dough portions are uniform in size. Make sure the lid is closed and the safety lock is engaged.
Green light does not turn on.	Appliance has not reached preheating temperature.	Allow more time for preheating. If it never turns on, contact customer support.

SPECIFICATIONS

- **Model Number:** HU-09005R-M
- **Color:** Metallic Red
- **Material:** Plastic
- **Product Dimensions:** 4.9"D x 10.2"W x 11.8"H
- **Wattage:** 1000 watts
- **Voltage:** 120 Volts
- **Item Weight:** 10.6 ounces (300 Grams)
- **Special Feature:** Built-in Safety Lock, Indicator Light
- **Style:** Non-stick

WARRANTY INFORMATION

Holstein Housewares offers a **1-year limited warranty** for this product. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. For detailed terms and conditions, or to initiate a warranty claim, please refer to the full warranty statement included in the original packaging or contact Holstein Housewares customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

