

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Indesit](#) /
- › [Indesit CM HPS LB1 I Coffee Machine User Manual](#)

Indesit CM HPS LB1 I

Indesit CM HPS LB1 I Coffee Machine User Manual

Model: CM HPS LB1 I

Safety

- [Introduction](#)
- [Instructions](#)
- [Components](#)
- [Setup](#)
- [Operation](#)
- [Maintenance](#)
- [Warranty & Support](#)
- [Troubleshooting](#)
- [Specifications](#)

1. INTRODUCTION

Thank you for choosing the Indesit CM HPS LB1 I Coffee Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Indesit CM HPS LB1 I Coffee Machine:



Figure 1: Indesit CM HPS LB1 I Coffee Machine. This image displays the front and side view of the black capsule coffee machine, featuring the 'uno CAPSULE SYSTEM' logo, the Indesit brand logo on the drip tray, and the transparent water tank on the right side.

- **Water Tank:** Located at the back/side, for filling with fresh water. (Capacity: 1 Liter)
- **Capsule Compartment:** Where coffee capsules are inserted.
- **Coffee Dispenser:** Where the brewed coffee exits.
- **Drip Tray:** Collects excess liquid and supports cups.
- **Control Buttons/Lever:** For operating the machine (e.g., power, brew).
- **Milk Frother:** An integrated feature for frothing milk.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.

2. **Placement:** Place the coffee machine on a stable, flat, and heat-resistant surface, away from water sources and heat.
3. **Cleaning:** Before first use, clean the water tank and drip tray with warm water and a mild detergent. Rinse thoroughly.
4. **Filling the Water Tank:** Fill the water tank with fresh, cold drinking water up to the MAX level indicator. Do not exceed the maximum fill line.
5. **Initial Rinse Cycle:**
 - Plug the appliance into a suitable power outlet (240 Volts).
 - Place a large container under the coffee dispenser.
 - Turn on the machine (refer to specific power button/lever instructions if available).
 - Allow the machine to heat up (indicator light will typically stop flashing).
 - Run a cycle without a coffee capsule to flush the internal system with hot water. Repeat 2-3 times.
6. Your coffee machine is now ready for use.

5. OPERATING INSTRUCTIONS

5.1 Brewing Coffee

1. Ensure the water tank is filled with fresh water.
2. Turn on the coffee machine and wait for it to heat up (indicator light stable).
3. Lift the lever to open the capsule compartment.
4. Insert a coffee capsule into the compartment. Close the lever firmly.
5. Place a cup on the drip tray under the coffee dispenser. The drip tray is adjustable for different cup sizes.
6. Press the desired coffee button (e.g., espresso, lungo) to start brewing. The machine will automatically stop when the programmed volume is reached.
7. After brewing, lift the lever again to eject the used capsule into the internal collection bin.

5.2 Using the Milk Frother

This model includes a milk frother for preparing milk-based beverages.

1. Fill a pitcher with cold milk (dairy or non-dairy).
2. Position the frother nozzle into the milk, just below the surface.
3. Activate the frother function (refer to specific button/switch for frother activation).
4. Move the pitcher slightly up and down to create foam.
5. Once desired foam consistency is achieved, turn off the frother.
6. **Important:** Immediately clean the frother nozzle after each use to prevent milk residue from drying and blocking it. Wipe with a damp cloth.

5.3 Adjusting Coffee Volume (if applicable)

Some models allow you to program your preferred coffee volume:

- Place a capsule and a cup as described in "Brewing Coffee".
- Press and hold the desired coffee button.
- Release the button when the cup contains your preferred amount of coffee. The machine will remember this setting

for future brews.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your coffee machine.

6.1 Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse daily. Wash with warm, soapy water and dry thoroughly.
- **Water Tank:** Rinse daily with fresh water. Refill with fresh water for each use.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Milk Frother:** Clean immediately after each use as described in Section 5.2.

6.2 Descaling

Descaling is crucial to remove mineral deposits and maintain machine efficiency. The frequency depends on water hardness and usage.

1. Refer to the descaling instructions provided with your descaling solution. Use only descaling solutions suitable for coffee machines.
2. Empty the water tank and fill it with the descaling solution mixed with water according to the product instructions.
3. Place a large container under the coffee dispenser.
4. Run several brewing cycles without a capsule until the water tank is empty.
5. Rinse the water tank thoroughly and fill it with fresh water.
6. Run several rinse cycles with fresh water to remove any descaling solution residue.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet faulty.	Check power cord connection; try a different outlet.
No coffee dispenses.	Water tank empty; machine not heated; capsule not inserted correctly; machine clogged.	Fill water tank; wait for heating; re-insert capsule; descale the machine.
Coffee is cold or lukewarm.	Machine not preheated sufficiently; scale buildup.	Allow machine to fully preheat; descale the machine.
Water leaking from machine.	Water tank not seated correctly; internal seal issue.	Ensure water tank is properly seated. If problem persists, contact customer support.
Milk frother not producing foam.	Frother nozzle clogged; milk not cold enough.	Clean frother nozzle thoroughly; use cold milk.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Indesit

Feature	Detail
Model Name	CM HPS LB1 I
Color	Black
Product Dimensions	36.4 x 12.6 x 24 cm
Item Weight	800 g
Water Tank Capacity	1 Liter
Power (Wattage)	1300 W
Voltage	240 Volts
Material	Plastic
Special Feature	Milk Frother
Manufacturer	Whirlpool
ASIN	B00PZGPBDK
Date First Available	July 3, 2015

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Indesit website. Keep your proof of purchase for warranty claims.

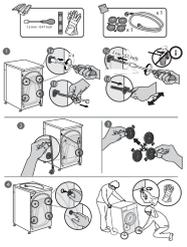
Manufacturer: Whirlpool



© 2023 Indesit. All rights reserved.

Related Documents - CM HPS LB1 I

	<p>Indesit IWC 91482 Washing Machine: User Manual & Installation Guide</p> <p>Comprehensive user manual for the Indesit IWC 91482 washing machine, covering installation, operation, care, safety precautions, troubleshooting, and guarantee information.</p>
--	--

	<p>Washing Machine Safety and Installation Guide</p> <p>Comprehensive guide to the safe installation, operation, and maintenance of your washing machine, covering important safety warnings, permitted use, installation steps, electrical safety, and disposal.</p>
	<p>Indesit IWC 71452 Washing Machine: Instructions for Use</p> <p>This document provides comprehensive instructions for the Indesit IWC 71452 washing machine, covering installation, operation, care, maintenance, and troubleshooting. Ensure safe and efficient use of your appliance.</p>
	<p>Indesit IWD 71451 K Washing Machine: User Manual and Instructions</p> <p>Comprehensive user manual for the Indesit IWD 71451 K washing machine, covering installation, operation, maintenance, safety precautions, and troubleshooting. Designed for domestic use.</p>
	<p>Indesit XWSC 61051 Washing Machine: User Manual and Instructions for Use</p> <p>Download the official Indesit XWSC 61051 washing machine user manual. Find detailed instructions for installation, operation, maintenance, troubleshooting, and care.</p>
	<p>Indesit IWB 6123 Washing Machine: User Manual and Instructions for Use</p> <p>Comprehensive user manual for the Indesit IWB 6123 washing machine. Includes installation guides, operating instructions, wash cycle details, maintenance tips, and troubleshooting advice.</p>

