

Cisco AIR-ANT2547VG-N=

Cisco Aironet AIR-ANT2547VG-N= Dual-Band Omnidirectional Wi-Fi Antenna Instruction Manual

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of the Cisco Aironet AIR-ANT2547VG-N= Dual-Band Omnidirectional Wi-Fi Antenna. This antenna is designed to enhance Wi-Fi coverage and performance, offering a 360-degree radiation pattern suitable for environments requiring broad signal distribution.

2. PRODUCT OVERVIEW

The Cisco Aironet AIR-ANT2547VG-N= is an omnidirectional Wi-Fi antenna engineered for improved coverage. Key features include:

- **Dual-Band Operation:** Supports both 2.4 GHz (4 dBi gain) and 5 GHz (7 dBi gain) frequencies.
- **Omnidirectional Coverage:** Provides a 360-degree radiation pattern, ideal for widespread signal distribution.
- **Direct Mount:** Designed for direct attachment to compatible Aironet outdoor access points, eliminating the need for external cables.
- **Robust Design:** Features a gray radome, suitable for various deployment environments.



Figure 1: Cisco Aironet AIR-ANT2547VG-N= Dual-Band Omnidirectional Wi-Fi Antenna. This image displays the full antenna unit, which is a long, cylindrical, gray device with a metallic N-Type male connector at one end, designed for direct mounting.

3. SETUP AND INSTALLATION

This antenna is designed for direct mounting onto compatible Cisco Aironet outdoor access points. Follow these general steps for installation:

1. **Safety First:** Ensure the access point is powered off and disconnected from any power source before

beginning installation.

2. **Identify Connection Port:** Locate the N-Type female connector on your compatible Cisco Aironet outdoor access point.
3. **Attach Antenna:** Carefully align the N-Type male connector of the AIR-ANT2547VG-N= antenna with the access point's connector.
4. **Secure Connection:** Gently screw the antenna onto the access point's connector until it is finger-tight. Do not overtighten.
5. **Verify Orientation:** Ensure the antenna is oriented vertically for optimal omnidirectional coverage.
6. **Power On:** Once the antenna is securely attached, you may reconnect power to the access point.

Refer to your specific access point's documentation for detailed mounting instructions and environmental considerations.

4. OPERATION

Once properly installed, the Cisco Aironet AIR-ANT2547VG-N= antenna operates passively in conjunction with your Cisco Aironet access point. Its function is to transmit and receive Wi-Fi signals across both 2.4 GHz and 5 GHz bands.

- **Automatic Function:** The antenna begins operating automatically once the access point is powered on and configured for wireless communication.
- **Optimal Placement:** For best performance, ensure the antenna is positioned in an unobstructed location, free from large metallic objects or other sources of interference that could degrade signal quality.
- **Signal Coverage:** The omnidirectional design provides a 360-degree coverage pattern. Performance may vary based on environmental factors and access point configuration.

5. MAINTENANCE

The Cisco Aironet AIR-ANT2547VG-N= antenna requires minimal maintenance. Adhering to the following guidelines will help ensure its longevity and optimal performance:

- **Regular Inspection:** Periodically inspect the antenna and its connection point for any signs of physical damage, corrosion, or loose connections.
- **Cleaning:** If necessary, gently clean the exterior of the antenna with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Environmental Protection:** While designed for outdoor use, ensure the antenna is not subjected to extreme physical stress or prolonged submersion in water.
- **Secure Mounting:** Verify that the antenna remains securely mounted to the access point and that the connection is tight.

6. TROUBLESHOOTING

If you experience issues with your Wi-Fi network after installing the antenna, consider the following troubleshooting steps:

- **No Wi-Fi Signal or Poor Performance:**
 - Ensure the antenna is securely connected to the access point.
 - Verify the access point is powered on and functioning correctly.
 - Check for physical obstructions between the antenna and client devices.
 - Confirm there are no other strong sources of interference nearby (e.g., other wireless devices, microwave ovens).

- Consult the access point's documentation for its specific troubleshooting procedures.

- **Physical Damage:**

- If the antenna shows signs of physical damage, it may need replacement. Contact Cisco support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Cisco
Model Number	AIR-ANT2547VG-N=
Antenna Type	Omnidirectional Wi-Fi Antenna
Frequency Bands	2.4 GHz, 5 GHz
Gain (2.4 GHz)	4 dBi
Gain (5 GHz)	7 dBi
Connector Type	N-Type Male
Mounting	Direct Mount
Color	Gray
Item Weight	2.6 ounces
Product Dimensions (LxWxH)	0.39 x 36 x 36 inches (Note: Dimensions seem unusual, likely referring to packaging or a different measurement unit for LWH)
Wireless Type	2.4 GHz Radio Frequency, 5 GHz Radio Frequency
UPC	882658636097

8. WARRANTY AND SUPPORT

8.1. Limited Hardware Warranty

 
The Cisco Aironet AIR-ANT2547VG-N= antenna comes with a **1-year limited hardware warranty**. This warranty covers defects in materials and workmanship under normal use. For specific terms and conditions, please refer to the official Cisco warranty documentation or contact Cisco support.

8.2. Technical Support

For technical assistance, product inquiries, or warranty claims, please contact Cisco support through their official channels. You can typically find support information, including contact numbers and online resources, on the official Cisco website:

[Cisco Support Website](#)

 Cisco Aironet 8-dBi Omni-Directional Antenna (AIR-ANT2480V-N) Overview	Cisco Aironet 8-dBi Omni-Directional Antenna (AIR-ANT2480V-N) - Technical Specifications and Installation Guide Comprehensive guide detailing the technical specifications, optimal performance guidelines, safety precautions, and installation procedures for the Cisco Aironet 8-dBi Omni-Directional Antenna (AIR-ANT2480V-N).
 Cisco Aironet Dual-Band Omni-Directional Antenna (AIR-ANT2568VG-N) Overview	Cisco Aironet AIR-ANT2568VG-N Dual-Band Omni-Directional Antenna: Specs, Installation & Performance Comprehensive guide to the Cisco Aironet AIR-ANT2568VG-N Dual-Band Omni-Directional Antenna. Includes technical specifications, radiation patterns, safety precautions, installation instructions, and performance optimization guidelines for Cisco Aironet Outdoor Access Points.
 Cisco Aironet 2.4GHz/5GHz MIMO 4-Element Patch Antenna (AIR-ANT2566P4W-DS) Overview	Cisco Aironet AIR-ANT2566P4W-DS 2.4/5 GHz MIMO Patch Antenna Specifications and Installation Guide Comprehensive technical specifications, radiation patterns, system requirements, safety precautions, and installation instructions for the Cisco Aironet AIR-ANT2566P4W-DS 4-Element Patch Antenna, designed for 2.4 GHz and 5 GHz wireless networks.
 Cisco Mobility Express 8.6	Cisco Mobility Express 8.6 Cisco Mobility Express 8.6 Wi-Fi Cisco Mobility Express
 About Cisco Catalyst IW9167E Heavy Duty Access Point Introduction to Cisco Catalyst IW9167E Heavy Duty Access Point Cisco Catalyst IW9167E Heavy Duty Access Point Features	Cisco Catalyst IW9167E Heavy Duty Access Point: Features and Specifications Detailed information on the Cisco Catalyst IW9167E Heavy Duty Access Point, including its tri-band 802.11ax Wi-Fi 6 capabilities, Cisco URWB support, heavy-duty IP67 design, connectors, ports, power sources, and supported antennas.
 Cisco Spaces IoT Services Configuration Guide (Wireless)	Cisco Spaces: IoT Services Configuration Guide (Wireless) A comprehensive guide to configuring Cisco Spaces for Internet of Things (IoT) services, focusing on wireless deployment, access points, BLE beacons, and device management.

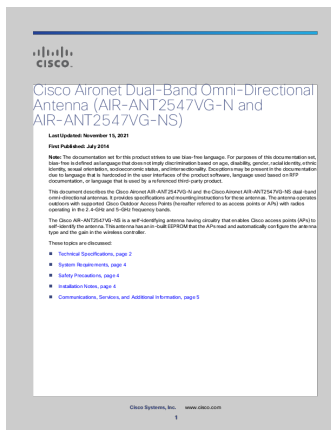


[\[pdf\]](#) Installation Guide Instructions Specifications Documentation Guide

Cisco Aironet Dual Band Omni directional Antenna AIR ANT2547VG N and NS ctsadmin wem p gen ant2547vgn cisco c en us td docs wireless antenna installation guide |||

Cisco Aironet Dual-Band Omni-Directional Antenna AIR-ANT2547VG-N and AIR-ANT2547VG-NS Last Updated: November 15, 2021 First Published: July 2014 Note: The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language ...

 lang:en score:46 filesize: 1.05 M page_count: 8 document date: 2021-11-15

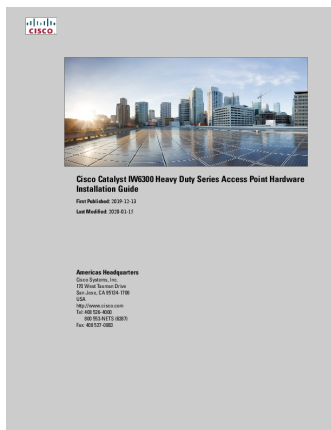


[\[pdf\]](#) User Manual Installation Guide Documentation Guide

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide Unknown 1061408382 content etilize User Manual |||

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide First Published: 2019-12-13 Last Modified: 2020-01-15 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA http://www.cisco.com Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0...

 lang:en score:38 filesize: 5.1 M page_count: 84 document date: 2020-01-15

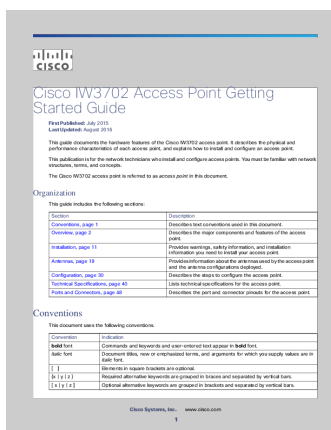

[\[pdf\]](#) User Manual Quick Start Guide Installation Guide Instructions Specifications Guide

Cisco IW3702 Access Point Getting Started Guide ctsadmin wem p gen Notes contain helpful suggestions or references to material not covered in the manual Caution Means reader be careful In this situation you might perform an action that could result equipment damage loss of data Warning IMPORTANT SAFETY INSTRUCTIONS danger You are a cause bodily injury First Published July 2015 Last Updated August 2016 This guide documents hardware features access point It describes physical and performance characteristics each Before work on any 1149479 0 1155193 gluh azureedge net surebridge productmanuals 1300intech

Cisco IW3702 Access Point Getting Started Guide First Published: July 2015 Last Updated: August 2016 ... ANT2547V-N= 19 Cisco IW3702 Access Point Getting Started Guide Antennas - - Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Dual-Band Omnidirectional Antenna Cisco PID AIR-ANT2547VG-N Cisc...

lang:en score:38 filesize: 3.33 M page_count: 54 document date: 2016-09-01



[\[pdf\]](#) User Manual Guide

Cisco Industrial Wireless 3700 Series Access Points Ordering Guide User Manual IW3702 IEEE 802 11ac 1 27 Gbit s Point CareTek Information Technology Solutions 1034805668 content etilize User |||

Ordering Guide Cisco Industrial Wireless 3700 Series Access Points Ordering Guide May 2016 2016 Ci ... dustrial Wireless 3700 Series Access Points Part Number AIR-ANT2547V-N= Frequency Band 2.4/5 GHz **AIR-ANT2547VG-N=** 2.4/5 GHz AIR-ANT254V4C-R= 2.4/5 GHz AIR-ANT2544V4M-R= 2.4/5 GHz AIR-ANT2524Dx-...

lang:en score:37 filesize: 566.2 K page_count: 10 document date: 2016-05-20

Cisco Aironet 1560 Series Outdoor Access Points

Ordering Guide

February 2017

[pdf] Datasheet Guide

Cisco Aironet 1560 Series Outdoor Access Points Ordering Guide Provided by NetworkTigers cisco aironet series guide c07 737428andovercg datasheets 737428 |||

Ordering Guide Cisco Aironet 1560 Series Outdoor Access Points Ordering Guide February 2017 2017 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. Page 1 of 10 Contents 1. Introduction lang:en score:37 filesize: 490.67 K page_count: 10 document date: 2024-08-04



Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide

First Published: February 06, 2017
Last Updated: September 06, 2019

Cisco Systems, Inc.
www.cisco.com
Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.cisco.com/go/offices.

See Backmatter

[pdf] User Manual Installation Guide Specifications Guide Warranty

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide ctsadmin wem p gen 1064582658 inquirecontent1 ingrammicro User Manual |||

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: September 06, 2019 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www...

lang:en score:37 filesize: 9.62 M page_count: 132 document date: 2019-09-06



Cisco IW3702 Access Point Getting Started Guide


Cisco IW3702 Access Point Getting Started Guide: 2
Organization: 2
Connections: 2
Overview: 2
Installation: 10
Access and RF Settings: 20
Configuration: 30
Network Setup: 40
Post-Install Connection: 50
Related Documentation: 50
Obtaining Documentation and Submitting a Service Request: 50

[pdf] User Manual Quick Start Guide Installation Guide Specifications Documentation Guide Accessories

Cisco IW3702 Access Point Getting Started Guide Unknown Industrial wireless 3700 Series Aironet 3702e AP E regulatory domain Manual 5e0f1d17b9111b481efcc017686b0590ab3a gzhls at blob ldb 3 2 d 4 |||

Cisco IW3702 Access Point Getting Started Guide Cisco IW3702 Access Point Getting Started Guide 2 Or ... VG-N These are the related models: White model Cisco PID AIR-ANT2547V-N= Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Four-Port Dual-Band Polarization-Diverse Array Antenna Cisco PID A...

 
lang:en score:37 filesize: 3.25 M page_count: 80 document date: 2020-01-23

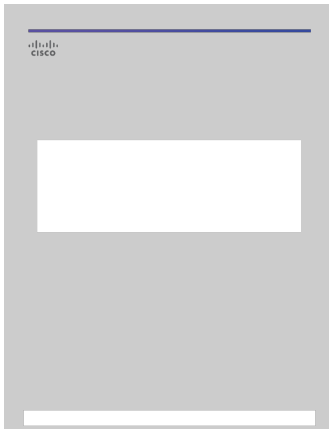

[\[pdf\]](#) Datasheet Guide

Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide Bill Rubino cisco aironet series guide c07 733334 andovercg datasheets |||

 
Ordering Guide Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide November 2015 2015 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. Page 1 of 17 Contents 1. Introduction lang:fr **score:37** filesize: 896.32 K page_count: 17 document date: 2019-08-28

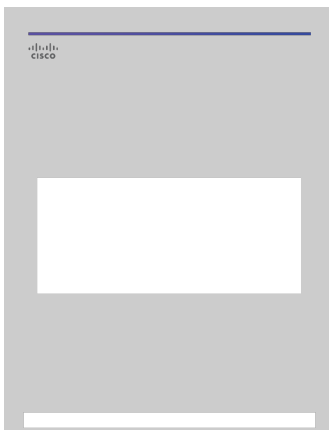

[\[pdf\]](#) Guide

Cisco Aironet 1560 Series Outdoor Access Points Ordering Guide Administrator guide c07 737428 cisco c en us products collateral wireless aironet series |||

 Ordering Guide Cisco Aironet 1560 Series Outdoor Access Points Ordering Guide February 2017 2017 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. Page 1 of 10 Contents 1. Introduction lang:en **score:36** filesize: 505.38 K page_count: 10 document date: 2017-02-23

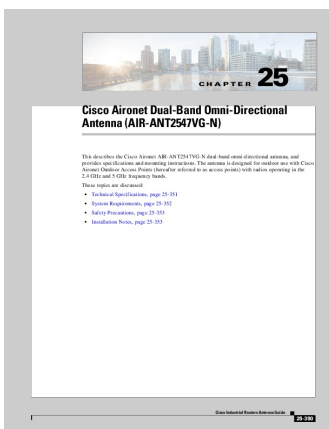


[\[pdf\]](#) Instructions Specifications Guide

Cisco Aironet Dual Band Omni Directional Antenna AIR ANT2547VG N ctsadmin wem p gen provides specifications and mounting instructions The antenna is designed for outdoor use with Outdoor Access Points hereafter referred to as access points radios operating in the 2 4 GHz 5 frequency bands These topics are discussed Technical

Specifications page 25 351 † System Requirements 352 mmo 21508630 1489702971 7281 10232 s eet eu icmedia 25 C H A P T E R Cisco Aironet Dual-Band Omni-Directional Antenna AIR-ANT2547VG-N This describes the Cisco Aironet AIR-ANT2547VG-N dual-band omni-directional antenna, and provides specifications and mounting instructions. The antenna is designed for outdoor use with Cisco Aironet Outdoor Access Po...

 lang:en **score:36** filesize: 1.03 M page_count: 6 document date: 2017-01-06

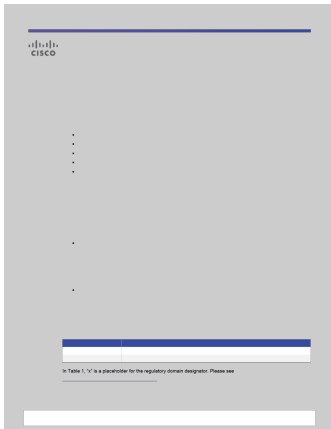


[\[pdf\]](#) Datasheet Guide Accessories

Cisco Aironet 1530 Series Outdoor Access Points Ordering Guide Administrator cisco aironet series guide c07 729725 andovercg datasheets |||

Ordering Guide Cisco Aironet 1530 Series Outdoor Access Points Cisco Aironet 1530 Series outdoor access points support a wide variety of applications. With their sleek profile, you can deploy them wherever you need coverage while meeting your aesthetic requirements. A fully operational system requ...

 lang:en score:36 filesize: 382.79 K page_count: 5 document date: 2018-05-09

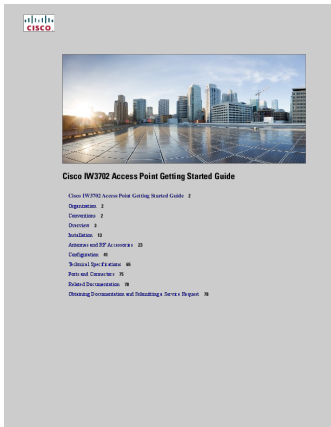


[\[pdf\]](#) Quick Start Guide Installation Guide Specifications Documentation Guide Accessories

Cisco IW3702 Access Point Getting Started Guide Unknown b iw3702 gsg cisco c en us td docs wireless outdoor industrial hardware install guide |||

Cisco IW3702 Access Point Getting Started Guide Cisco IW3702 Access Point Getting Started Guide 2 Or ... VG-N These are the related models: White model Cisco PID AIR-ANT2547V-N= Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Four-Port Dual-Band Polarization-Diverse Array Antenna Cisco PID A...

 lang:en score:35 filesize: 3.26 M page_count: 80 document date: 2021-02-18

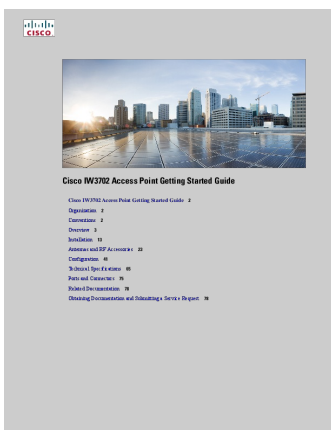


[\[pdf\]](#) Quick Start Guide Installation Guide Specifications Documentation Guide Accessories

Cisco IW3702 Access Point Getting Started Guide Unknown b iw3702 gsg cisco content en us td docs wireless outdoor industrial hardware install guide |||

Cisco IW3702 Access Point Getting Started Guide Cisco IW3702 Access Point Getting Started Guide 2 Or ... VG-N These are the related models: White model Cisco PID AIR-ANT2547V-N= Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Four-Port Dual-Band Polarization-Diverse Array Antenna Cisco PID A...

 lang:en score:35 filesize: 3.26 M page_count: 80 document date: 2023-05-11

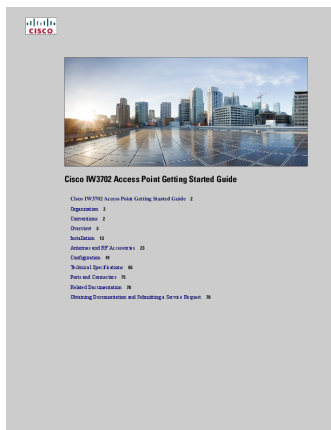


[\[pdf\]](#) User Manual Quick Start Guide Installation Guide Specifications Documentation Guide Accessories Borchure

Cisco IW3702 Access Point Getting Started Guide Unknown Click here for User ManualCisco Dual Band IEEE 802 11ac 171 Gbit s Wireless Outdoor 2E R K9 FireOwls Corporation Manufacturer Brochure1048761416content etilize Manual 1048761416 |||

Cisco IW3702 Access Point Getting Started Guide Cisco IW3702 Access Point Getting Started Guide 2 Or ... VG-N These are the related models: White model Cisco PID AIR-ANT2547V-N= Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Four-Port Dual-Band Polarization-Diverse Array Antenna Cisco PID A...

 lang:en **score:35** filesize: 3.26 M page_count: 80 document date: 2023-05-11

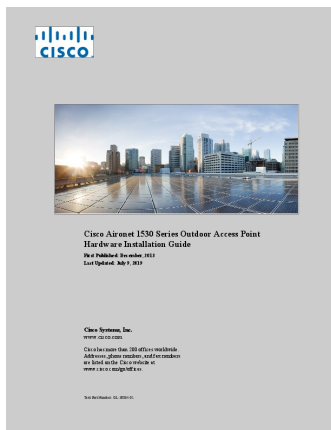


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Cisco Aironet 1530 Series Outdoor Access Point Hardware Installation Guide ctsadmin wem p gen ALL STATEMENTS INFORMATION AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT PRESENTED WITHOUT WARRANTY OF ANY KIND EXPRESS OR IMPLIED 1530hig cisco c en us td docs wireless access point installation guide |||

Cisco Aironet 1530 Series Outdoor Access Point Hardware Installation Guide First Published: December, 2013 Last Updated: July 9, 2019 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.cisco.co...

 lang:en **score:35** filesize: 5.46 M page_count: 130 document date: 2019-07-10

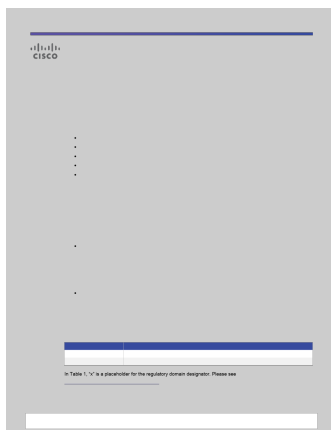


[\[pdf\]](#) Guide Accessories

Cisco Aironet 1530 Series Outdoor Access Points Ordering Guide Administrator guide c07 729725 cisco 80 c en us products collateral wireless aironet series |||

Ordering Guide Cisco Aironet 1530 Series Outdoor Access Points Cisco Aironet 1530 Series outdoor access points support a wide variety of applications. With their sleek profile, you can deploy them wherever you need coverage while meeting your aesthetic requirements. A fully operational system requ...

 lang:en **score:35** filesize: 383.09 K page_count: 5 document date: 2019-08-28

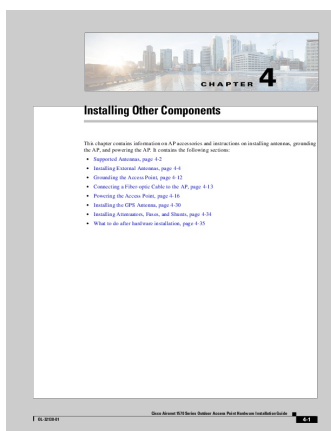

[\[pdf\]](#) Installation Guide Instructions Guide Accessories

Installing Other Components ctsadmin wem p gen Cisco This chapter contains information on AP accessories and instructions installing antennas grounding the powering It following sections Supported Antennas page 4 2 † External Grounding Access Point 12 Connecting a Fiber optic Cable to 13 1570 chinstallaccs cisco c en us td docs wireless access point installation guide 1570hig |||

4 C H A P T E R Installing Other Components This chapter contains information on AP accessories and instructions on installing antennas, grounding the AP, and powering the AP. It contains the following sections: Supported Antennas, page 4-2 Installing External Antennas, page 4-4 Grounding the Acc...


lang:en **score:34** filesize: 3.22 M page_count: 36 document date: 2020-01-13



[\[pdf\] Instructions Specifications Dimension Guide Warranty](#)

540745 I Beam Spring Mount pub HolcombZ Download Wi Fi for Cisco AIR ANT2547VG N Omni Ventev ventevinfra ||| I-Beam Spring Mount for Cisco AIR-ANT2547VG-N Stick Omni The TerraWave I-Beam Spring Mount is designed to exclusively mount the Cisco AIR-ANT2547VG-N Stick Omni antenna on I-Beams in high-traffic areas. The mount spring allows the antenna to flex if bumped to prevent damage. The mount is made of lo...

 
lang:en **score:34** filesize: 352.54 K page_count: 2 document date: 2015-11-25

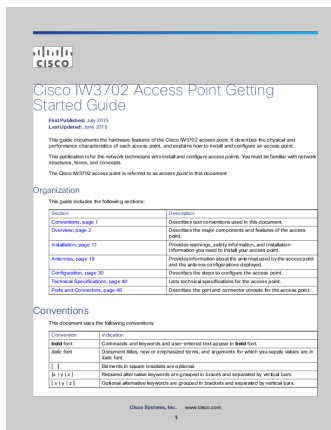

[Cisco IW3702 Access Point Getting Started Guide](#)

A guide detailing the hardware features, physical and performance characteristics, installation, and configuration of the Cisco IW3702 Access Point for network technicians.

 lang:en **score:34** filesize: 3.34 M page_count: 54 document date: 2016-06-03

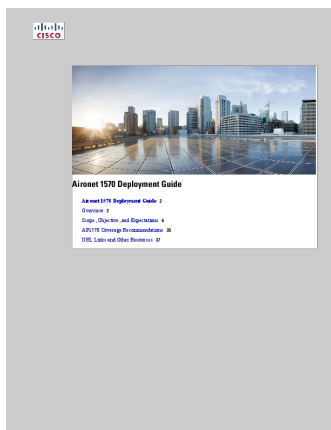


[\[pdf\] User Manual Guide](#)

Aironet 1570 Deployment Guide Unknown User Manual Cisco 1572IC IEEE 802.11ac 1.27 Gbit/s Wireless Access Point CareTek Information Technology Solutions 1030236067 content utilize User |||

Aironet 1570 Deployment Guide Aironet 1570 Deployment Guide 2 Overview 2 Scope, Objective, and Expectations 6 AP1570 Coverage Recommendations 35 URL Links and Other Resources 37 Revised: March 24, 2015, Aironet 1570 Deployment Guide Overview This deployment guide introduces the newest addition to ...

 lang:en **score:34** filesize: 2.2 M page_count: 39 document date: 2016-11-02

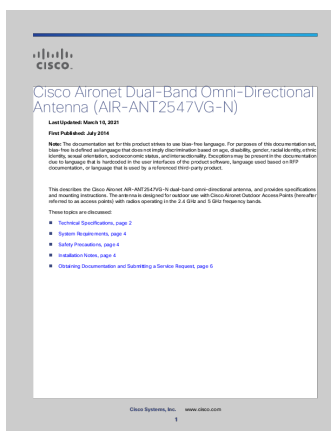


[\[pdf\] Instructions Specifications Documentation](#)

Cisco Aironet Dual Band Omnidirectional Antenna AIR ANT2547VG N ctsadmin wem p gen DS koupit VTK SVYAZ vktk eu upload iblock 677 4xy3reb3rv3mpd9ckl7aig44hbp3rb4 |||

Cisco Aironet Dual-Band Omni-Directional Antenna AIR-ANT2547VG-N Last Updated: March 10, 2021 First Published: July 2014 Note: The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply disc...

 lang:en **score:33** filesize: 1.19 M page_count: 8 document date: 2021-03-16

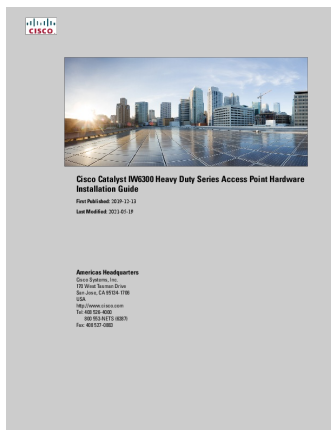


[\[pdf\]](#) User Manual Installation Guide Documentation Guide

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide Unknown Dec 13 2019 — INFORMATION AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO The carries an IP66 IP67 rating and Class 1 Division 2 certification options include WirelessHART ISA100 11a GPS Bluetooth b iw6300 hig cisco c en us td docs wireless outdoor industrial hardware install guide

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide First Published: 2019-12-13 Last Modified: 2021-05-19 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0...

 lang:en **score:33** filesize: 5.94 M page_count: 102 document date: 2021-05-19

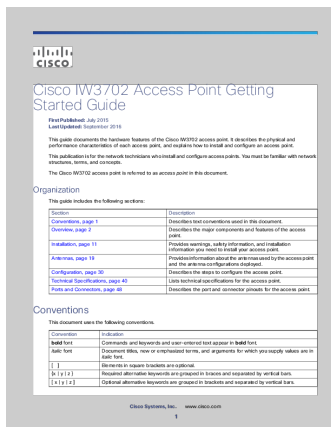


[\[pdf\]](#) User Manual Quick Start Guide Installation Guide Instructions Specifications Guide

Cisco IW3702 Access Point Getting Started Guide ctsadmin wem p gen Notes contain helpful suggestions or references to material not covered in the manual Caution Means reader be careful In this situation you might perform an action that could result equipment damage loss of data Warning IMPORTANT SAFETY INSTRUCTIONS danger You are a cause bodily injury SAVE THESE Regulatory Provided for additional information and comply with regulatory customer requirements Overview This document describes access point The is IEEE 802 11a b g n ac compliant dual band WiFi external antennas 1402585 0 gluhcdn azureedge net demo productmanuals |||

Cisco IW3702 Access Point Getting Started Guide First Published: July 2015 Last Updated: September 2 ... ANT2547V-N= 19 Cisco IW3702 Access Point Getting Started Guide Antennas - - Grey Model Cisco PID **AIR-ANT2547VG-N=** Cisco Aironet Dual-Band Omnidirectional Antenna Cisco PID AIR-ANT2547VG-N Cisc...

 
lang:en **score:33** filesize: 3.34 M page_count: 54 document date: 2016-10-26

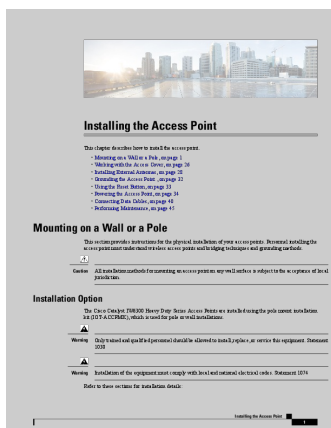

[\[pdf\]](#) Installation Guide Instructions Guide

Installing the Access Point Unknown This Chapter 3 63 MB Cisco Catalyst IW6300 Heavy Duty Series Hardware Installation Guide Points m cisco c en us td docs wireless outdoor industrial iw6300 hardware install guide b hig ||| Installing the Access Point This chapter describes how to install the access point. Mounting on a Wall or a Pole, on page 1 Working with the Access Cover, on page 26 Installing External Antennas, on page 28 Grounding the Access Point, on page 32 Using the Reset Button, on page 33 Powering the...

 
lang:en **score:33** filesize: 3.63 M page_count: 46 document date: 2022-08-31

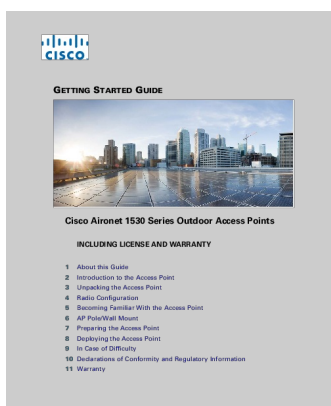

[\[pdf\]](#) Quick Start Guide Instructions Documentation Guide Declaration of Conformity Warranty

Getting Started Guide Cisco Aironet 1530 Series Outdoor Access Points ctsadmin wem p gen SAVE THESE INSTRUCTIONS Page 4 Warning Do not operate the unit near unshielded blasting caps or in an explosive environment unless 1347896 0 gluhcdn azureedge net crossoverit productmanuals GETTING STARTED GUIDE Cisco Aironet 1530 Series Outdoor Access Points INCLUDING LICENSE AND WARRANTY 1 About this Guide 2 Introduction to the Access Point 3 Unpacking the Access Point 4 Radio Configuration 5 Becoming Familiar With the Access Point 6 AP Pole/Wall Mount 7 Preparing the Access Point 8 ...

 lang:en **score:33** filesize: 1.01 M page_count: 40 document date: 2014-11-14

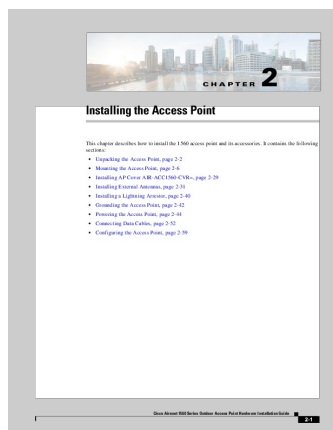


[\[pdf\]](#) Installation Guide Instructions Guide Accessories

Installing the Access Point ctsadmin wem p gen Cisco This section provides instructions for installing your access points Personnel installin g point must have a good understanding of wireless bridging techniques and grounding methods Choosing Mounting Kit The 1560 Series can be wall pole or tower mounted available mounting kits are ch2 cisco c en us td docs installation guide 1560hig |||

2 C H A P T E R Installing the Access Point This chapter describes how to install the 1560 access point and its accessories. It contains the following sections: Unpacking the Access Point, page 2-2 Mounting the Access Point, page 2-6 Installing AP Cover AIR-ACC1560-CVR=, page 2-29 Installing Ext...

 lang:en score:32 filesize: 5.25 M page_count: 60 document date: 2021-01-07

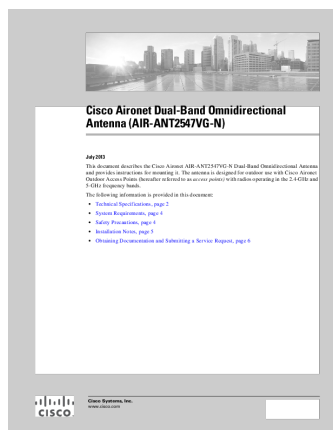


[\[pdf\]](#) Instructions Specifications Documentation

Cisco Aironet Dual Band Omnidirectional Antenna AIR ANT2547VG N pfile ant2547vgn всенаправленная WIFI антенна 2 4 5 GHz 7 дБ купить ВТК СВЯ3б vtk ru upload iblock 63b |||

Cisco Aironet Dual-Band Omnidirectional Antenna AIR-ANT2547VG-N July 2013 This document describes the Cisco Aironet AIR-ANT2547VG-N Dual-Band Omnidirectional Antenna and provides instructions for mounting it. The antenna is designed for outdoor use with Cisco Aironet Outdoor Access Points hereaft...

 lang:en score:32 filesize: 589.32 K page_count: 6 document date: 2013-12-20

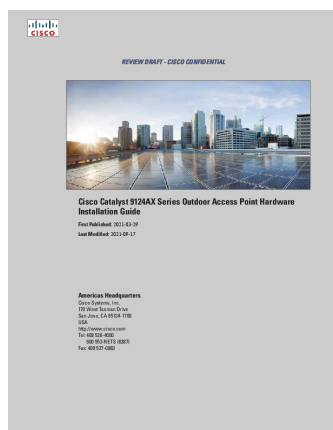


[\[pdf\]](#) Confidentiality Request Letter

Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide Unknown User Manual Systems Inc ETHIK2360 LDK LDKETHIK2360 ethik2360

REVIEW DRAFT - CISCO CONFIDENTIAL Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide First Published: 2021-03-29 Last Modified: 2021-09-17 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA http://www.cisco.com Tel: 408 526-4000 800...

 
lang:en score:32 filesize: 2.09 M page_count: 116 document date: 2021-12-06

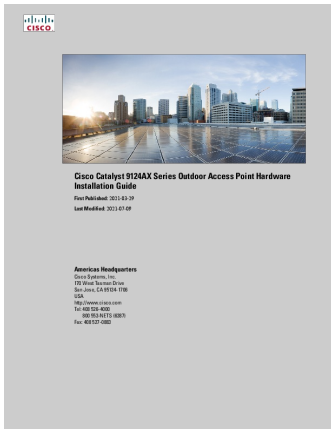

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide Unknown 9100 9124 internal antennas E regulatory domain Manual 31adb76600fe1494899ce8ef7edd072dddc6 gzhls at blob ldb 4 c b e ||| Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide First Published: 2021-03-29 Last Modified: 2021-07-09 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0883...

 lang:en score:32 filesize: 29.97 M page_count: 120 document date: 2023-08-10

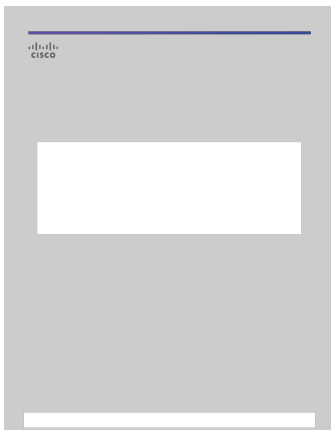

[\[pdf\]](#) Guide

Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide ae963fe3a06e6c986af52d5dc80976282f37 gzhls at blob ldb c b e 9

Ordering Guide Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide November 2015 2015 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. Page 1 of 17 Contents 1. Introduction

lang:fr score:32 filesize: 896.16 K page_count: 17 document date: 2016-06-27

 


[\[pdf\]](#) Guide

Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide Systems Inc © 2015 and or its affiliates All rights reserved This document is Public Information Page 1 of 17 1045018 0 guide c07 733334 gluh azureedge net computera ge productmanuals cisco c dam en us products collateral wireless aironet series

Ordering Guide Cisco Aironet 1570 Series Outdoor Access Points Ordering Guide August 2015 2015 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. Page 1 of 17 Contents 1. Introduction

lang:fr score:32 filesize: 897.15 K page_count: 17 document date: 2015-08-31

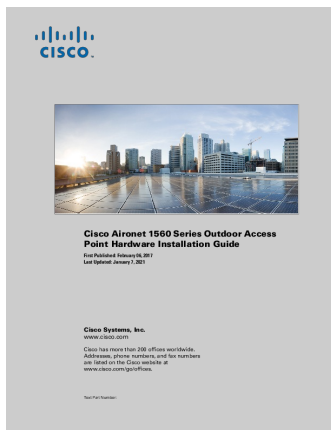

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide ctsadmin wem p gen 1560hig cisco c en us td docs wireless access point installation guide

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: January 7, 2021 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.ci...

lang:en score:32 filesize: 9.5 M page_count: 132 document date: 2021-01-07




[\[pdf\]](#) Guide

Cisco Aironet 1560 36 Systems G K guide c07 737428 cisco c ja jp products collateral wireless aironet series |||

Cisco Aironet 1560 2017 2 2017 Cisco and/or its affiliates. All rights reserved. This document is Cisco Public Information. 1 / 10 1.

 
lang:it score:31 filesize: 607.99 K page_count: 10 document date: 2017-08-16

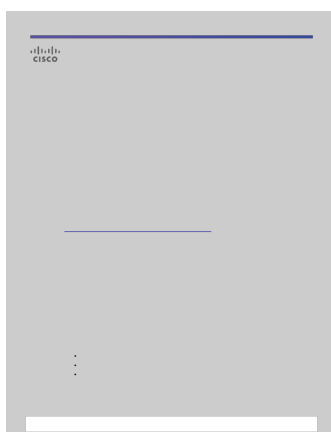

[\[pdf\]](#) Reference Guide Specifications Datasheet Guide Accessories Diagram

Cisco Aironet Antennas and Accessories Reference Guide RR501205 cisco antennas long andovercg datasheets Reference Guide Cisco Aironet Antennas and Accessories Overview Executive Overview This antenna reference guide explains issues and concerns about antennas used with a Cisco Aironet wireless LAN system or wireless bridge system. It details deployment and design, limitations and capabilities, and ba...

 lang:en score:31 filesize: 11.03 M page_count: 88 document date: 2014-04-03

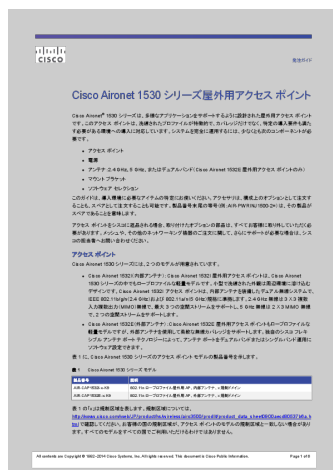


[\[pdf\]](#) Guide

Cisco Aironet 1530 series ||| Systems G K guide c07 729725 cisco c ja jp products collateral wireless aironet

Cisco Aironet 1530 Cisco Aironet 1530 2.4 GHz5 GHzCisco Aironet 1532E AIR-PWRINJ1500-2=
Cisco Aironet 1530 2 Cisco Aironet 1532ICisco Aironet 1532I Cisco Aironet 1530 Cisco Aironet
1532I IEEE 802.11b/g/n2.4 GHz 802.11a/n5 GHz2.4 GHz 3 X 3 MIMO 3 5 GHz 2 X 3...

 
lang:en score:31 filesize: 334.19 K page count: 6 document date: 2014-05-26

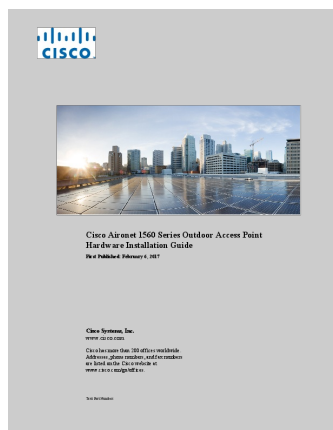

[\[pdf\]](#) User Manual Installation Guide Instructions Troubleshooting Guide Specifications Guide
Warranty

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide ctsadmin wem p gen Utilize Text Part
Number Page 2 THE SPECIFICATIONS AND INFORMATION REGARDING PRODUCTS IN THIS MANUAL ARE
SUBJECT TO 1478840 0 gluh azureedge net qbox productmanuals uses and can radiate radio frequency energy if not
installed used in accordance with the instructions may cause harmful interference to communications However there is
no guarant ee that will occur a particular installation If equipment causes interfere nce or television reception which be
1028721 rightsizetchnology this manual Cautions use following conventions Caution Means reader careful In
situation you might do something could result damage loss of data Chapter 3 Troubleshooting Provides basic
troubleshooting procedures for access point Appendix A Safety Guidelines Warnings 1716563 gluhcdn cswit
Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published:
February 6, 2017 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices
worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at
www.cisco.com/go/offices. Text Part N...

 lang:en score:30 filesize: 9.03 M page count: 124 document date: 2017-02-06

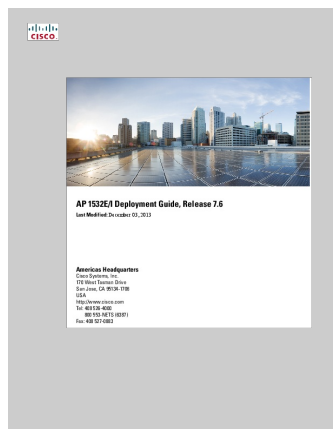


[\[pdf\]](#) User Manual Quick Start Guide Troubleshooting Guide Guide

AP 1532E I Deployment Guide Release 7 6 Unknown Utilize Cisco This introduces the newest addition to outdoor portfolio AP1532 The 1532 highlights include Ultra low profile IP42 rating against dust and moisture Trigger modes manual aut Last Modified December03 2013 Americas Headquarters Systems Inc 170 West Tasman Drive San Jose CA 95134 1706 USA 1021910 0 1478922 1033389922 2854696 2854709 gluhcdn azureedge net cswit productmanuals gluh qbox content utilize User Manual logicaltech

AP 1532E/I Deployment Guide, Release 7.6 Last Modified: December 03, 2013 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0883 2013 Cisco Systems, Inc. All rights reserved. CONTEN...

 lang:en score:30 filesize: 3.71 M page count: 30 document date: 2014-06-24

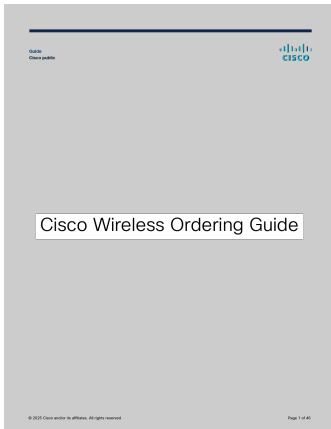


[pdf] Guide

Cisco Wireless Ordering Guide RR Donnelley 1208758 bhphotovideo lit files |||

Guide Cisco public Cisco Wireless Ordering Guide 2025 Cisco and/or its affiliates. All rights reserved. ... 547VG-NS= SIA 4 AIR-ANT2588P4M-NS= SIA 1 AIR-ANT2513P4M-NS= SIA 1 AIR-ANT2547V-N= Legacy 4 **AIR-ANT2547VG-N=** Legacy 4 AIR-ANT2450V-N= Legacy 4 AIR-ANT2480V-N= Legacy 4 AIR-ANT5180V-N=...

 lang:en **score:30** filesize: 1.94 M page_count: 46 document date: 2025-02-13

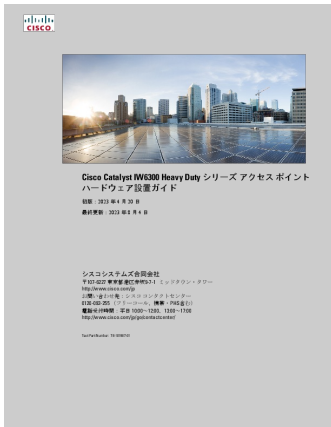

[pdf] Installation Guide Guide


Cisco Catalyst IW6300 Heavy Duty

b iw6300 hig cisco c ja jp td docs wireless outdoor industrial

hardware install guide |||

Cisco Catalyst IW6300 Heavy Duty 2023 4 20 2023 8 4 107-6227 9-7-1 <http://www.cisco.com/jp/0120-092-255> PHS 10:0012:0013:0017:00 <http://www.cisco.com/jp/go/contactcenter/> Text Part Number: 78-101987-01 1 Cisco Catalyst IW6300 Heavy Duty 1 1 2 2 3 3 4 8 9 10 10 10 ...

 lang:en **score:30** filesize: 7.12 M page_count: 135 document date: 2023-09-18

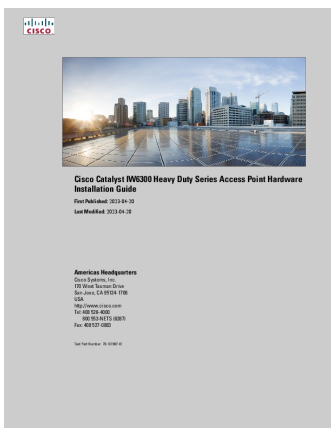


[pdf] Quick Start Guide Installation Guide Specifications Documentation Guide Declaration of Conformity

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide Unknown Apr 20 2023 — 78 101987 01 2 Getting Started and Compliance Information for the Cisco b iw6300 hig cisco c en us td docs wireless outdoor industrial hardware install guide |||

Cisco Catalyst IW6300 Heavy Duty Series Access Point Hardware Installation Guide First Published: 2023-04-20 Last Modified: 2023-04-20 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0...

 lang:en **score:30** filesize: 6.54 M page_count: 122 document date: 2023-04-20

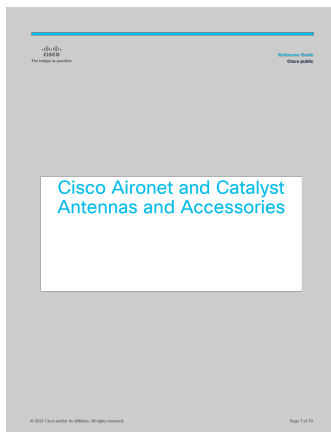


[\[pdf\]](#) Reference Guide Specifications Datasheet Guide Accessories

Cisco Aironet and Catalyst Antennas Accessories Reference Guide RR Donnelley product data sheet09186a008008883b cisco 80 en US prod collateral wireless ps7183 ps469 |||

Reference Guide Cisco public Cisco Aironet and Catalyst Antennas and Accessories 2021 Cisco and/or its affiliates. All rights reserved. Page 1 of 79 Contents Overview Types of antennas Cisco Aironet antenna descriptions Cisco Aironet cable descriptions Cisco Aironet antenna specifications Dual-...

 lang:en **score:30** filesize: 6.67 M page_count: 79 document date: 2021-12-23

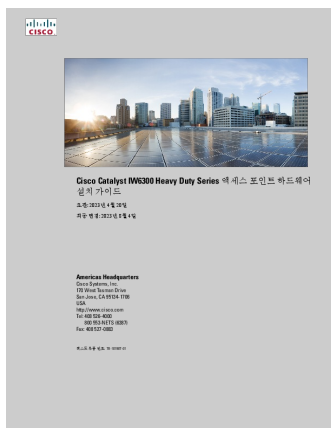

[\[pdf\]](#) Installation Guide Guide


Cisco Catalyst IW6300 Heavy Duty Series

Unknown b iw6300 hig ko KR cisco c dam en us td docs

wireless outdoor industrial hardware install guide Localization |||

Cisco Catalyst IW6300 Heavy Duty Series : 2023 4 20 : 2023 8 4 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0883 : 78-101987-01 1 Cisco Catalyst IW6300 Heavy Duty Ser...

 lang:es **score:30** filesize: 6.7 M page_count: 126 document date: 2023-09-19

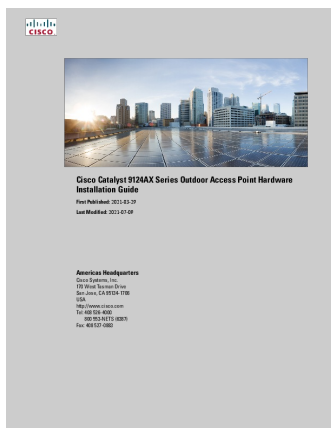


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide Unknown Manufacturer Manual C9124AXEE wireless access point 5380 Mbit/s White Power over mmo 93874321 1708965226 0692 17944 assets media quzo co uk 2024 11 29 |||

Cisco Catalyst 9124AX Series Outdoor Access Point Hardware Installation Guide First Published: 2021-03-29 Last Modified: 2021-07-09 Americas Headquarters Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com> Tel: 408 526-4000 800 553-NETS 6387 Fax: 408 527-0883...

 
lang:en **score:30** filesize: 29.87 M page_count: 118 document date: 2021-11-18

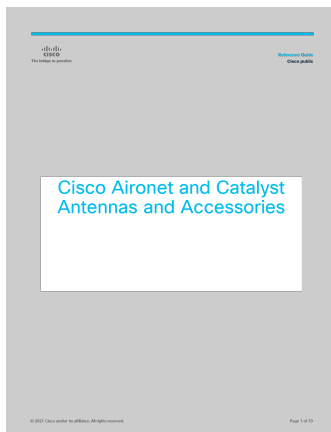

[\[pdf\]](#) Reference Guide Specifications Datasheet Guide Accessories

Cisco Aironet and Catalyst Antennas Accessories Reference Guide RR Donnelley product data sheet09186a008008883b cisco c en us products collateral wireless aironet antennas accessories ||| Reference Guide Cisco public Cisco Aironet and Catalyst Antennas and Accessories 2021 Cisco and/or its affiliates. All rights reserved. Page 1 of 79 Contents Overview Types of antennas Cisco Aironet antenna descriptions Cisco Aironet cable descriptions Cisco Aironet antenna specifications Dual...

 
lang:en score:29 filesize: 6.71 M page_count: 79 document date: 2021-07-19

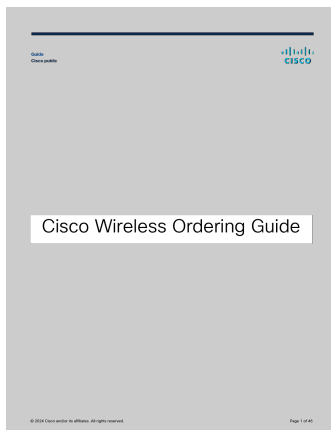

[\[pdf\]](#) Guide

Cisco Wireless Ordering Guide RR Donnelley 1083574911 assets grandandtoy Additional 1 10 83 ||| Guide Cisco public Cisco Wireless Ordering Guide 2024 Cisco and/or its affiliates. All rights reserved. ... 547VG-NS= SIA 4 AIR-ANT2588P4M-NS= SIA 1 AIR-ANT2513P4M-NS= SIA 1 AIR-ANT2547V-N= Legacy 4 **AIR-ANT2547VG-N=** Legacy 4 AIR-ANT2450V-N= Legacy 4 AIR-ANT2480V-N= Legacy 4 AIR-ANT5180V-N=...

 
lang:en score:29 filesize: 1.93 M page_count: 46 document date: 2024-12-03

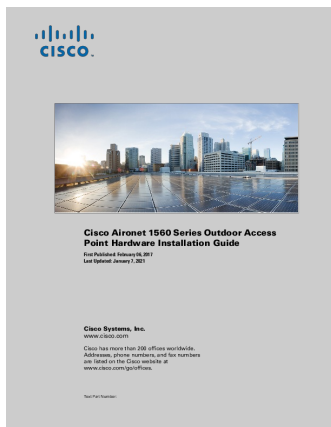

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty Borchure

Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide ctsadmin wem p gen Click here for User ManualCisco 1562I Dual Band IEEE 802.11ac 1.30 Gbit/s Wireless AIR-AP1562I-L-K9 FireOwl Corporation Manufacturer Brochure1068714349content etilize Manual 1068714349 ManualClick C BrochureCisco Brochure1068715279content 1068715279content T Brochure10687152791068714379content 1068714379content G Brochure106871439010687152791068714379content 1068714390content ||| ||| Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: January 7, 2021 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone number ||| Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: January 7, 2021 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone number ||| Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: January 7, 2021 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone number Cisco Aironet 1560 Series Outdoor Access Point Hardware Installation Guide First Published: February 06, 2017 Last Updated: January 7, 2021 Cisco Systems, Inc. www.cisco.com Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.ci...

 lang:en score:29 filesize: 9.5 M page_count: 132 document date: 2021-01-07

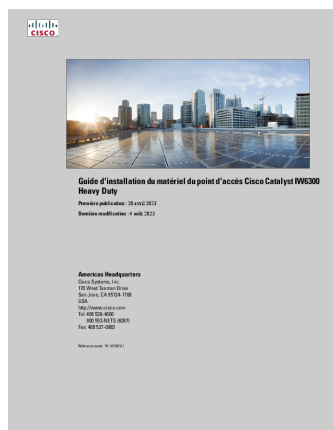

[pdf] Installation Guide Documentation Guide

Guide d'installation du matériel point accès Cisco Catalyst IW6300 Heavy Duty Unknown b iw6300 hig fr FR cisco c
dam en us td docs wireless outdoor industrial hardware install guide Localization |||

Guide d'installation du matériel du point d'accès Cisco Catalyst IW6300 Heavy Duty Première
publication : 20 avril 2023 Dernière modification : 4 août 2023 Americas Headquarters Cisco
Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA <http://www.cisco.com>
Tel: 408 526-4000 800 553-NETS 6387...

lang:fr **score:29** filesize: 6.58 M page_count: 128 document date: 2023-09-19




[pdf] Guide

Cisco Industrial Wireless 3700 Series Access Points Ordering Guide Reiner OG IW3702 4E UXK9 WIFI точка доступа
с внешними антеннами 2 4 GHz 5 802 11ас купить ВТК СВЯЗЬ vktk ru upload iblock f2d |||

Ordering Guide Cisco Industrial Wireless 3700 Series Access Points Ordering Guide March
2017 2017 ... dustrial Wireless 3700 Series Access Points Part Number AIR-ANT2547V-N=
Frequency Band 2.4/5 GHz **AIR-ANT2547VG-N=** 2.4/5 GHz AIR-ANT2524V4C-R= 2.4/5 GHz
AIR-ANT2544V4M-R= 2.4/5 GHz AIR-ANT2524Dx-...

 lang:en **score:29** filesize: 581.49 K page_count: 11 document date: 2017-03-09

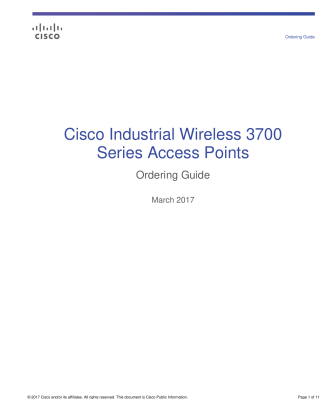


[pdf] Guide

Cisco Industrial Wireless 3700 Series Access Points Ordering Guide Reiner OG IW3702 2E UXK9 WIFI точка доступа
с внешними антеннами 2 4 GHz 5 802 11ас купить ВТК СВЯЗЬ Cisco OGvktk ru upload iblock 8f1 OG |||

Ordering Guide Cisco Industrial Wireless 3700 Series Access Points Ordering Guide March
2017 201 ... dustrial Wireless 3700 Series Access Points Part Number AIR-ANT2547V-N=
Frequency Band 2.4/5 GHz **AIR-ANT2547VG-N=** 2.4/5 GHz AIR-ANT2524V4C-R= 2.4/5 GHz
AIR-ANT2544V4M-R= 2.4/5 GHz AIR-ANT2524Dx-...

 lang:en **score:29** filesize: 581.49 K page_count: 11 document date: 2017-03-09

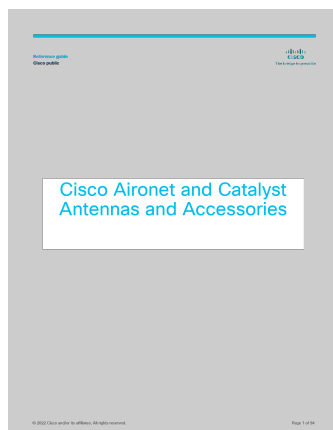

[\[pdf\]](#) Reference Guide Specifications Guide Accessories

Cisco Aironet and Catalyst Antennas Accessories Reference Guide RR Donnelley AIR CAB100ULL R eng tds media distrelec Web Downloads t ds |||

Reference guide Cisco public D Cisco Aironet and Catalyst Antennas and Accessories 2022

Cisco and/or its affiliates. All rights reserved. Page 1 of 94 Contents Overview Types of antennas Cisco Aironet antenna descriptions Cisco Aironet cable descriptions Cisco Aironet antenna specifications Dua...

lang:en **score:29** filesize: 8.41 M page_count: 94 document date: 2022-11-28